


Confidential



MFP Katusha M130

SERVICE MANUAL

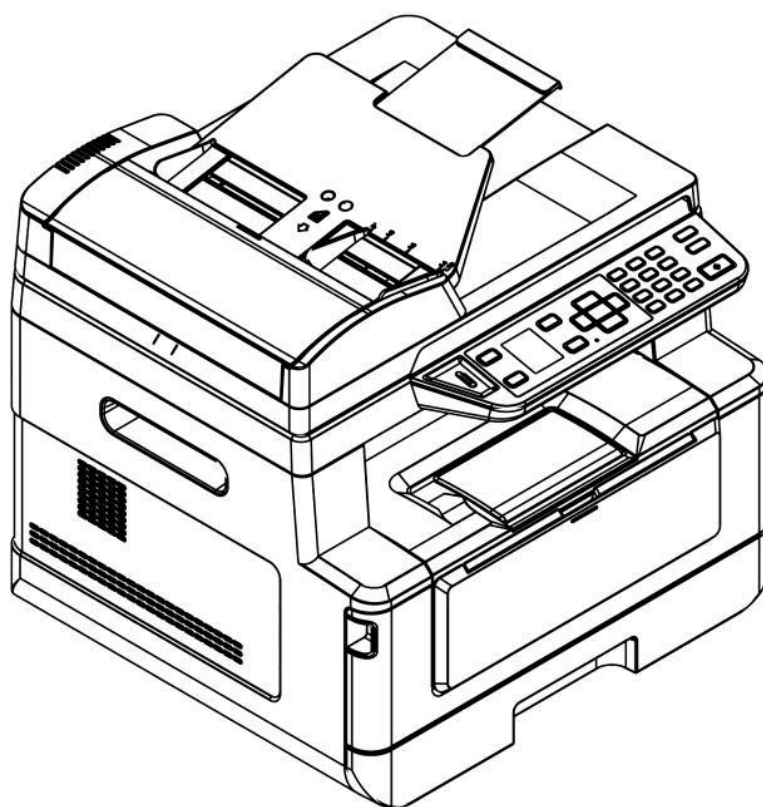


FIELD SERVICE MANUAL

Chapter 1. Product Structure and Printing Material	4
1. Product Overview	4
2. Product Structure	6
3. Product Components	6
4. Media	11
5. Paper not recommended	11
Chapter 2. Care and Maintenance	12
1. Notice before Maintenance	12
2. Preparation before replacement	13
3. Regular Cleaning	14
3-1. Cleaning the Inside of the Printer	14
3-2. Cleaning the Charger Wire	14
3-3. Cleaning the Separation Pad in the Paper Tray	15
3-4. Cleaning the Pick up Roller	16
3-5. Cleaning the ADF Pad	16
3-6. Cleaning the ADF Pick up Roller	17
3-7. Cleaning the Glass	17
4. Loading Paper into the Main Tray	18
4-1. Loading Paper into the Main Tray	18
4-2. Loading Paper into the Manual Tray	19
Chapter 3. Error Message and Troubleshooting	21
1. Preparation	21
2. Troubleshooting of Image Problems	23
2-1. Image Problems	24
2-2. Troubleshooting of Image Detects	24
2-3. Electrode on the device	31
2-4. Electrode on the Drum Unit	31
3. Troubleshooting	32
3-1. Error Causes and Solutions	32
3-2. Paper Feeding Problem	66
3-3. Clear Paperjams	67
Chapter 4. Disassembling and Reassembling	69
1. Security measures	69
2. Preparation Before Disassembling	70
3. Disassembling and Reassembling	71
3-1. Basic Disassembling	71
3-1-1. Paper Tray	71
3-1-2. Duplex Unit	71
3-1-3. EP_SEPARATION-LSU	72
3-1-4. Front Cover	73
3-1-5. COVER_LEFT	74


3-1-6. ASSY_HOUSING_RIGHT.....	75
3-1-7. ASSY_REAR_PATH	76
3-1-8. ASSY_FUSER_PATH	76
3-1-9. ADF_FB Scanner	77
3-1-10. ASSY_ID_UPPEER.....	78
3-2. Advanced Disassembling	79
3-2-1. FUSER_UNIT.....	79
3-2-2. CONTROL_PANEL.....	81
3-2-3. IFA98 Board.....	82
3-2-4. IFA99 Board.....	83
3-2-5. MBA (Main Board)	84
3-2-6. High Voltage Board (HV).....	85
3-2-7. Exit Path.....	86
3-2-8. Registration Sensor	86
3-2-9. Deskew Sensor	87
3-2-10. Paper-in Sensor	87
3-2-11. Manual Paper-In Sensor	88
3-2-12. Duplex Sensor	89
3-2-13. Paper Empty Sensor	91
3-2-14. Main Motor.....	92
3-2-15. Exit Motor	92
3-2-16. Main Fan	93
3-2-17. Pick up Clutch.....	93
3-2-18. Manual Pick-up Clutch.....	94
3-2-19. Deskew Pick-up Clutch.....	94
3-2-20. ASSY_PAD	95
3-2-21. LSU (Laser Scanning Unit)	96
3-2-22. Check LAN Connecion	97
Chapter 5. Adjustment and Reset Settings after Replacement.....	98
1. Replacement of Main Board	98
1-1. Adjustment after Replacement.....	98
1-2. Preparation.....	98
2. Replacement of High Voltage Board	98
2-1. Adjustment after Replacement:.....	98
2-2.Preparation	98

Chapter 1. Product Structure and Printing Material

1. Product Overview

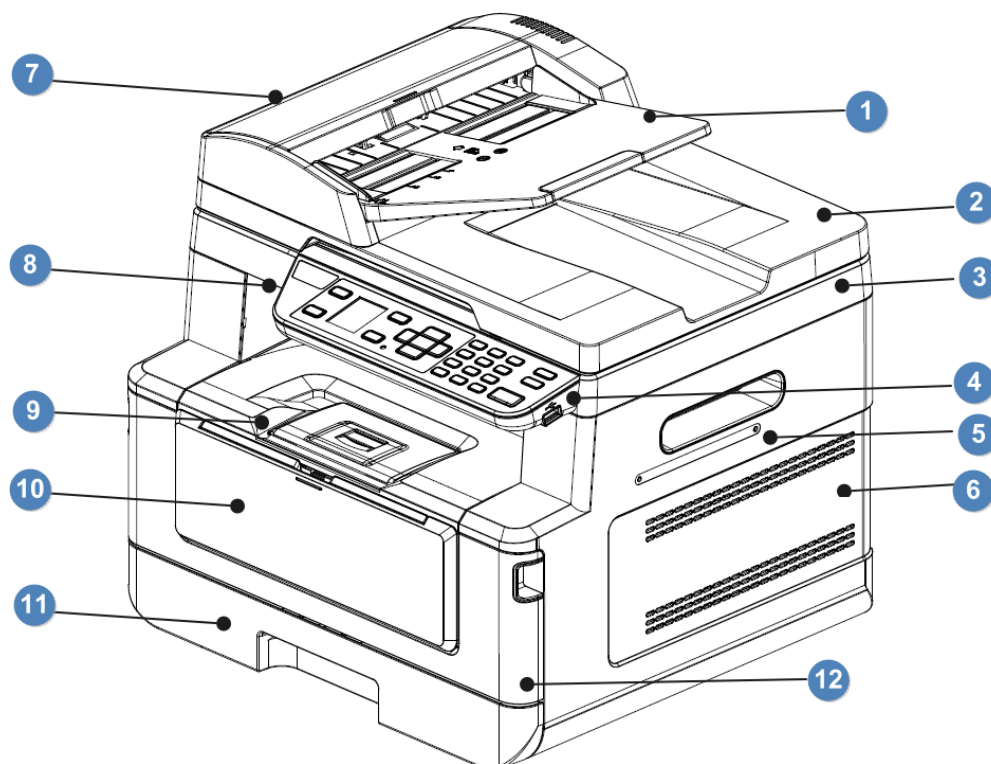

1	ASSY_INPUT_TRAY_ADF	7	ASSY_COVER_UPPER-ADF
2	ASSY_ADF	8	ASSY_CONTROL_PANEL
3	ASSY_FB	9	TRAY_EXTEND_OUT_PUT_STOP
4	FLASH DRIVE(USB)	10	ASSY_MPT_TRAY
5	OPTION*	11	ASSY_CASSETTE
6	ASSY_HOUSING_RIGHT	12	COVER_FRONT

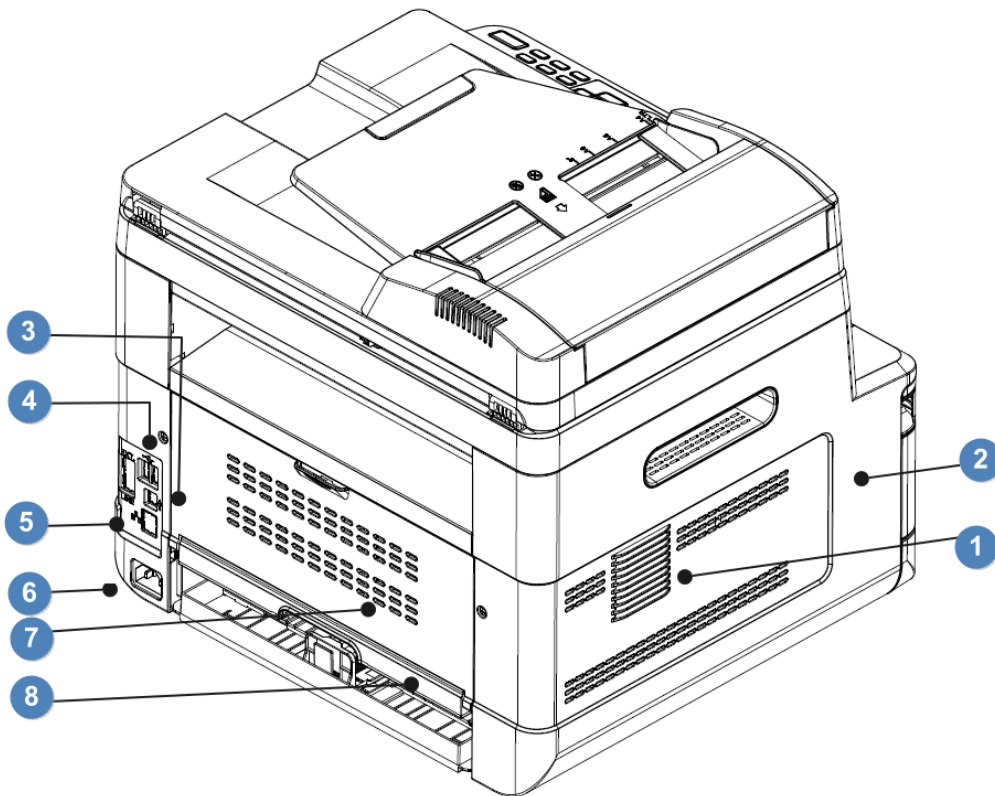

1	VENTS*	5	NETWORK
2	COVER_LEFT	6	POWER
3	USB TO PC	7	ASSY_REAR_PATH
4	USB HOST	8	ASSY_DUPLEX_MODULE

2. Product Structure

The pickup and feed System consists of several rollers that transport paper through the input trays, registration rollers, drum unit, fuser, and paper exit. The input trays include Main Tray, and Manual Tray. These rollers (including the drum unit, fuser, feeding, pickup, reverse, de-skew, and duplex rollers, etc.) are driven by the stepping motors or DC main motor, as shown in Figure 1-1.

Let's assume the lift-up operation has been performed (Refer to Paper Pickup Mechanism). After a print command is received, the main board sends a signal to the pickup motor. And then the pickup clutch is turned on, and transfers the driving force from the pickup motor to the pickup roller.

The transportation of a paper from an input tray begins at picking up a sheet of paper from the tray where the Paper Size, Paper Lift-up, and Paper-Empty sensors are used to detect the paper picking process.

Before the paper is then transported to the registration rollers, the de-skew clutch turns on to correct any paper skewing by adjusting power to the de-skew roller. The registration rollers continue to drive the paper into EP where the image is transferred from the drum to the paper by attaching magnetic toner particles onto the paper.

At this point the EP moves the paper to the fuser until the fuser firmly receives the paper detected by the Fuser sensor. In the fuser, the toner is heated and melts down to the paper to fabricate the permanent image that is based on the original. The fuser is now in charge of sending the paper after the fusing process.

The fuser eventually transports the paper to its final destination, Output Tray, or back to the duplex unit after the Fuser Out and Paper Exit sensors detect the final coated paper.

The following figure illustrates the path of paper in the duplex printing unit: (The path of single-sided printing is indicated by dotted lines. The path of double-sided printing is indicated by solid lines.)


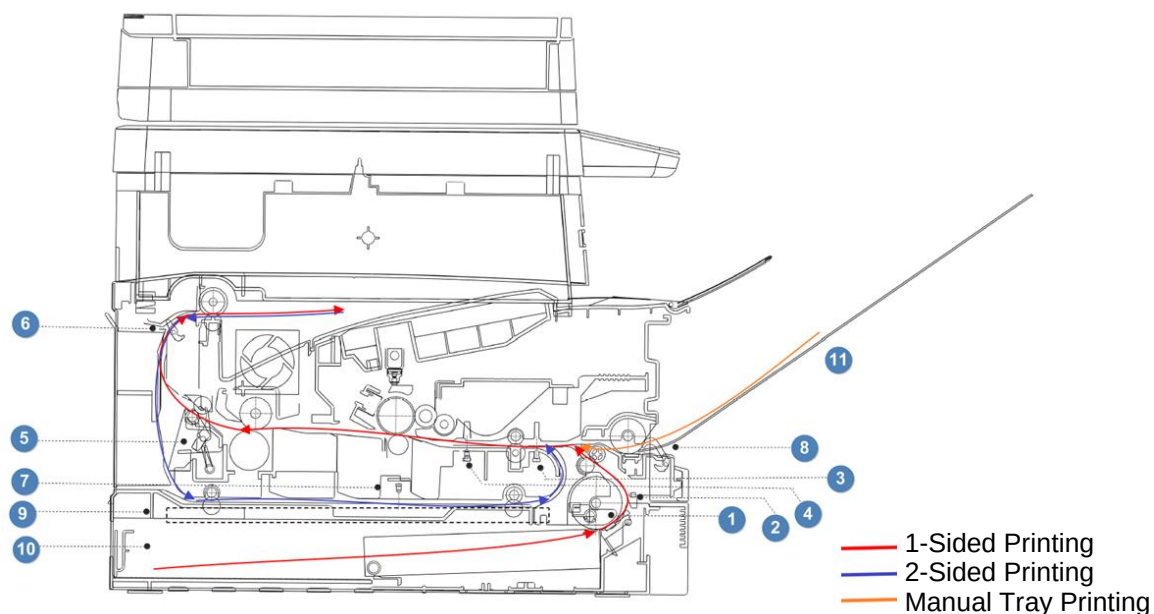



Fig. 1-1 Printing Path

1	PAPER EMPTY SENSOR	7	DUPLES SENSOR
2	PAPER IN SENSOR	8	MANUAL PAPER IN SENSOR
3	DESKEW SENSOR	9	DUPLEX MODULE
4	REGISTRATION SENSOR	10	MAIN TRAY
5	FUSER OUT SENSOR	11	MANUAL TRAY
6	EXIT SENSOR		


3. Product Components

■ Location of PCBA


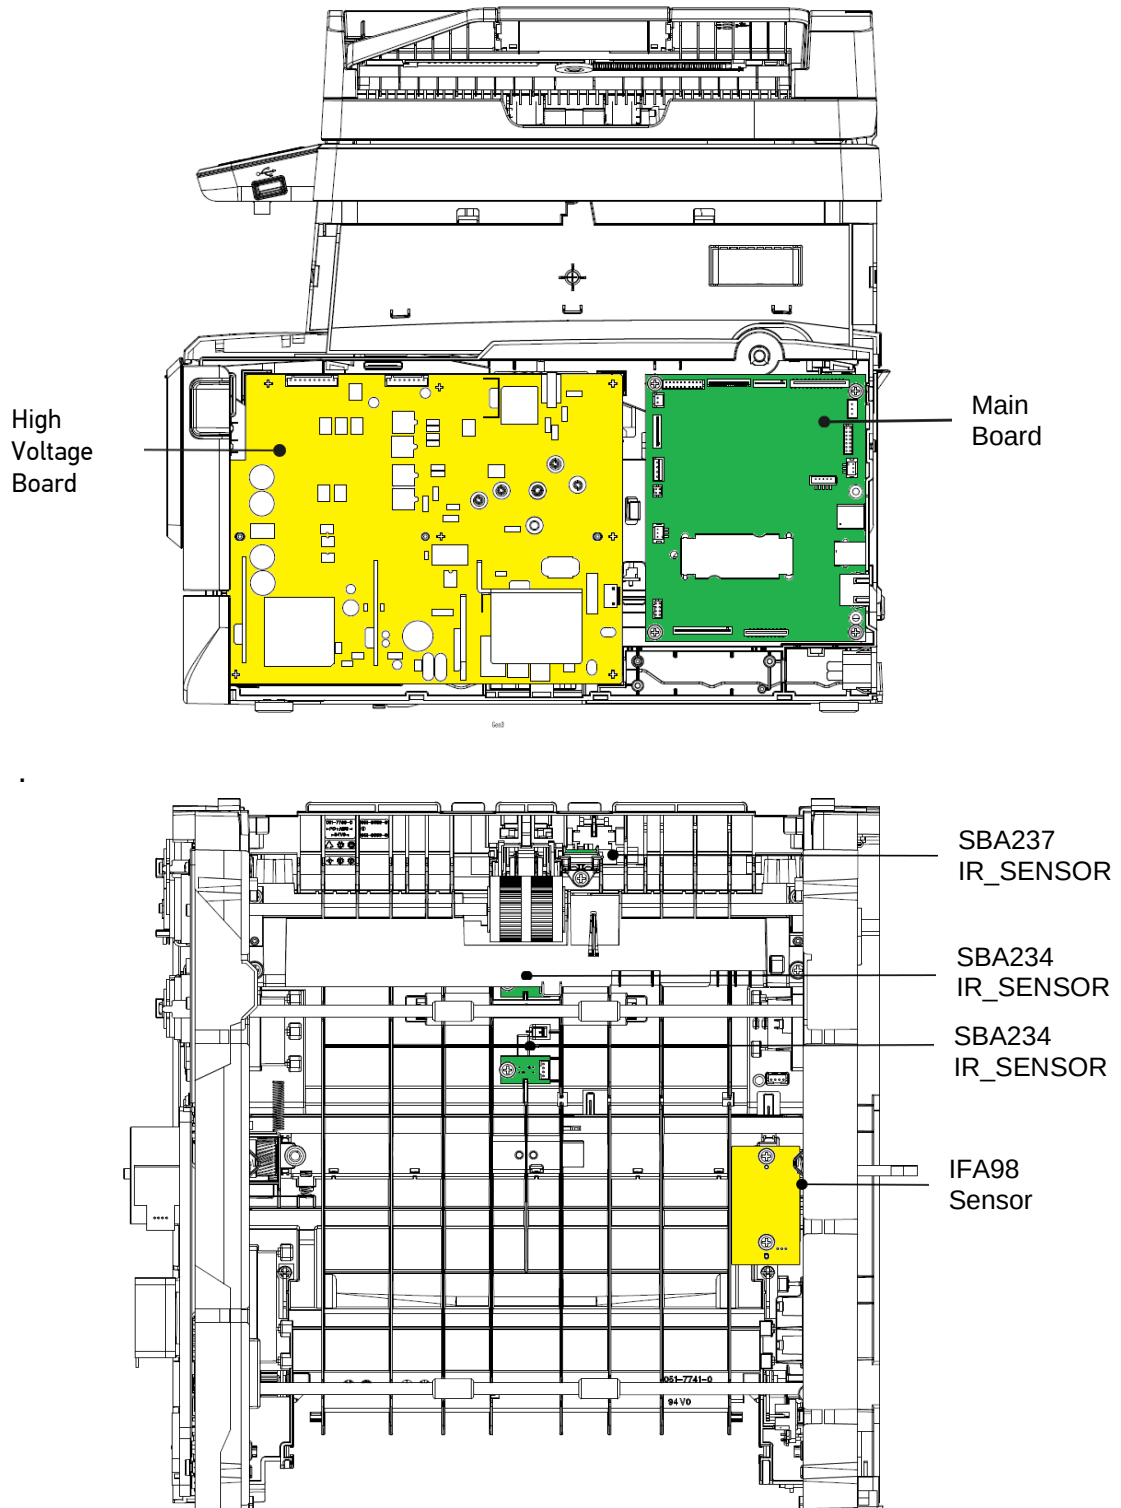


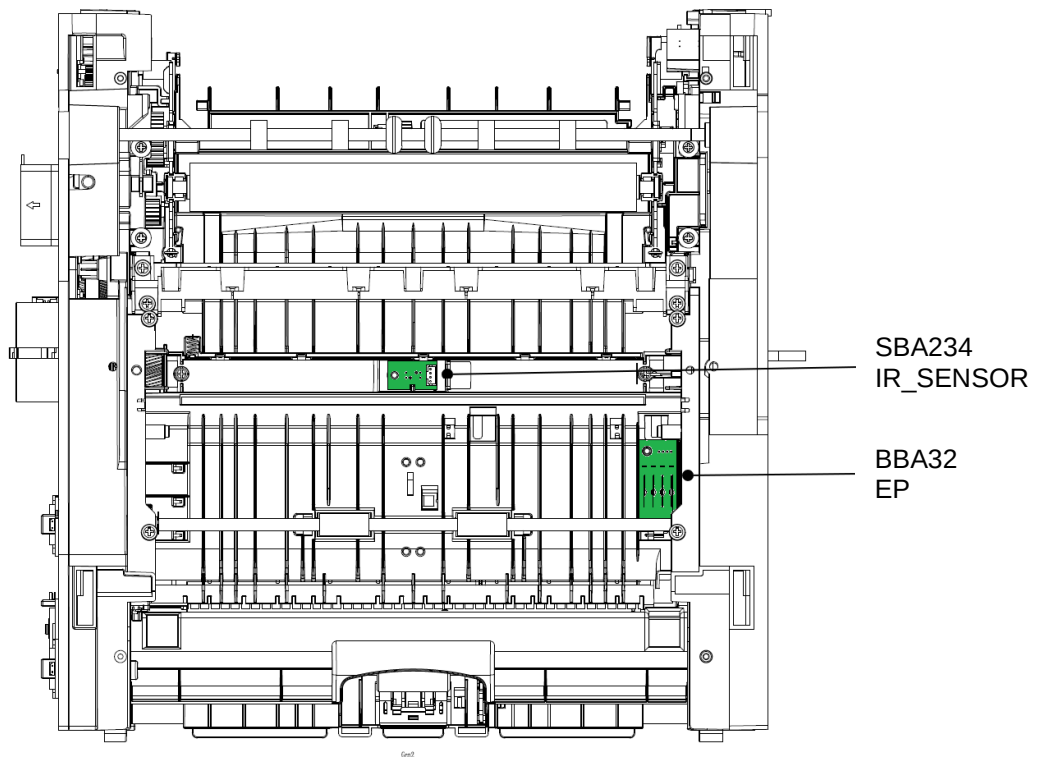



■ Location of Motor and Clutch

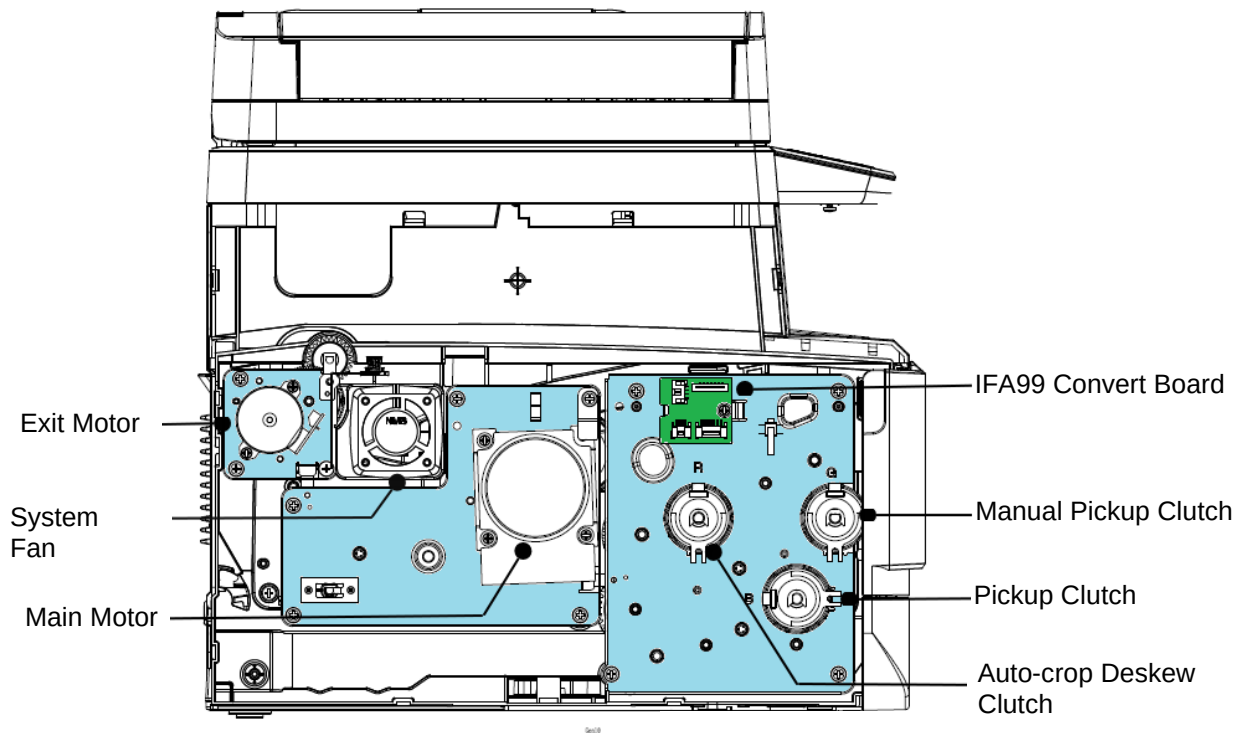


■ Locations of Sensors

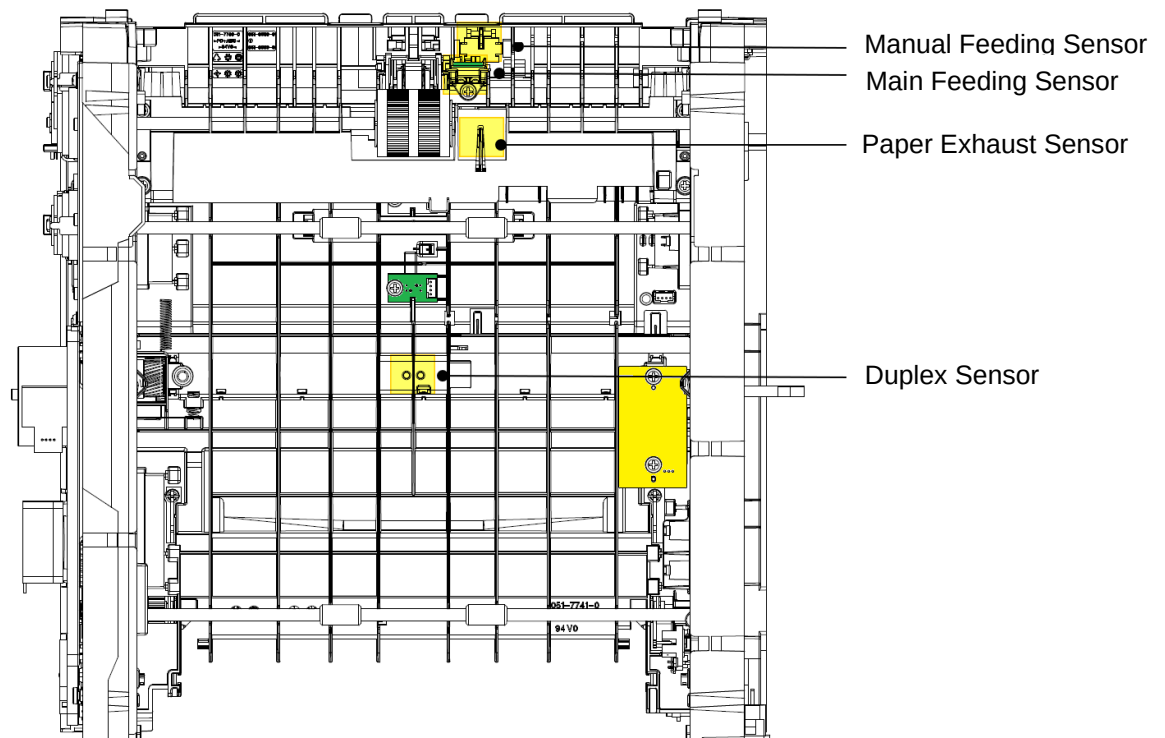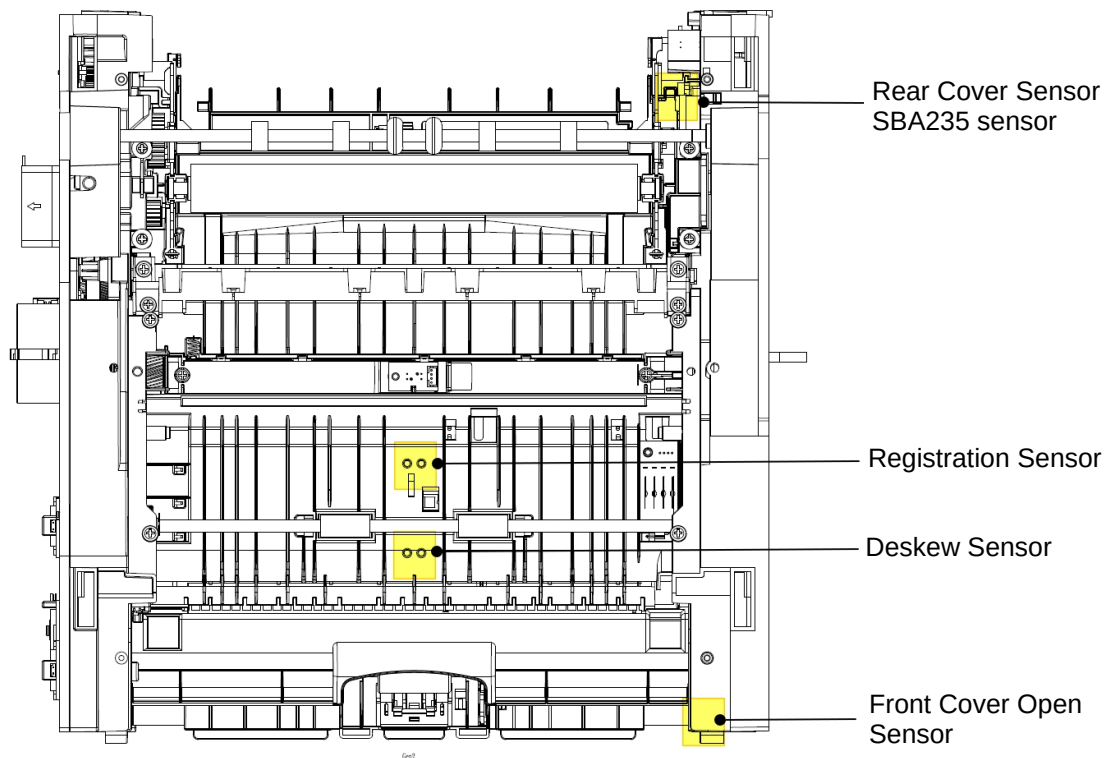

■ Drum Unit

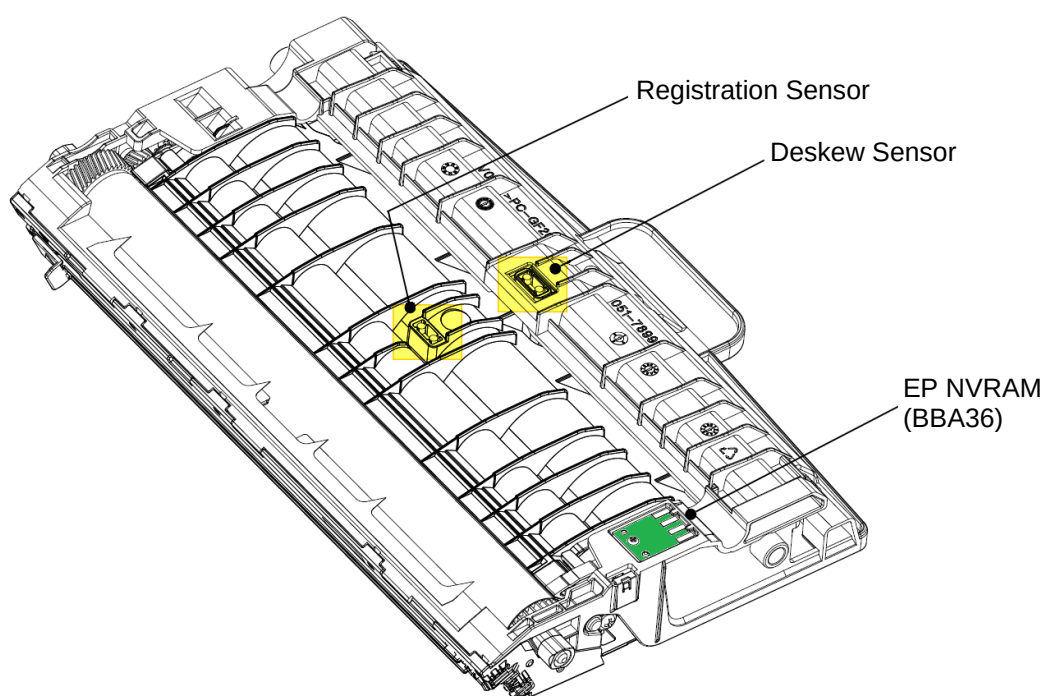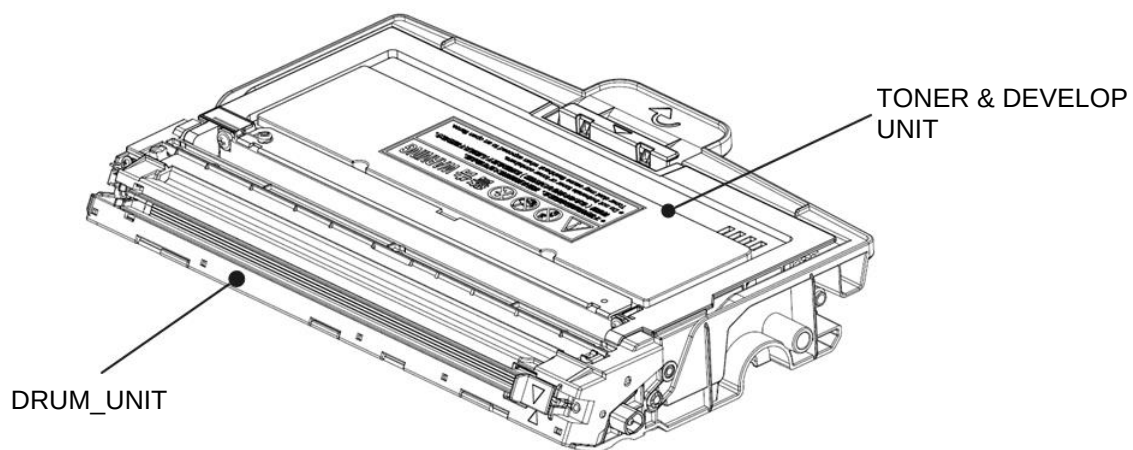

■ Fuser

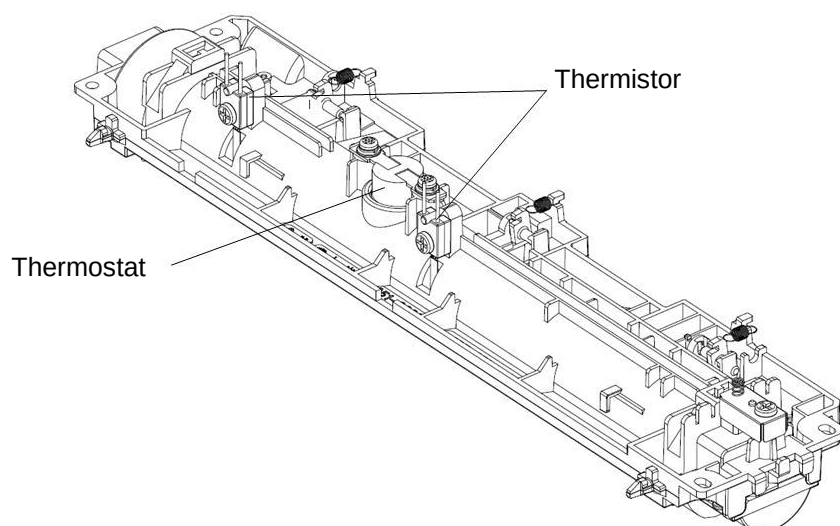

4. Media

Paper Weight Supported:

- 1) Main Tray: 60g/m² - 105g/m²;
- 2) Manual Tray: 60g/m² - 163g/m²;
- 3) Duplex: 60g/m² - 105g/m².

Tray Capacity:

- 1) Main Tray: 250 sheets (70g/m²);
- 2) Manual Tray: 10 sheets (70g/m²).

5. Paper not recommended

- Paper for Inkjet Printer
- Viscous ink special paper
- Bent, folded, or creased paper
- Curled or twisted paper
- Wrinkled paper
- Wet paper
- Dirty or torn paper
- Excessively dry paper that is prone to static electricity
- Printed paper, except paper with letterhead design
- Special paper, such as thermal paper and carbon paper
- Paper weight is heavier or lighter than the specified weight
- Paper with holes, perforations, patterns or bumps
- Paper with adhesive label
- Paper with paper clips or staples
- Envelope

Important:

- Printing with improperly stored paper can also cause paper jams, deterioration of print quality, or malfunctions.
- If you use any of the above types of paper, it may damage the equipment.

Chapter 2. Care and Maintenance

1. Notice before Maintenance

In order to avoid secondary malfunction due to incorrect operation, the following warnings and precautions must be observed during the disassembly and reassembling of the equipment.

Warning

After using the equipment for a while, the temperature of some parts inside the equipment is very high! When opening the side door or the rear cover to repair parts inside the device, do not touch the parts shown in the high temperature mark.

- Be careful not to lose the removed screws, washers and other parts.
- Be sure to apply grease to the parts specified in this chapter.
- When using an electric soldering iron or other heating tools, please be careful not to damage the wires, circuit boards, casings and other components made of synthetic resin.
- The static electricity charged by the human body may damage electronic components. Therefore, when transporting the circuit board, be sure to wrap the circuit board with conductive foil.
- When replacing circuit boards and all other parts with circuit boards, please wear a wrist strap for discharging static electricity and operate on an anti-static mat. In addition, please be careful not to touch the flat cable and the electrode conductor part of the wire.
- After unplugging the flat cable, be sure to check that the flat cable plug is in good condition and that the flat cable is not short-circuited.
- When inserting the flat cable, be sure to insert it straight, and check that the cable is not crooked after inserting it.
- When connecting or disconnecting the patch cord, do not hold the cable part but the connector part. If there is a lock on the connector, be sure to unlock the lock first.
- After repairing, please pay attention not only to check the repaired part, but also to check the connection of the patch cord. In addition, you need to check if other related parts are working properly.
- Do not close the front cover forcibly before installing the toner cartridge and drum unit, otherwise the machine may be damaged.
- After installation, it is recommended to conduct an insulation withstand voltage test and a conductivity test.
- Be careful not to damage the insulating sheet.
- When replacing the circuit board, be sure to check if there is any foreign matter on the component surface and soldering surface of the circuit board.

2. Preparation before replacement

Disconnect power and remove key parts


Before performing replacement, do the following preparation:

1) Disconnect the following cables:

- USB cable (if connected)
- LAN cable (if connected)
- POWER cable (if connected)

2) Remove the following parts:

- Paper Tray
- Toner Cartridge and Drum Unit
- Duplex Unit

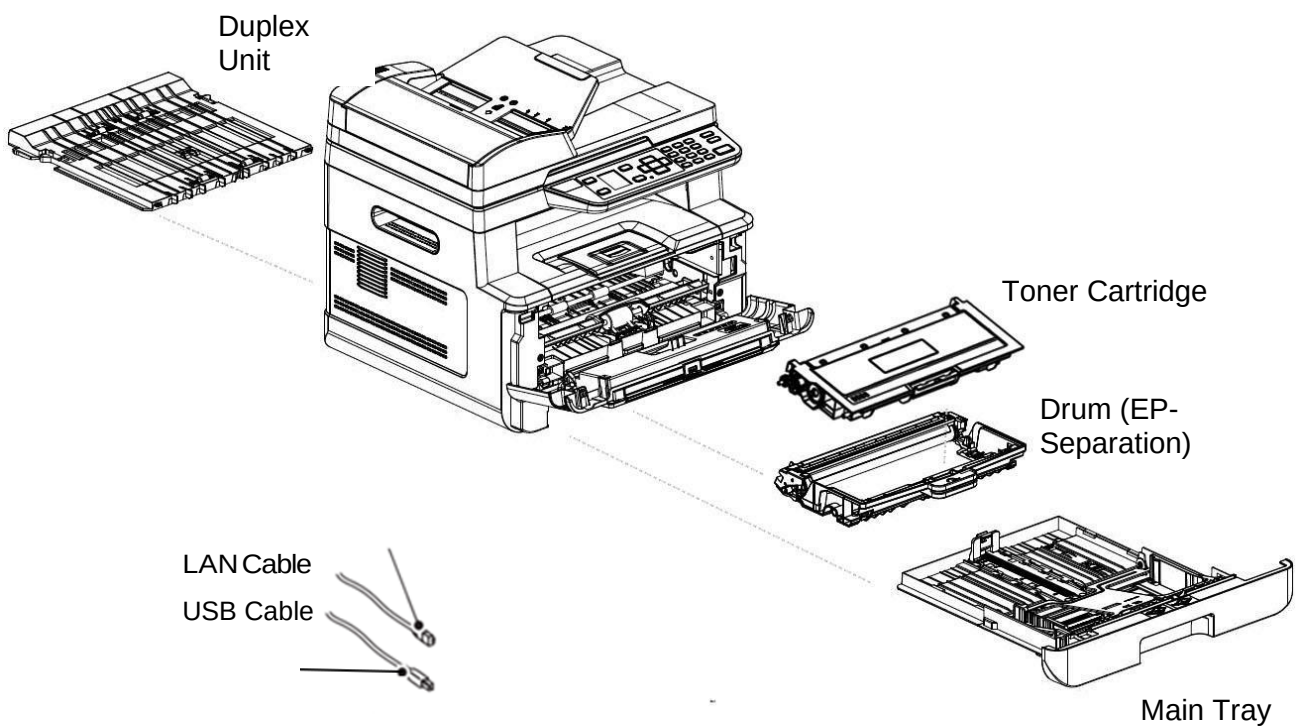

3. Regular Cleaning

Use a dry, lint-free cloth to clean the inside and outside of the printer regularly. When replacing the toner cartridge or drum unit, be sure to clean the inside of the printer. If the printed page is stained with toner, use a dry, lint-free cloth to clean the inside of the printer.

Important :

The basic cleaning of the drum unit and printer can be done by the users. Yet, the cleaning for the electronic parts inside the printer should be performed by the maintenance personnel. Inform the users do not touch these electrodes.

3-1. Cleaning the Inside of the Printer

Follow the steps in below to clean the inside of the printer:


Turn off the printer, and unplug the power cable from the power outlet.

- 1) Open the front cover of the printer.
- 2) Remove the drum unit and toner cartridge assembly.
- 3) Wipe the laser scanner window with a dry lint-free cloth.
- 4) Install the toner cartridge/toner cartridge assembly back into the printer.
- 5) Close the front cover of the printer.
- 6) Plug the power cable to the power outlet, and then turn on the printer.

3-2. Cleaning the Charger Wire


If you encounter the printing quality issues, please follow the steps in below to clean the corona wire.

- 1) Turn off the power and unplug the power cord.
- 2) Open the front cover of the printer.
- 3) Lift up the handle of the toner cartridge assembly, and pull out the toner cartridge assembly.

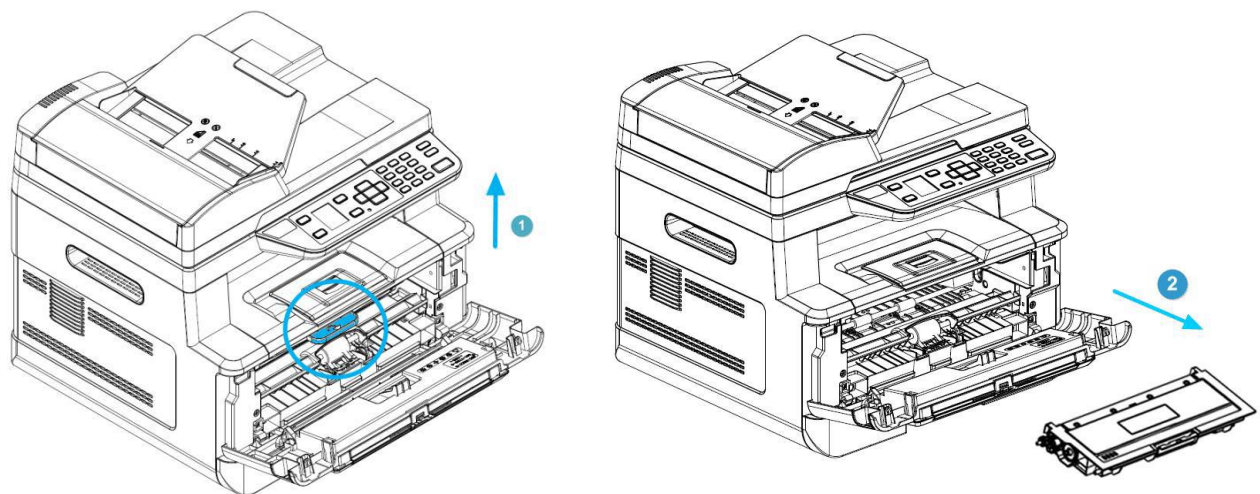

- 4) Clean the corona wire inside the drum unit by gently sliding the tab from left to right and right to left for several times. (After the toner cartridge has been used for a period of time, some amounts of toner may remain on the corona wire.)

Be sure to return the tab to the Home position (▲). The arrow on the tab must be aligned with the arrow on the drum unit. If it is not, printed pages may have a vertical stripe.

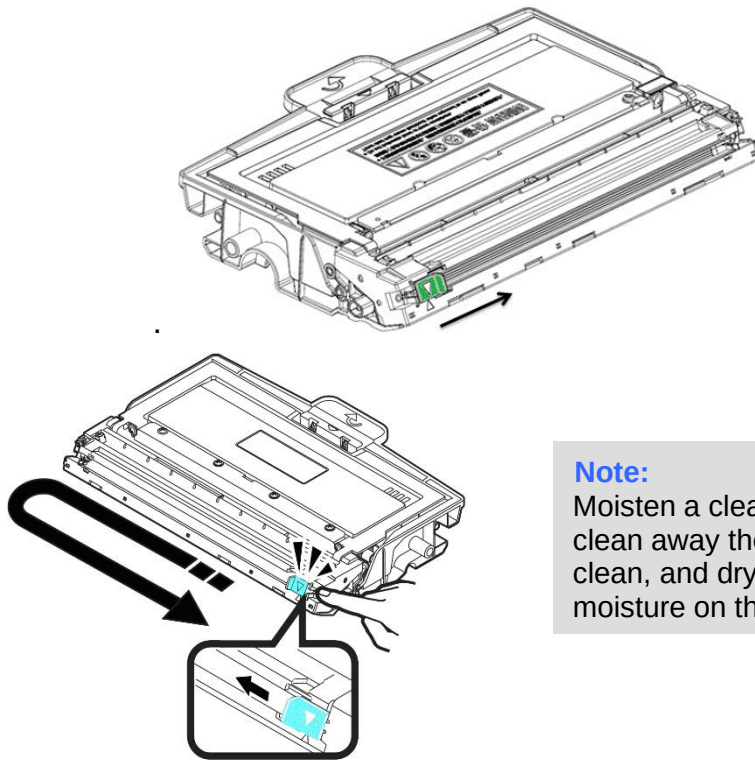

Note:

Moisten a clean, soft cloth with 95% alcohol to clean away the dirt on the surface, and then use a clean, and dry the cloth to clear away the residual moisture on the surface.

5) Install the toner cartridge back to the printer.

6) Close the front cover.

Note:


- The lifetime of the drum unit and toner cartridge depends on the amount of the print job. The lifetime is tested based on the "ISO/IEC 19752" paper. The frequency to replace the drum unit and toner cartridge varies according to the printed page, print coverage, and paper type used.
- Unless the toner cartridge has been replaced before end of lifetime, printing can not be continued. It is recommended to purchase the extra toner cartridge before the lifetime ends.
- The actual number of printable pages varies depending on the document contents, the number of pages to be printed at a time, the type and size of paper, and environmental conditions (such as temperature and humidity).
- Due to the deterioration of the quality of the toner cartridge with the extension of use time, it may need to be replaced before the relevant instructions appear.

3-3. Cleaning the Separation Pad in the Paper Tray

1) Remove paper in the Paper Tray.

2) Moisten a cotton swab with isopropyl alcohol (95%).

3) Clean the rubber part of the pad.

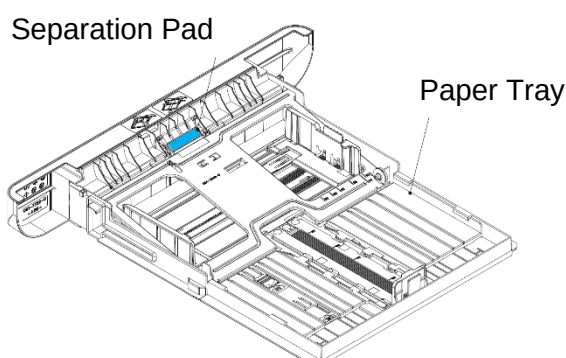


Note :

After cleaning the smeared Pad, dry it completely.


3-4. Cleaning the Pick up Roller

- 1) Remove the paper tray, and the drum unit and let the device stand on its side to reveal the bottom as indicated.
- 2) Moisten a cotton swab with isopropyl alcohol (95%).
- 3) Clean the rubber part of the roller.

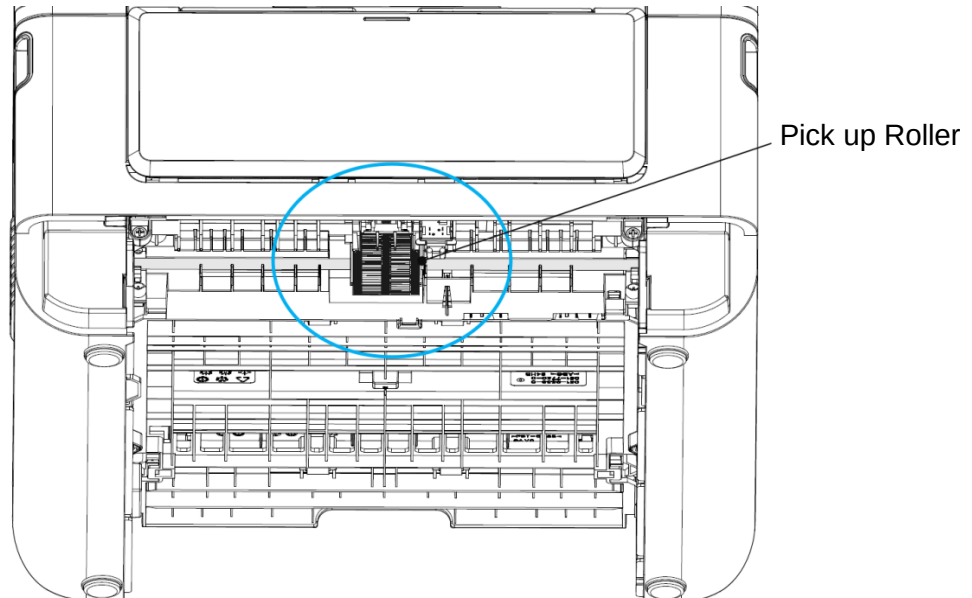


3-5. Cleaning the ADF Pad

- 1) Open the ADF Upper Cover.
- 2) Moisten a cotton swab with isopropyl alcohol (95%).
- 3) Clean the rubber part of the roller.

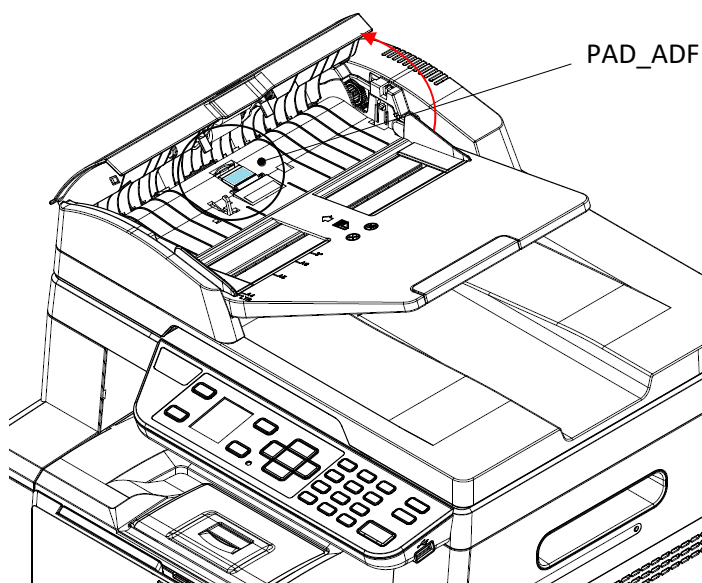


3-6. Cleaning the ADF Pick up Roller

- 1) Open the ADF Upper Cover.
- 2) Moisten a cotton swab with isopropyl alcohol (95%).
- 3) Clean the rubber part of the roller.

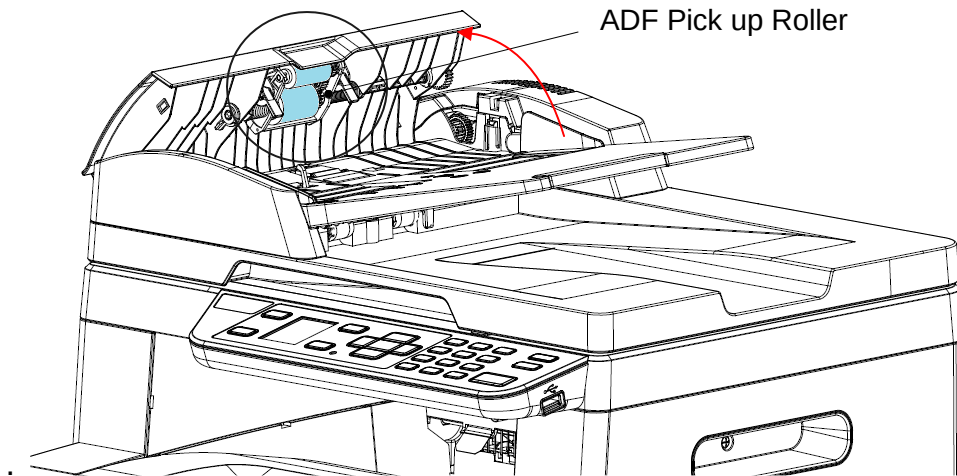

3-7. Cleaning the Glass

- 1) Open the Document Cover.
- 2) Moisten a cotton swab with isopropyl alcohol (95%).
- 3) Wipe the glass.

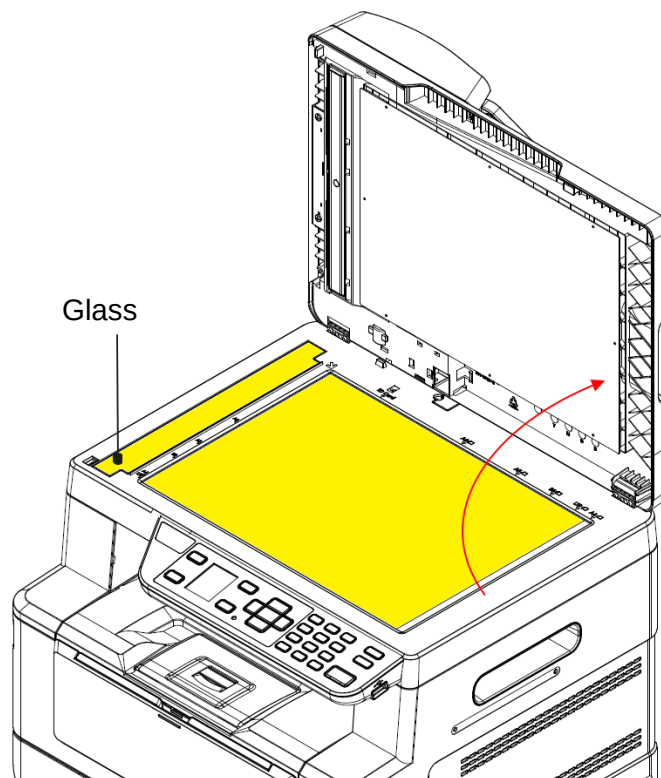


4. Loading Paper into the Main Tray



4-1. Loading Paper into the Main Tray

To insert paper to the main paper tray:


- 1) Fan your paper first to ensure that the pages do not stick together.

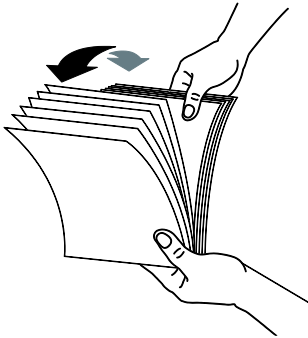


- 2) Align the edges of the documents by tapping the bottom of the stack against the table top. Rotate the stack 90 degrees and repeat.

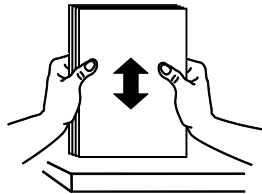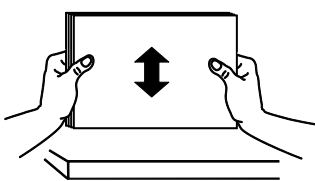


- 3) Lift the handle of the main paper tray and then pull out the main tray.

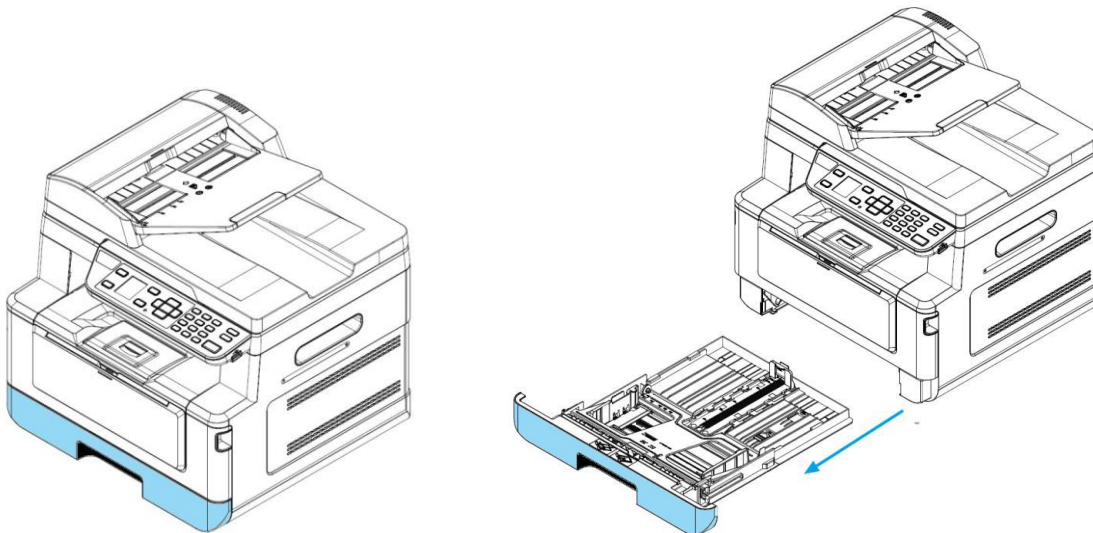


- 4) Push the width guide tab (①), and move the width guide (②) to the correct position for the paper size being loaded.

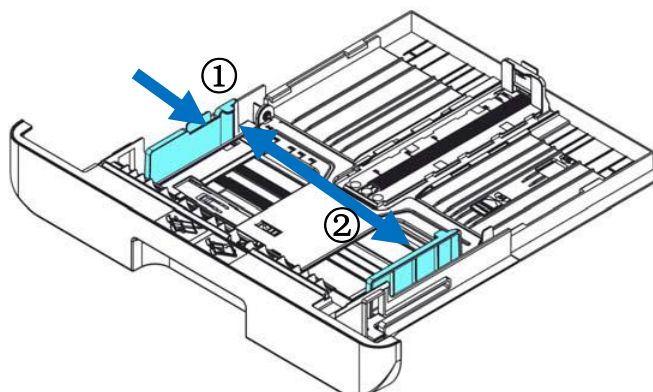

5) Push the length guide (③), and slide the guide (④) to the correct position for the paper size being loaded.

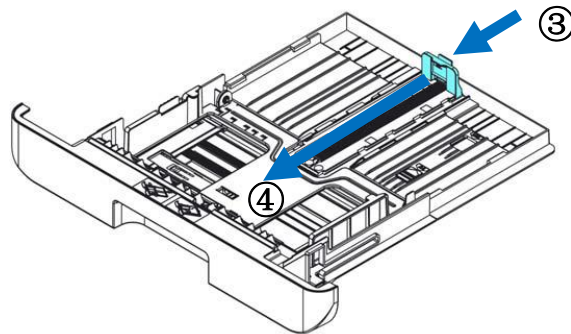

6) Load the paper stack with the **Printing Side Facing Down** as illustrated.

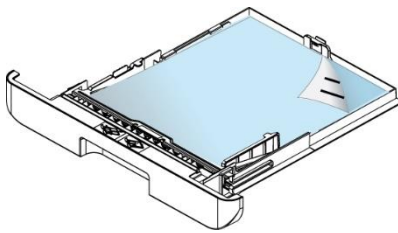


7) Insert the tray to the printer.

Note:


- To ensure the best quality printing and copying, please use the paper or media which we have recommended.
- Make sure to fan your paper before loading it to the paper tray.
- If there are instructions about the printing side on the package of your paper, please follow the instructions to load your paper properly with the correct printing side to the paper tray.
- If the printing quality is not satisfactory or paper jams are easily to occur, turn over the paper stack so that the top page is now on bottom and then reload it to the paper tray.
- Pack and seal the remaining paper with the original packaging and store the paper in a dark and dry location away from the sunshine. Paper which collects much moisture is easy to cause jam during printing.

4-2. Loading Paper into the Manual Tray

- 1) Repeat the preceding section 4-1 to fan to paper.
- 2) Hold the handle of the manual tray, and pull it down to open the manual tray.

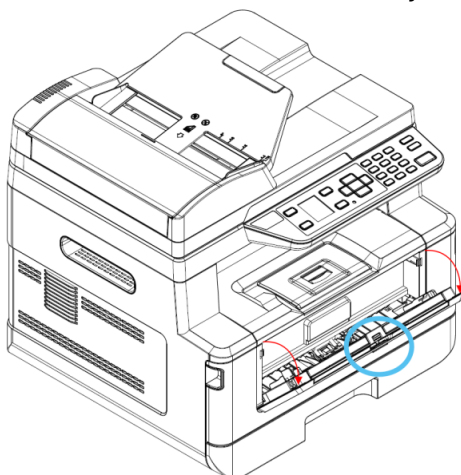


3) Pull out the tray extension to fit your desired paper length.

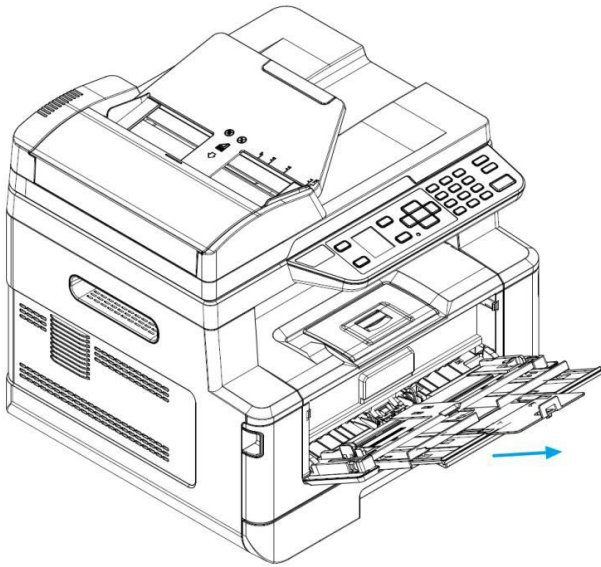

4) Load the paper stack with the print side **Facing UP** as illustrated.

5) Slide the paper guides so that they lightly touch the paper stack.

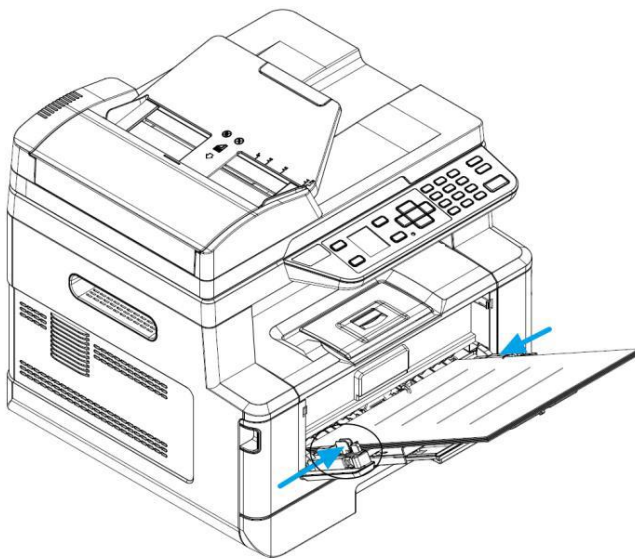


Chapter 3. Error Message and Troubleshooting

1. Preparation

Before repairing the equipment, check the following items.

Operating Temperature:

- 1) The equipment is placed in a flat and stable place.
- 2) Use the equipment in a clean environment with a temperature of 10°C to 32°C and a relative humidity between 20% and 80%.
- 3) The equipment is not exposed to direct sunlight, excessive heat, humidity, or dusty environment.
- 4) When moving the device, please grasp the handle at the bottom of the device and lift the device from the front.

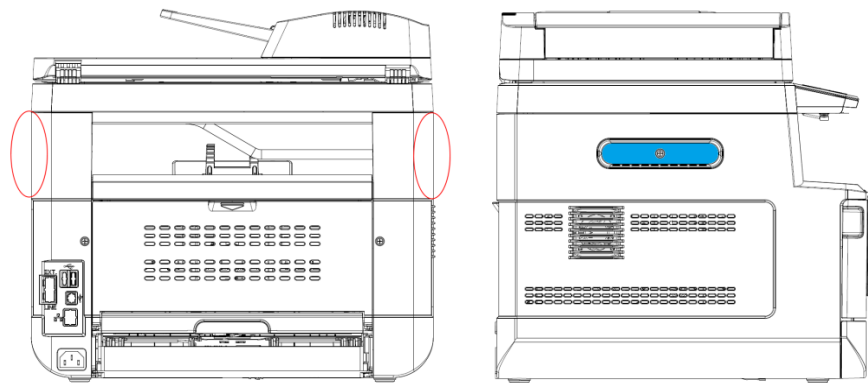

Power:

- (1) The power supply value meets the regulations on the equipment nameplate.
- (2) The power supply voltage fluctuation range is within $\pm 10\%$ of the rated voltage.
- (3) The input AC power is within the specified value.
- (4) The cable and patch cord are connected correctly.
- (5) The fuse is not blown.

Paper:

- (1) Use recommended paper.
- (2) The paper is not damp.
- (3) No short grain or acid paper is used.

Consumables:

- (1) Drum Unit (including Toner Cartridge) installed correctly. ◦

Other:

- (1) Condensation
 - When the device moves from a cold place to a warm room, condensation may form inside the device, which may cause the following problems:
 - When condensation occurs on the surface of optical components such as lenses, mirrors, and protective glass, the printed image may become lighter.
 - If the temperature of the photosensitive drum is too low, the resistance of the photosensitive layer will increase, making it impossible to print with the correct print density.
 - Condensation on the charging unit may cause corona charge leakage.

- Condensation on the bottom plate or separation pad may cause paper feeding problems.
- If condensation has formed in the device, please leave the device for at least two hours until the device temperature rises to room temperature. If the drum unit is moved from a cold place to a warm room, the package is immediately opened, the condensation that may be generated inside the unit may cause printing to fail. Please leave the drum unit for one to two hours until its temperature rises to room temperature before unpacking it.

(2) Low temperature

The drive may be overloaded in a low temperature environment and the motor cannot operate normally. In such cases, please increase the room temperature.

Cleaning:

Use a soft, lint-free cloth.

 Warning

When cleaning the equipment, do not use any flammable sprays or those containing alcohol, light volatile oil, thin Solvents for flammable substances such as release agents. Do not use the above items near the equipment.



2. Troubleshooting of Image Problems

 
 
2-1. Image Problems



Too light



White Vertical Line/Black Vertical Line



All White



Dirty



Dirty (rear side)



All Black



Vertical Line



Black/White Horizontal Line



Black Strips



Blur Printing




Blur Image

Roller Diameter

No.	Name of Roller	Diameter
1	Pickup Roller	102.8 mm
2	Transfer Roller (TR)	40mm
3	Drum(OPC)	75mm
4	Heating Roller (HR)	63.5mm
5	Developing Roller (DR)	33mm
6	Sliding Roller (SR)	38.3mm

2-2. Troubleshooting of Image Detects


■ Too Light(partly)

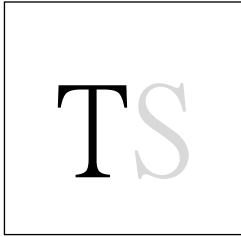

- ✓ User Check
- (1) Check the operating environment. High temperature and high humidity or low temperature and low humidity conditions can cause this problem.
- (2) Check if the Toner Cartridge has been correctly installed.
- (3) Replaced the Toner Cartridge with a new one.

Step	Cause	Solution
1	Toner usage remains low.	Replace Toner Cartridge.
2	Toner Cartridge may not be correctly installed.	Install Toner Cartridge correctly.
3	Toner cartridge lifetime may not near end but transfer roller lifetime ends.	Replace transfer roller.

■ White Vertical Line

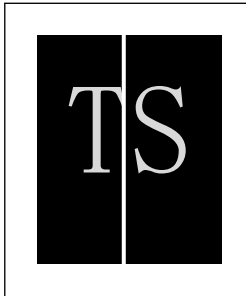


- ✓ User Check
- (1) Clean corona wire of the Drum Unit.
- (2) Clean the dust or powder on the roller of the Drum Unit. Refer to <Cleaning Method of the Drum Unit>.
- (3) Check if there is trace on Toner Cartridge Roller.


Step	Cause	Solution
1	Dust or powder on the charger.	Clean the charger of the Drum unit.
2	Accumulated dust on the Drum unit.	Clean the drum unit or replace the drum unit with a new one. Refer to <Cleaning Method of the Drum unit>
3	LSU CABLE mal-function.	Replace LSU CABLE.
4	LSU malfunction.	Replace LSU.
5	Main board malfunction (Control Signal malfunction).	Replace main board.

<Cleaning Method of the Drum Unit> (The actual drum unit used may be different from the one shown in the picture)


1) Remove drum unit. Place the printing sample in front of the drum unit and find the location of the image defect.

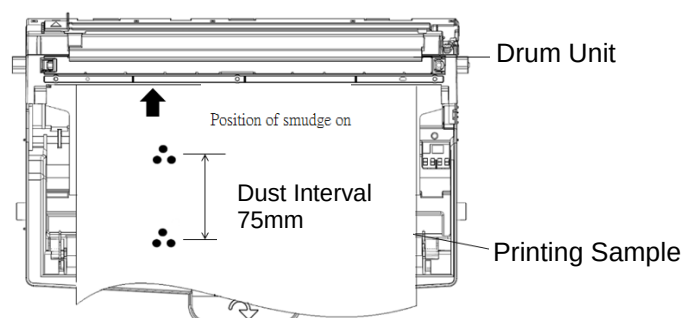

2) Use your hand to rotate the gear of the Drum Unit, turn the photosensitive side facing your.

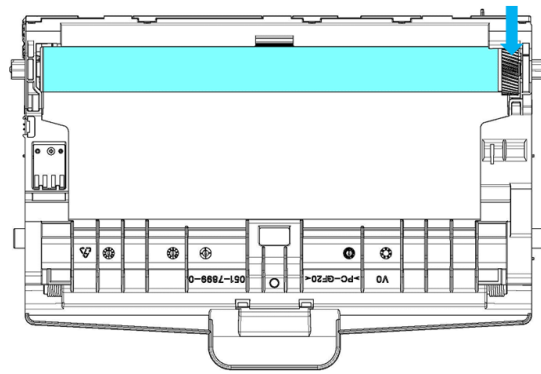


3) If the position of the dirt on the drum is the same with the spot on the printed sample, please wipe off the dirt or paper dust on the photosensitive drum with a cotton swab.

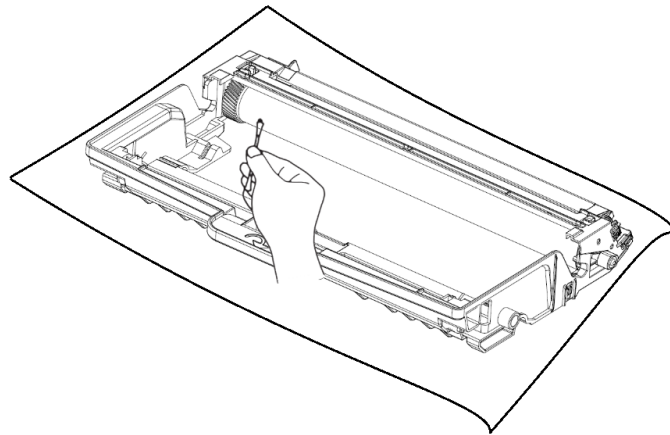

Important:

- Do not use pointed objects such as ballpoint pens to clean the surface of the photosensitive drum.
- Please clean with a mixture of ethanol and water (50%+50%).


■ Black Vertical Line

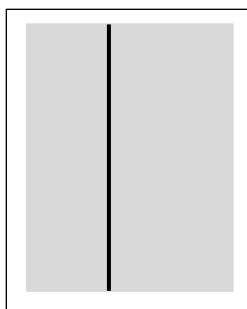

✓ User Check

- (1) Clean the corona wire or the power grid of the drum unit.
- (2) Refer to <Cleaning Method of the Drum Unit>, use a cotton swab to clear the dust on the drum unit.
- (3) Replace a new drum unit.

Step	Cause	Solution
1	Corona wire has not been moved to the end during cleaning.	Clean again.
2	Dust or powder on the charger unit.	Clean the charger of the drum unit. Refer to the following <u>Cleaning Method of the Corona Wire</u> .
3	Fuser unit malfunction(heating rollers scratch)	Replace fuser unit.

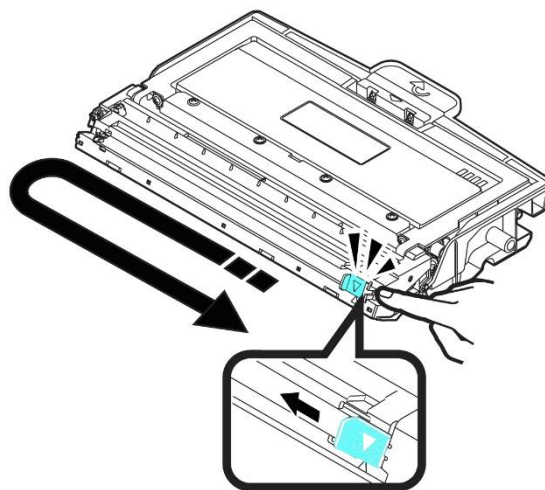

<Cleaning Method of Corona Wire>, Slide the corona wire to the end and then back to the original place. Repeat this for at least 3 times.

■ Dirty Background



- ✓ User Check
- (1) The problem may disappear after printing a few pages.
 - (2) The drum unit may be damaged. Install a new one.
 - (3) There is dirt on the paper path. Wipe off the dirt.

Step	Cause	Solution
1	There is dirt on the paper path.	Wipe off the dirt. Refer to <The Spacing of Various Rollers in the Image> Table
2	There is dirt on the heating roller of the fuser.	Replace the fuser unit.
3	There is dirt on the surface of the OPC or the drum is damaged.	Replace the drum unit.

Refer to <The Spacing of Various Rollers in the Image> Table


Important:

Periodic image defects may be caused by defects of various rollers. Please refer to the table below to determine the cause of the defect based on the diameter of various rollers or the spacing in the image.


<The Spacing of Various Rollers in the Image>

Component name	Spacing in the Image
Developing Roller (DR)	33mm
Drum Unit (OPC)	75mm
Heating Roller (HR)	63.5mm

<Example of Image Defects>, Value of A: Refer to <The Spacing of Various Rollers in the Image> Table

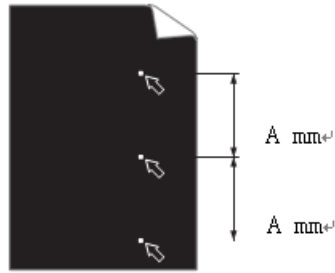


Periodical white spots in A mm interval
On a black page

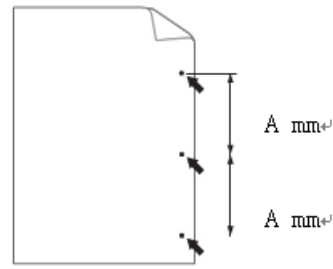

Periodical black spots in A mm interval
On a white page

■ Dirt on the rear side

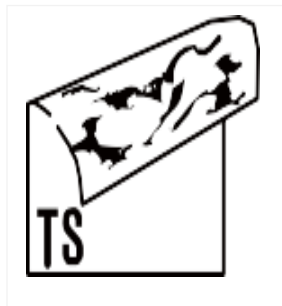


- ✓ User Check
- (1) This problem may be solved after printing a few pages.
- (2) There is dirt on the paper path. Wipe off the dirt.

Step	Cause	Solution
1	There is dirt on the paper path.	Wipe off the dirt. Refer to <The Spacing of Various Rollers in the Image> Table
2	Dirt on the Transfer Roller	Wipe off the dirt. Refer to <The Spacing of Various Rollers in the Image> Table
3	Dirt on the Pressure Roller (PR)	Replace the fuser.

Refer to <The Spacing of Various Rollers in the Image> Table

 ■ Blank Page



- ✓ User Check
- (1) Replace the developing unit.
- (2) Replace the drum unit.

Step	Cause	Solution
1	There is dirt on the electrode contacting the drum unit.	Clean the device and the electrode contacting the drum unit.
2	LSU malfunction.	Replace LSU unit.
3	Main board malfunction	Replace the main board.
4	No conducting between the device and OPC in the drum unit.	Replace high voltage board.

<Step 1>, <Step 2>, use a three-purpose meter to check:

Possible Cause	Step	Check	Result	Action
Drum unit poor grounding	1	If it conducting between the drum unit and the high voltage	Yes	Replace the drum unit.
	2	If it conducting between the drum unit and the high voltage	No	Replace the high voltage board.

■ A Black Image



- ✓ User Check
- (1) If the charger unit is correctly installed.
 - (2) Replace the charger unit.

Step	Cause	Solution
1	Charger malfunction or corona wire broken.	Replace the drum unit.
2	Dirt on the electrode between the corona wire and the high voltage board.	Clean the electrode between the corona wire and high voltage board.
3	HVPS malfunction	Replace high voltage board.
4	Main board malfunction	Replace the main board.


■ A Blur Image



- ✓ User Check
- (1) If the printer has been evenly positioned.
 - (2) Reinstalled the drum unit.
 - (3) Replace the drum unit.

Step	Cause	Solution
1	DRUM unit positioning tab broken	Replace drum unit.
2	LSU out of focus	Check if the LSU grounding wire is in good order; Check if the LSU positioning post is worn or broken.

■ A White Horizontal Line

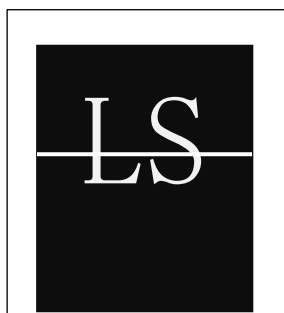

- ✓ User Check
- (1) The problem could be disappeared after printing a few pages.
- (2) Replace a new drum unit.

Step	Cause	Solution
1	The ground spring of the Drum unit defective.	Replace the drum unit.
2	Developing unit has been stored for a long time.	The problem may be disappeared after printing a few pages or try to clean the surface of the OPC of the drum unit.


■ Black Horizontal Lines



- ✓ User Check
- (1) Clean the corona wire on the drum unit.
- (2) This problem will disappear after printing for a few pages.
- (3) Wipe off the dirt on the drum unit with a cotton swab, refer to <Cleaning Method of the Drum Unit>
- (4) Replace the drum unit.

Step	Cause	Solution
1	Scratches or dirt on the fuser.	Replace the fuser.
2	Scratches or dirt on the drum unit.	Replace the drum unit or clean the surface of the drum unit.

■ Black Strape

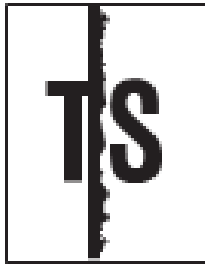

✓ User Check

- (1) Clean the corona wire on the drum unit.
- (2) Slide the corona wire back to the position marked "▲".
- (3) This problem will disappear after printing for a few pages.
- (4) Wipe off the dirt on the drum unit with a cotton swab, refer to <Cleaning Method of the Drum Unit>.
- (5) Replace the drum unit.

Step	Cause	Solution
1	Dirt on the charger.	Clean the electrode between the device and the drum unit.
2	Dirt on the OPC of the drum unit.	Clean the OPC of the drum unit or replace the drum unit.
3	Toner remains on the paper path.	Clean paper path.

■ Vertical Lines



✓ User Check

- (1). Clean the corona wire on the drum unit.
- (2). Slide the corona wire back to the position marked "▲".
- (3). This problem will disappear after printing for a few pages.
- (4). Wipe off the dirt on the drum unit with a cotton swab, refer to <Cleaning Method of the Drum Unit>.
- (5). Replace the drum unit.

Step	Cause	Solution
1	Dirts on the paper path.	Wipe off the dirts.
2	Dirts on the charger.	Clean the charger of the drum unit.
3	Scratches or dirts on the fuser.	Replace the fuser.
4	Toner Cartridge lifetime ends	Replace toner cartridge.
5	LSU malfunction.	Replace LSU.

■ Blur Image




✓ User Check


- (1) Check the operational environment. High or low temperature could cause this problem.
- (2) Check if the paper is dampened.
- (3) Replace Toner Cartridge.

Step	Cause	Solution
1	Toner remains low	Replace toner cartridge.
2	LSU positioning not good	Check if LSU is working OK, arrange the LSU ground cables; or replace drum if drum is damaged.

2-3. Electrode on the device

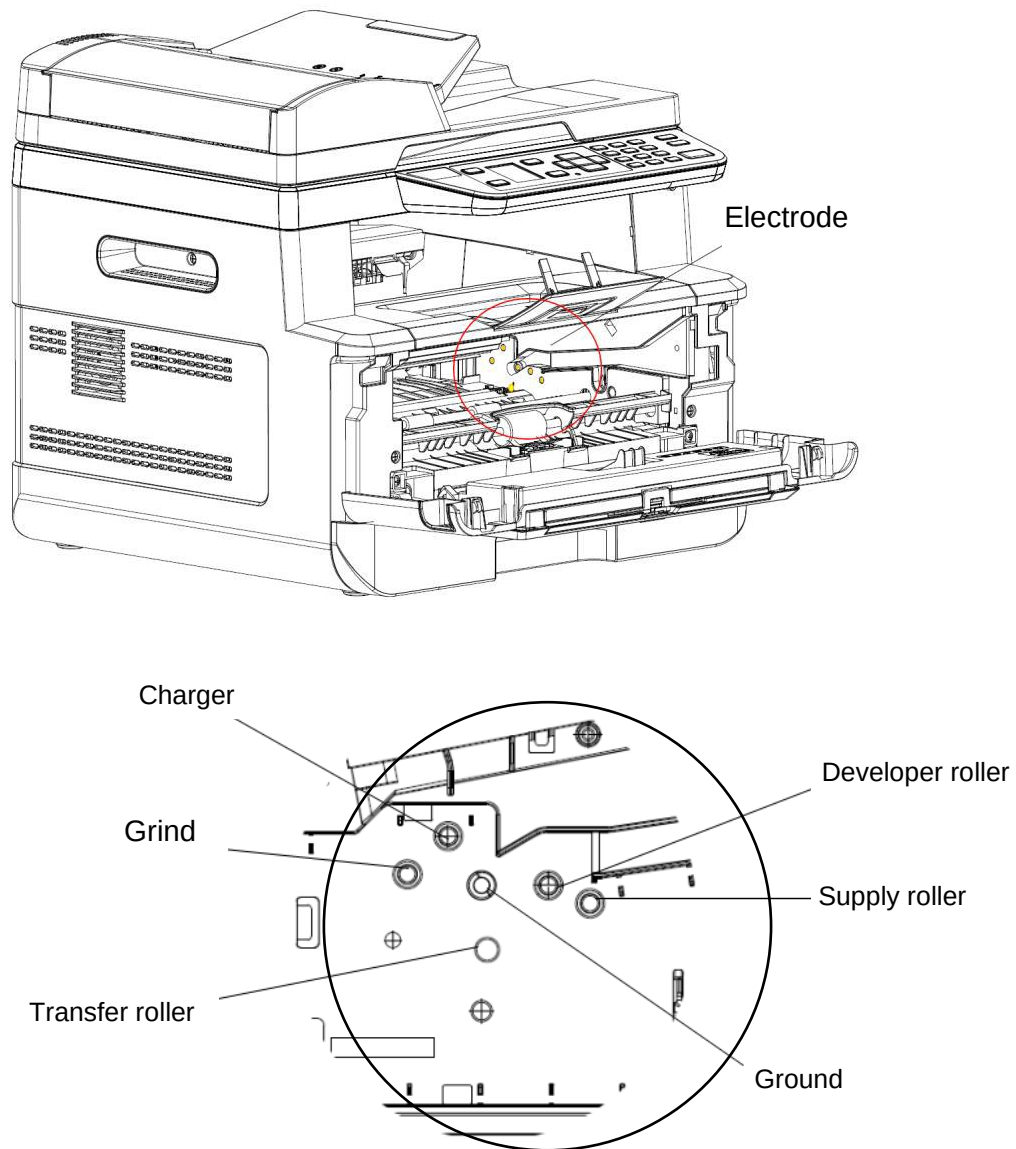

2-4. Electrode on the Drum Unit

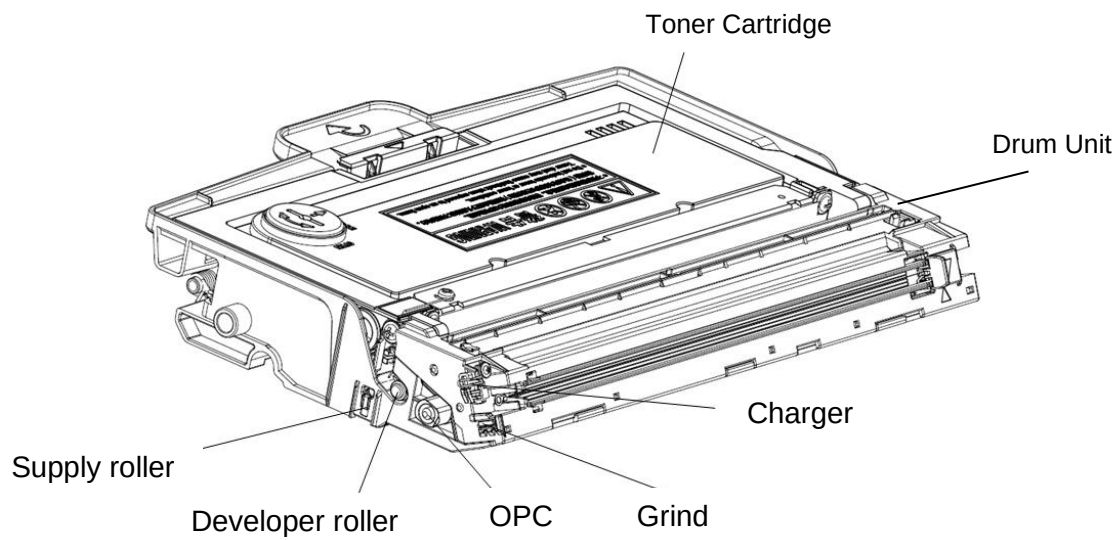

3. Troubleshooting

3-1. Error Causes and Solutions

■ Scanner Error (003101)

ADF multi-feed

< User Check >

(1) Replace the ADF pad.

(2) Replace the ADF roller

Step	Cause	Solution
1	ADF Paper in sensor fail	Replace the paper in sensor.
2	Scan sensor fail	Replace the scan sensor.

■ I²C Error (100112)

I²C error

< User Check >

(1) Turn off and on the printer.

(2) Turn off the power.

Step	Cause	Solution
1	Main board malfunctioned.	Replace the main board.

■ MFP Error (100113)

USB current overload by the panel

< User Check >

(1) Turn off and on the printer.

(2) Turn off the power.

Step	Cause	Solution
1	Main board malfunctioned.	Replace the main board.

■ MFP Error (100114)

USB current overload on mainboard

< User Check >

(1) Turn off and on the printer.

(2) Turn off the power.

Step	Cause	Solution
1	Main board malfunctioned.	Replace the main board.

■ MFP Error (100115)

Simultaneous overload of USB devices by the panel and on the mainboard.

< User Check >

- (1) Turn off and on the printer.
- (2) Turn off the power.

Step	Cause	Solution
1	Main board malfunctioned.	Replace the main board.

■ Multi-Feed Error (200000)

Open Side Door to remove the paper. This error occurs when multiple paper fed in the printer at the same time.

< User Check >

- (1) Check if paper in the tray exceeds capacity.
- (2) Check if paper loaded into the tray correctly.
- (3) Turn the paper upside down or turn it 180° and then reload to the tray.
- (4) Fan the paper and then reload into paper tray.

Step	Cause	Solution
1	One of the feeding rollers worn out.	Replace the worn-out feeding roller.
2	Separation Pad failed.	Replace the Separation Pad.
3	The surface of the Separation pad contaminated.	Clean the surface of the Separation Pad.

■ MFP Error (200001)

No matching paper

< User Check >

- (1) Check the paper size
- (2) Fit to paper setting of driver.

Step	Cause	Solution
1	Level 1 only	

■ MFP Error (200003)

Pick up error

< User Check >

- (1) Reload the paper to tray
- (2) Clean the Roller or Pad

Step	Cause	Solution
1	Pad life end	Replace the pad.

■ MFP Error (200004)

Auto Temperature Adjustment

< User Check >

- (1) Wait a moment to continue
- (2) Restart the MFP

Step	Cause	Solution
1	Fuser error	Replace the fuser.

■ MFP Error (200005)

Paper length error

< User Check >

- (1) Check the right paper size
- (2) Replace the paper.

Step	Cause	Solution
1	Level 1 only	

■ MFP Error (200006)

The fuser temp. is too low

< User Check >

- (1) Turn off and on the printer.
- (2) Turn off the power.
- (3) Check the power source, happen when 220V MFP plug the 110V source.

Step	Cause	Solution
1	Fuser Fail	Replace the fuser.

■ MFP Error (200008)

Paper width error

< User Check >

- (1) Check the right paper size
- (2) Replace the paper.

Step	Cause	Solution
1	Level 1 only	

■ MFP Error (200037)

Black toner empty

< User Check >

- (1) Turn off and on the printer.
- (2) Turn off the power.

Step	Cause	Solution
1	Toner life end	Replace the toner cartridge.

■ MFP Error (200038)

Black toner cartridge error

< User Check >

- (1) Turn off and on the printer.
- (2) Turn off the power.

Step	Cause	Solution
1	Wrong toner	Replace the toner cartridge from the original manufacturer.

■ MFP Error (200039)

Black toner cartridge error

< User Check >

- (1) Turn off and on the printer.
- (2) Turn off the power.

Step	Cause	Solution
1	Wrong toner	Replace the toner cartridge from the original manufacturer.

■ MFP Error (200045)

Drum unit cleaning

< User Check >

- (1) Wait until it finish
- (2) Turn off and on the printer.
- (3) Turn off the power.

Step	Cause	Solution
1	Fuser error	Replace the fuser.
2	Main board malfunctioned.	Replace the main board.

■ MFP Error (200046)

Drum unit changed

< User Check >

(1) Turn off and on the printer.

(2) Turn off the power.

Step	Cause	Solution
1	Main board malfunctioned.	Replace the main board.

■ MFP Error (200047)

Drum type not support

< User Check >

(1) Replace the drum unit.

Step	Cause	Solution
1	Wrong type of drum.	Replace the drum with the drum from the original manufacturer.

■ MFP Error (200048)

Black drum unit Life End

< User Check >

(1) Turn off and on the printer.

(2) Turn off the power.

Step	Cause	Solution
1	Drum life end	Replace the drum.

■ Front Cover opens (200051)

Close Front Cover (200051) Printer Parts Error, When the Front Cover is opened.

< User Check >

(1) Close the Front Cover.

Step	Cause	Solution
1	The rib of Front Cover is broken	Replace the Front Cover.
2	Front cover open sensor poor installation	Reassemble Front Cover Open Sensor.
3	Front cover open sensor poor connection	Reconnect Front Cover Open Sensor.
4	Front Cover Open Sensor defective	Replace Front Cover Open Sensor.
5	Main board malfunctioned	Replace main board.

Check method: 1. Prepare new sensor and connect to main board to check if conducting.

2. Prepare main board.

■ Rear Cover opens (200054)

Rear cover opens during printing.

This error occurs when opening the Rear Cover before performing duplex printing.

< User Check >

(1) (Close the Rear Cover)

Step	Cause	Solution
1	The rib of Rear Cover is broken	Replace the Rear Cover.
2	Rear cover open sensor poor installation	Reassemble Rear Cover Open Sensor.
3	Rear cover open sensor poor connection	Reconnect Rear Cover Open Sensor.
4	Rear Cover Open Sensor defective	Replace Rear Cover Open Sensor.
5	Main board malfunctioned	Replace main board.

■ Printer paper empty (manual tray) (200080)

No paper on the specified tray. (manual tray)

< User Check >

(1) Check if there is paper in the manual tray.

Step	Cause	Solution
1	IFA98 board cable is loose.	Reconnect the cable.
2	IFA98 board failed.	Replace IFA98 board.
3	Main board malfunctioned	Replace main board.

■ Printer paper empty (Main Tray) (200081)

No paper in the specified paper tray. (Main Tray)

< User Check >

(1) Check if there is paper in the main tray.

Step	Cause	Solution
1	Paper Exhaust sensor cable is loose.	Reconnect the cable.
2	IFA98 board cable is loose.	Reconnect the cable.
3	The Paper Empty Sensor failed.	Replace Paper Empty Sensor.
4	IFA98 board failed.	Replace IFA98 board.
5	Main board malfunctioned	Replace main board.

■ MFP Error (200082)

Tray2 empty

< User Check >

- (1) Turn off and on the printer.
- (2) Turn off the power.

Step	Cause	Solution
1	No paper in tray 2	Load paper.

■ Fan Error (200090)

There are two fans in the printer. This error occurs when the fan stops or rotation speed abnormal.

< User Check >

- (1) Fan stops rotation.

Step	Cause	Solution
1	Fan cable is loose.	Reconnect fan cable.
2	Foreign objects in the fan.	Remove foreign objects.
3	Fan malfunctioned.	Replace the fan.
4	Main board malfunctioned	Replace main board.

■ Paper jam Error (200301)

Printer Paper Jam (01): Load paper from manual tray but fails to pick paper.

< User Check >

- (1) Check if paper is correctly loaded into the manual tray.
- (2) Open front cover and remove the drum unit to remove paper.
- (3) Check if the paper has been removed.

Step	Cause	Solution
1	Paper not flattened.	Replace the paper or flatten the paper.
2	Feeding rollers and separation pad contaminated.	Regularly clean pad and rollers.
3	IFA99 Cable not connect well	Connect IFA99 cable correctly.
4	Pickup roller clutch failed.	Replace clutch.
5	IFA98 board defective	Replace IFA98 board.
6	Main board defective	Replace main board.

■ Paper jam Error (200302)

Printer Paper Jam (02): Load paper from main tray but fails to pick paper. Paper stuck in paper tray.

< User Check >

- (1) Check if paper is correctly loaded into the paper tray.
- (2) Open front cover and remove the drum unit to remove paper.
- (3) Check if the paper has been removed.

Step	Cause	Solution
1	Dirt on the pick up roller or Separation Pad.	Clean pickup roller and pad.
2	SB237 Cable not connect well	Reconnect the cable.
3	Main motor cable loosen.	Reconnect the cable.
4	IFA99 & IFA98 Cable not connect well.	Reconnect the cable.
5	Feeding roller clutch failed.	Replace clutch.
6	Paper feeding sensor failed.	Replace feeding sensor.
7	Pickup roller clutch failed.	Replace the clutch.
8	Main motor failed.	Replace main motor.
9	IFA98 board defective	Replace IFA98 board.
10	Main board defective	Replace main board.

Check step: Check paper path and sensors (Refer to Sensor Setting information check).

■ Paper jam Error (200324)

Printer Paper Jam (03) Load paper from main tray and paper jammed at feeding sensor.

< User Check >

- (1) Open front cover and remove the drum unit to remove the jammed paper.
- (2) Check paper path.
- (3) Check if the light guide of the drum unit is contaminated.

Step	Cause	Solution
1	Light guide of the drum contaminated.	Clean the light guide.
2	Deskew sensor Cable loosen.	Reconnect the cable.
3	Deskew sensor board malfunctioned.	Replace deskew sensor board.
4	IFA98 board cable loosen.	Reconnect the cable.
5	Main board malfunctioned.	Replace main board.

Check step: Check paper path and sensors (Refer to Sensor Setting information check).

■ Paper jam Error (200325)

Printer Paper Jam (04): Load paper from the main tray and paper jammed between feeding sensor and deskew sensor.

< User Check >

(1) Open front cover and remove the drum unit to remove the jammed paper.

(2) Check paper path.

Step	Cause	Solution
1	Foreign objects on the paper path.	Clean paper path.
2	IFA98 board failed.	Replace IFA98 board.
3	Main board malfunctioned.	Replace main board.

Check step: Check paper path and sensors (Refer to Sensor Setting information check).

■ Paper jam Error (200326)

Printer Paper Jam (05): Paper jammed near the deskew sensor.

< User Check >

(1) Open front cover and remove the drum unit to remove the jammed paper.

(2) Check paper path.

Step	Cause	Solution
	Deskew sensor contaminated.	Clean deskew sensor.
1	Deskew roller clutch cable loose.	Reconnect the cable.
2	IFA99 & IFA98C bale loose.	Reconnect the cable.
3	Registration roller cable loose.	Reconnect the cable.
4	Deskew roller clutch failed.	Replace deskew roller clutch.
5	Deskew sensor failed.	Replace SBA237 board.
6	IFA99 board failed.	Replace IFA99 board.
7	IFA98 board failed.	Replace IFA98 board.
8	Main board malfunctioned.	Replace main board.

Check step: Check paper path and sensors (Refer to Sensor Setting information check).

■ Paper jam Error (200327)

Printer Paper Jam (06): Paper jammed between deskew sensor and registration sensor.

< User Check >

- (1) Please open front cover and remove drum unit to remove the jammed paper.
- (2) Check paper path.

Step	Cause	Solution
1	Foreign objects on the paper path.	Clean the paper path.
2	IFA98 board failed.	Replace IFA98 board.
3	Main board malfunctioned.	Replace main board.

Check step: Check paper path and sensors (Refer to Sensor Setting information check).

■ Paper jam Error (200328)

Printer Paper Jam (07): Paper jammed near the registration sensor.

< User Check >

- (1) Open front cover and remove drum to remove the jammed paper.
- (2) Check if there is any foreign object on the paper path.
- (3) Check if the light guide of the drum is contaminated.

Step	Cause	Solution
1	Registration sensor contaminated.	Clean the registration sensor.
2	Registration sensor failed.	Replace SBA237.
3	Exit sensor cable of the fuser loose.	Reconnect the cable.
4	Main board malfunctioned.	Replace main board.
5	IFA98 board failed.	Replace IFA98 board.

Check step: Check paper path and sensors (Refer to Sensor Setting information check).

■ Paper jam Error (200329)

Printer Paper Jam (08): Paper jammed between registration sensor and exit sensor of fuser.

< User Check >

- (1) Open front cover to remove the jammed paper.
- (2) Check paper path.

Step	Cause	Solution
1	Foreign objects on the paper path.	Clean paper path.
2	Main board malfunctioned.	Replace main board.
3	IFA98 board failed.	Replace IFA98 board.

Check step: Check paper path and sensors (Refer to Sensor Setting information check).

■ Paper jam Error (200330)

Printer Paper Jam (09): Paper is jammed at the Exit Sensor of the Fuser.

< User Check >

- (1) Open front cover and remove the jammed paper.
- (2) Check paper path.

Step	Cause	Solution
1	Exit sensor of the fuser is loose.	Reconnect the cable.
2	Rear cover open sensor cable is loose.	Reconnect the cable.
3	Exit sensor of the fuser failed.	Replace the exit sensor.
4	Rear cover open sensor cable is loose.	Reconnect the cable.
5	Main board malfunctioned	Replace main board.
6	IFA98 board failed.	Replace IFA98 board.

Check step: Check paper path and sensors (Refer to Sensor Setting information check).

■ Paper jam Error (200331)

Printer Paper Jam (10): Paper is jammed between Exist Sensor of Fuser and Exit Sensor.

< User Check >

- (1). Open front cover and remove the jammed paper.
- (2). Check paper path.

Step	Cause	Solution
1	Foreign objects on the paper path.	Clean paper path.
2	Main board malfunctioned.	Replace main board.

Check step: Check paper path and sensors (Refer to Sensor Setting information check)

■ Paper jam Error (200332)

Printer Paper Jam (11): Paper is jammed at the Exit Sensor.

< User Check >

- (1) Open the rear cover to remove the jammed paper.
- (2) Check paper path.
- (3) Check the exit sensor.

Step	Cause	Solution
1	Foreign objects on the paper path.	Clean paper path.
2	Exit sensor cable is loose.	Reconnect the cable.
3	Spring of the exit sensor failed due to foreign objects.	Replace exit sensor.
4	IFA98 board failed.	Replace IFA98
5	Main board malfunctioned.	Replace main board.

Check step: Check paper path and sensors (Refer to Sensor Setting information check)

■ Paper jam Error (200333)

Printer Paper Jam (12): Paper is jammed between Exit Sensor and Duplex sensor.

< User Check >

- (1) Open the rear cover to remove the jammed paper.
- (2) Check paper path.

Step	Cause	Solution
1	Foreign objects on the paper path.	Clean paper path.
2	Main board malfunctioned.	Replace main board.

Check step: Check paper path and sensors (Refer to Sensor Setting information check)

■ Paper jam Error (200334)

Printer Paper Jam (13): Paper is jammed in the Duplex Sensor.

< User Check >

- (1) Open the Duplex Unit to remove the jammed paper.
- (2) Check paper path.

Step	Cause	Solution
1	Foreign objects on the paper path.	Clean paper path.
2	Duplex sensor is contaminated.	Clean duplex sensor.
3	Duplex roller failed.	Replace duplex unit.
4	Main board malfunctioned.	Replace main board.

Check step: Check paper path and sensors (Refer to Sensor Setting information check)

■ Paper jam Error (200335)

Printer Paper Jam (14): Paper is jammed between Duplex Sensor and Deskew Sensor.

< User Check >

- (1) Open the Duplex Unit to remove the jammed paper.
- (2) Check paper path.

Step	Cause	Solution
1	Foreign objects on the paper path.	Clean paper path.
2	IFA98 board failed.	Replace IFA98 board.
3	Main board malfunctioned.	Replace main board.

Check step: Check paper path and sensors (Refer to Sensor Setting information check)

■ Fuser Error (201502)

Invalid Fuser

< User Check >

- (1) Turn off and on the printer.
- (2) Turn off the power.

Step	Cause	Solution
1	Main board malfunctioned.	Replace the main board.

■ MFP Error (201504)

Invalid black drum unit

< User Check >

- (1) Turn off and on the printer.
- (2) Turn off the power.

Step	Cause	Solution
1	Wrong drum	Replace the drum from the original manufacturer.

■ MFP Error (201505)

Black toner cartridge error

< User Check >

- (1) Turn off and on the printer.
- (2) Turn off the power.

Step	Cause	Solution
1	Wrong toner	Replace the toner cartridge from the original manufacturer.

■ Fuser Error (201512)

Invalid Fuser

< User Check >

- (1) Turn off and on the printer.
- (2) Turn off the power.

Step	Cause	Solution
1	Main board malfunctioned.	Replace the main board.

■ MFP Error (201514)

Invalid black drum unit

< User Check >

- (1) Turn off and on the printer.
- (2) Turn off the power.

Step	Cause	Solution
1	Wrong drum	Replace the drum from the original manufacturer.

■ MFP Error (201515)

Black toner cartridge error

< User Check >

- (1) Turn off and on the printer.
- (2) Turn off the power.

Step	Cause	Solution
1	Wrong toner	Replace the toner cartridge from the original manufacturer.

■ MFP Error (201539)

Black toner cartridge error

< User Check >

- (1) Turn off and on the printer.
- (2) Turn off the power.

Step	Cause	Solution
1	Wrong toner	Replace the toner cartridge from the original manufacturer.

■ Fuser Error (201607)

Temperature difference between the center and the two sides of the lamp over 40 degrees.

< User Check >

- (1) Turn off power and then turn on.
- (2) Turn off the power.

Step	Cause	Solution
1	Operating temperature too low.	Change the operating temperature and restart the printer.
2	Used voltage too low	Check power and avoid using overloaded electrical appliances on the same line.

■ Error Code (201610)

Restart the device: Error in LSU. LSU FFC cable may not installed well or is damaged.

< User Check >

(1) Restart printer.

Step	Cause	Solution
1	LSU activation abnormal	Reassemble LSU FFC or replace LSU FFC.

■ Fuser Error (201616)

Fuser heating from ready to printing exceeds 20 seconds.

< User Check >

(1) Turn off power and then turn on.

(2) Turn off the power.

Step	Cause	Solution
1	Used voltage too low	Check power and avoid using overloaded electrical appliances on the same line.
2	Thermistor failed.	Replace the fuser.
3	Main board malfunctioned	Replace main board.

■ Fuser Error (201617)

Fuser heating from ready to warming up exceeds 155 seconds.

< User Check >

(1) Turn off power and then turn on.

(2) Turn off the power.

Step	Cause	Solution
1	Used voltage too low.	Check power and avoid using overloaded electrical appliances on the same line.
2	Thermistor failed.	Replace the fuser.
	The fuse of the fuser broken, activate protection mechanism	Replace the fuse.
3	Main board malfunctioned	Replace main board.
4	High voltage board malfunctioned.	Replace the high voltage board.

■ MFP Error (201630)

The environment temperature and humidity sensor is not connected

< User Check >

- (1) Turn off and on the printer.
- (2) Turn off the power.

Step	Cause	Solution
1	UIA board fail.	Replace the UIA board.
2	FFC Cable panel to MB	Replace the FFC Cable (panel to main board).
3	Main board malfunctioned.	Replace the main board.

■ MFP Error (201633)

LPH speed error.

< User Check >

- (1) Turn off and on the printer.
- (2) Turn off the power.

Step	Cause	Solution
1	LPH wrong	Replace the LPH with the one from the original manufacturer.

■ MFP Error (201634)

LPH gain error

< User Check >

- (1) Turn off and on the printer.
- (2) Turn off the power.

Step	Cause	Solution
1	LPH wrong	Replace the LPH with the one from the original manufacturer.

■ MFP Error (201640)

EP Motor RPM problem detected.

< User Check >

- (1) Turn off and on the printer.
- (2) Turn off the power.

Step	Cause	Solution
1	EP Motor Fail	Replace the EP(Main) motor.

■ MFP Error (201650)

Printer runtime error.

< User Check >

(1) Turn off and on the printer.

(2) Turn off the power.

Step	Cause	Solution
1	Main board malfunctioned.	Replace the main board.

■ MFP Error (201651)

Firmware error.

< User Check >

(1) Turn off and on the printer.

(2) Turn off the power.

Step	Cause	Solution
1	Main board malfunctioned.	Replace the main board.

■ MFP Error (201701)

Main board NVRAM fail.

< User Check >

(1) Turn off and on the printer.

(2) Turn off the power.

Step	Cause	Solution
1	Main board malfunctioned.	Replace the main board.

■ MFP Error (201702)

Main board NVRAM fail

< User Check >

(1) Turn off and on the printer.

(2) Turn off the power.

Step	Cause	Solution
1	Main board malfunctioned.	Replace the main board.

■ MFP Error (201703)

Main board NVRAM fail

< User Check >

(1) Turn off and on the printer.

(2) Turn off the power.

Step	Cause	Solution
1	Main board malfunctioned.	Replace the main board.

■ MFP Error (201704)

Main board NVRAM fail

< User Check >

(1) Turn off and on the printer.

(2) Turn off the power.

Step	Cause	Solution
1	Main board malfunctioned.	Replace the main board.

■ MFP Error (201711)

EP chip fail

< User Check >

(1) Turn off and on the printer.

(2) Turn off the power.

Step	Cause	Solution
1	Drum chip fail	Replace the drum.
2	Main board malfunctioned.	Replace the main board.

■ MFP Error (201712)

EP chip fail

< User Check >

(1) Turn off and on the printer.

(2) Turn off the power.

Step	Cause	Solution
1	Drum chip fail	Replace the drum.
2	Main board malfunctioned.	Replace the main board.

■ MFP Error (201713)

EP chip fail

< User Check >

(1) Turn off and on the printer.

(2) Turn off the power.

Step	Cause	Solution
1	Drum chip fail	Replace the drum.
2	Main board malfunctioned.	Replace the main board.

■ MFP Error (201714)

EP chip fail

< User Check >

(1) Turn off and on the printer.

(2) Turn off the power.

Step	Cause	Solution
1	Drum chip fail	Replace the drum.
2	Main board malfunctioned.	Replace the main board.

■ MFP Error (201721)

Toner chip fail

< User Check >

(1) Turn off and on the printer.

(2) Turn off the power.

Step	Cause	Solution
1	Toner chip fail	Replace the toner cartridge.
2	Main board malfunctioned.	Replace the main board.

■ MFP Error (201722)

Toner chip fail

< User Check >

(1) Turn off and on the printer.

(2) Turn off the power.

Step	Cause	Solution
1	Toner chip fail	Replace the toner cartridge.
2	Main board malfunctioned.	Replace the main board.

■ MFP Error (201723)

Toner chip fail

< User Check >

(1) Turn off and on the printer.

(2) Turn off the power.

Step	Cause	Solution
1	Toner chip fail	Replace the toner cartridge.
2	Main board malfunctioned.	Replace the main board.

■ MFP Error (201724)

Toner chip fail

< User Check >

(1) Turn off and on the printer.

(2) Turn off the power.

Step	Cause	Solution
1	Toner chip fail	Replace the toner cartridge.
2	Main board malfunctioned.	Replace the main board.

■ MFP Error (201730)

Illegal NVRAM address

< User Check >

(1) Turn off and on the printer.

(2) Turn off the power.

Step	Cause	Solution
1	FW BUG	Update the FW.

■ Error Code (205101)

eEngError_HiVChargerError: Image error caused by abnormal charge of the drum unit.

< User Check >

(1) Slide the green tab of the drum unit to and fro for 2 or 3 times to clean the corona wire.

(2) Clean several contact points of the drum unit.

(3) Replace a drum unit.

Step	Cause	Solution
1	Corona wire contaminated.	Clean corona wire.
2	Corona wire broken	Replace drum unit.
3	High voltage board hit by strong current	Replace high voltage board.

■ MFP Error (300002)

Fax dongle is not detected

< User Check >

- (1) Restart the MFP.
- (2) Reconnect in the FAX module.

Step	Cause	Solution
1	Fax module failed.	Replace the fax module.
2	Main board malfunctioned.	Replace the main board.

■ MFP Error (300003)

Unsupported fax dongle

< User Check >

- (1) Restart the MFP.
- (2) The product does not support the fax module. Please replace the fax module.

Step	Cause	Solution
1	Fax module wrong.	Replace the fax module.

■ MFP Error (300100)

NVRAM fail

< User Check >

- (1) Turn off and on the printer.
- (2) Turn off the power.

Step	Cause	Solution
1	Main board malfunctioned	Replace main board.
2	Drum chip fail	Clean the chip or replace the drum Unit.
3	Toner chip fail	Clean the chip or replace the drum Unit.

■ MFP Error (300101)

NVRAM fail

< User Check >

- (1) Turn off and on the printer.
- (2) Turn off the power.

Step	Cause	Solution
1	Save 300100	

■ MFP Error (300102)

NVRAM fail

< User Check >

- (1) Turn off and on the printer.
- (2) Turn off the power.

Step	Cause	Solution
1	Save 300100	

■ MFP Error (300200)

Flash error

< User Check >

- (1) Turn off and on the printer.
- (2) Turn off the power.

Step	Cause	Solution
1	Main board malfunctioned.	Replace the main board.

■ MFP Error (300201)

Flash error

< User Check >

- (1) Turn off and on the printer.
- (2) Turn off the power.

Step	Cause	Solution
1	Main board malfunctioned.	Replace the main board.

■ MFP Error (300202)

Flash error

< User Check >

- (1) Turn off and on the printer.
- (2) Turn off the power.

Step	Cause	Solution
1	Main board malfunctioned.	Replace the main board.

■ MFP Error (300203)

Flash error

< User Check >

- (1) Turn off and on the printer.
- (2) Turn off the power.

Step	Cause	Solution
1	Main board malfunctioned.	Replace the main board.

■ MFP Error (302651)

Network initialization failed.

< User Check >

- (1) Turn off and on the printer.
- (2) Turn off the power.

Step	Cause	Solution
1	Main board malfunctioned.	Replace the main board.

■ MFP Error (305873)

No answer

< User Check >

- (1) Turn off and on the printer then try again.
- (2) Turn off the power.
- (3) Reconnect the fax line.

Step	Cause	Solution
1	Fax module fail.	Replace the fax module.

■ MFP Error (305874)

No dial tone

< User Check >

- (1) Turn off and on the printer then try again.
- (2) Turn off the power.
- (3) Reconnect the fax line.

Step	Cause	Solution
1	Fax module fail.	Replace the fax module.

■ MFP Error (305875)

Line busy

< User Check >

- (1) Line busy. Please wait and try again.

Step	Cause	Solution
1	User check only.	

■ IP Conflict (500000)

Check network settings (500000)

< User Check >

(1) Check network settings

Step	Cause	Solution
1	IP Conflict	Reassign IP address

■ Net Cable Unplug (500001)

Plug the ethernet cable. (500001)

The machine detects no cable connected in the RJ-45 port.

< User Check >


(1) Check network connection status.

(2) Reset network settings.

(3) Check LAN cable.

Step	Cause	Solution
1	LAN connection pin deformed.	Replace main board.

Check LAN port:

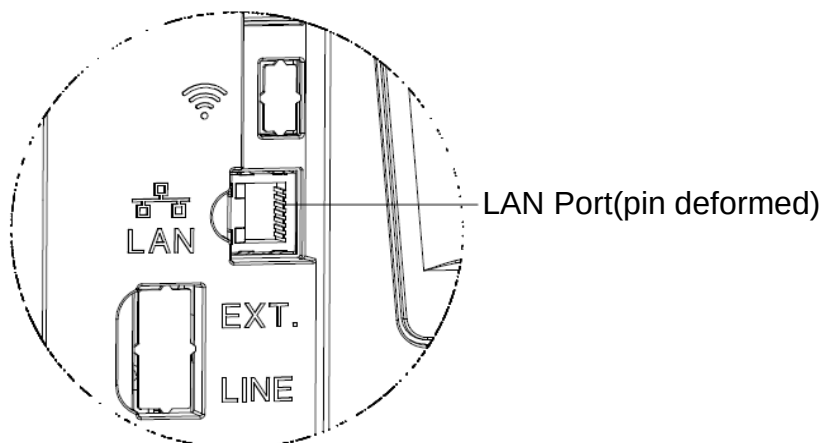

■ DHCP no response (500002)

Check network settings. (500002)

This error occurs when the printer requests information from the DHCP server and DHCP server does not respond.

Can not connect to network

< User Check >

(1) Check network settings.

Step	Cause	Solution
1	Main board malfunctioned	Replace main board.

Check: Check network status and enter [Ipconfig] and ping the device's IP address.

■ MFP Error (600011)

Buffer full

< User Check >

- (1) Turn off and on the printer then try again.
- (2) Turn off the power.
- (3) Reduce number of pages to scan and then try again

Step	Cause	Solution
1	User check only.	

■ MFP Error (600012)

File Name is existed

< User Check >

- (1) Turn off and on the printer then try again.
- (2) Turn off the power.

Step	Cause	Solution
1	Main board malfunctioned.	Replace the main board.
2	FW bug.	Update the FW.

■ MFP Error (600013)

No Entries Found

< User Check >

- (1) Turn off and on the printer then try again.
- (2) Turn off the power.

Step	Cause	Solution
1	Main board malfunctioned.	Replace the main board.
2	FW bug.	Update the FW.

■ MFP Error (600014)

MFP not Ready

< User Check >

- (1) Wait until it finish the current job.
- (2) Or Turn off and on the printer then try again.
- (3) Turn off the power.

Step	Cause	Solution
1	Main board malfunctioned.	Replace the main board.
2	FW bug.	Update the FW.

■ MFP Error (600015)

Invalid login name or password

< User Check >

- (1) Check the account information again.
- (2) Reset to default all.
- (3) Turn off and on the printer then try again.
- (4) Turn off the power.

Step	Cause	Solution
1	Main board malfunctioned.	Replace the main board.
2	FW bug.	Update the FW.

■ MFP Error (600018)

Unknown error

< User Check >

- (1) Turn off and on the printer then try again.
- (2) Turn off the power.

Step	Cause	Solution
1	Main board malfunctioned.	Replace the main board.
2	FW bug.	Update the FW.

■ MFP Error (600100)

Exceed Max Number

< User Check >

- (1) Retry to key-in.
- (2) Turn off and on the printer.
- (3) Turn off the power.

Step	Cause	Solution
1	User check only.	

■ MFP Error (600101)

No Fax Numbers Added

< User Check >

- (1) Retry to key-in.
- (2) Turn off and on the printer.
- (3) Turn off the power.

Step	Cause	Solution
1	User check only.	

■ MFP Error (600102)

Fax communication error

< User Check >

- (1) Retry again.
- (2) Turn off and on the printer.
- (3) Turn off the power.

Step	Cause	Solution
1	User check only.	

■ MFP Error (600103)

Line is in use

< User Check >

- (1) Waiting the line closed then try again
- (2) Turn off and on the printer.
- (3) Turn off the power.

Step	Cause	Solution
1	User check only.	

■ MFP Error (600200)

Exceed allowable limit

< User Check >

- (1) Turn off and on the printer.
- (2) Turn off the power.

Step	Cause	Solution
1	Fax module wrong	Replace the fax module
2	Main board malfunctioned.	Replace the main board.

■ MFP Error (600201)

No Recipients Added (Email)

< User Check >

- (1) Retry to add again.
- (2) Turn off and on the printer.
- (3) Turn off the power.

Step	Cause	Solution
1	User check only.	

■ MFP Error (600202)

No From Address Added (Email)

< User Check >

- (1) Retry to add in default setting > mail.
- (2) Turn off and on the printer.
- (3) Turn off the power.

Step	Cause	Solution
1	User check only.	

■ MFP Error (600203)

Exceed the attachment limit. Job abort

< User Check >

- (1) Turn off and on the printer then try again.
- (2) Check the file size of the attachment. Reduce the scan resolution or reduce the page number of your document.

Step	Cause	Solution
1	User check only.	

■ MFP Error (600300)

Reset Default Fail

< User Check >

- (1) Retry again.
- (2) Turn off and on the printer.
- (3) Turn off the power.

Step	Cause	Solution
1	FW bug.	Update the FW.
2	Main board malfunctioned.	Replace the main board.

■ MFP Error (600301)

Calibration fail

< User Check >

- (1) Retry to add again.
- (2) Turn off and on the printer.
- (3) Turn off the power.

Step	Cause	Solution
1	Scanner CIS fail	Replace the CIS (upper or lower)
2	CIS cable connection fail	Reconnect-in the CIS cable
3	Main board malfunctioned.	Replace the main board.
4	FB motor fail.	Replace the FB motor.

■ MFP Error (600302)

Reset count fail

< User Check >

- (1) Turn off and on the printer then try again.
- (2) Turn off the power.

Step	Cause	Solution
1	Main board malfunctioned.	Replace the main board.

■ MFP Error (600303)

Setting fail

< User Check >

- (1) Turn off and on the printer then try again.
- (2) Turn off the power.

Step	Cause	Solution
1	FW bug.	Update the FW.

■ MFP Error (600500)

USB flash disk not found

< User Check >

- (1) Turn off and on the printer then try again.
- (2) Turn off the power.
- (3) Try another USB flash disk in FAT32 format.

Step	Cause	Solution
1	Main board malfunctioned.	Replace the main board.
2	UIA board USB port fail	Replace the UIA board.

■ MFP Error (600501)

USB flash disk connect fail

< User Check >

- (1) Turn off and on the printer then try again.
- (2) Turn off the power.
- (3) Try another USB flash disk in FAT32 format.

Step	Cause	Solution
1	Main board malfunctioned.	Replace the main board.
2	UIA board USB port fail	Replace the UIA board.

■ MFP Error (600502)

Device no response

< User Check >

- (1) Turn off and on the printer then try again.
- (2) Turn off the power.
- (3) Try another USB flash disk in FAT32 format.

Step	Cause	Solution
1	Main board malfunctioned.	Replace the main board.
2	UIA board USB port fail	Replace the UIA board.

■ MFP Error (600503)

Unsupported device

< User Check >

- (1) Turn off and on the printer then try again.
- (2) Turn off the power.
- (3) Check if the device is provided by the original manufacturer.

Step	Cause	Solution
1	Main board malfunctioned.	Replace the main board.

■ MFP Error (600504)

Unsupported hub

< User Check >

- (1) Turn off and on the printer then try again.
- (2) Turn off the power.
- (3) Does not support the hub device.

Step	Cause	Solution
1	User check only.	

■ MFP Error (600505)

Unsupported file system

< User Check >

- (1) Try to use the USB flash disk in FAT32/16 format.

Step	Cause	Solution
1	User check only.	

■ MFP Error (600600)

Unsupported media type

< User Check >

- (1) Turn off and on the printer then try again.
- (2) Turn off the power.
- (3) Please use the driver provided.

Step	Cause	Solution
1	Level 1 only	

■ MFP Error (600601)

Unsupported media type

< User Check >

- (1) Turn off and on the printer then try again.
- (2) Turn off the power.
- (3) Please use the driver provided.

Step	Cause	Solution
1	Level 1 only	

■ MFP Error (600705)

Data decompression time out

< User Check >

- (1) Turn off and on the printer then try again.
- (2) Turn off the power.
- (3) Please use the driver provided.

Step	Cause	Solution
1	Level 1 only	

■ MFP Error (600706)

Data decompression time out

< User Check >

- (1) Turn off and on the printer then try again.
- (2) Turn off the power.
- (3) Please use the driver provided.

Step	Cause	Solution
1	Level 1 only	

■ MFP Error (600707)

The resolution of the file is not supported. Job abort

< User Check >

(1) Please update the driver provided.

(2) Check the printing resolution of your application (Word\Excel and so on).

Step	Cause	Solution
1	Level 1 only	

■ MFP Error (600708)

Data decompression time out

< User Check >

(1) Turn off and on the printer then try again.

(2) Turn off the power.

(3) Please use the driver provided.

Step	Cause	Solution
1	Main board malfunctioned.	Replace the main board.

■ Security Error (800001)(OEM)

Security chip error

< User Check >

(1) Turn off and on the printer.

(2) Turn off the power.

Step	Cause	Solution
1	Main board malfunctioned.	Replace the main board.
2	Security board failed	Replace the security board.

■ Security Error (800002)(OEM)

Storage security check error

< User Check >

(1) Turn off and on the printer.

(2) Turn off the power.

Step	Cause	Solution
1	Main board malfunctioned.	Replace the main board.
2	FW failed.	Update the FW.

■ Security Error (800003)

Memory security check error

< User Check >

(1) Turn off and on the printer.

(2) Turn off the power.

Step	Cause	Solution
1	Main board malfunctioned.	Replace the main board.

■ MFP Error (910004)

The file format is not supported

< User Check >

(1) Please check if the file extension name has been changed.

Step	Cause	Solution
1	User check only.	

■ Paperjam Error (940304)

CSA4 paper jam

< User Check >

(1) Open the upper cover to removal the jam.

Step	Cause	Solution
1	CSA4 Paper in sensor failed.	Replace the CSA4 paper in sensor.
2	Main board malfunctioned.	Replace the main board.

■ Scan Error (940305)

CSA4 lamp error

< User Check >

(1) Turn off and on the printer.

(2) Turn off the power.

Step	Cause	Solution
1	CSA4 CIS fail	Replace the CSA4 CIS.
2	CSA4 BB board fail	CSA4 BB board replace.
3	CSA4 CIS cable connection fail	Reconnect the CIS cable.
4	Main board malfunctioned.	Replace the main board.

■ Scan Error (940306)

CSA4 AFE error

< User Check >

(1) Turn off and on the printer.

(2) Turn off the power.

Step	Cause	Solution
1	CSA4 CIS fail	Replace the CSA4 CIS.
2	CSA4 BB board fail	CSA4 BB board replace.
3	Cable (BB to MB) connect fail	Reconnect the cable (BB to MB).
4	Main board malfunctioned.	Replace the main board.

3-2 Paper Feeding Problem


If the machine is operating normally, yet it can not feed paper or too many paperjams, pls check the machine and the paper conditions.

Problem	Possible Solution
Failed to feed paper.	■ Use only the paper the printer supported. Refer to chapter 1 for printer supported material. ■ Load the paper correctly. Make sure there is no space between the edge of paper and the paper guide. ■ Flatten the paper if it is curled. ■ Fan the paper and then turn the paper stack upside down and then reload it into paper tray.
Frequent paperjams	■ Adjust the paper guide so that there is no space between paper and paper guide. ■ Avoid using large amount of toner in duplex mode. ■ Use only the paper the printer supported. Refer to chapter 1 for printer supported material. ■ Make sure paper stack does not exceed allowable mark in the paper tray.
Multi-Feed	■ Before loading paper, bend the paper back and forth to loosen the paper, and then fan the paper. Align the edges of the paper by tapping the bottom of the stack against the table top. ■ Make sure the paper tray is installed correctly. ■ Use only the paper the printer supported. Refer to chapter 1 for printer supported material. ■ Make sure paper stack does not exceed allowable mark in the paper tray. ■ Check if additional paper is loaded when there is a few pieces of paper in the paper tray. Remove the remaining paper in the tray and then fan them together with the additional paper and then reload them to the paper tray.
Paper with wrinkles.	■ Paper is damp. Please use paper stored in good condition. ■ Paper too thin. Refer to chapter 1 for printer supported material. ■ Adjust the paper guide so that there is no space between paper and paper guide.
Paper is curled.	■ Turn the paper upside down and then reload it into the paper tray. ■ Paper is damp. Please use paper stored in good condition.
Printed image skewed.	■ Make sure the edge of paper slightly touch the paper guide. Adjust the paper guide so that there is no space between paper and paper guide. ■ Check if there is foreign objects on the paper path. If so, remove them.

3-3. Clear Paperjams

3-3-1. Jammed paper does not occur at Fuser


- 1) Pull the paper tray and open the front cover. Remove the drum unit.
- 2) Rotate the Release Arms as indicated and then remove the jammed paper.

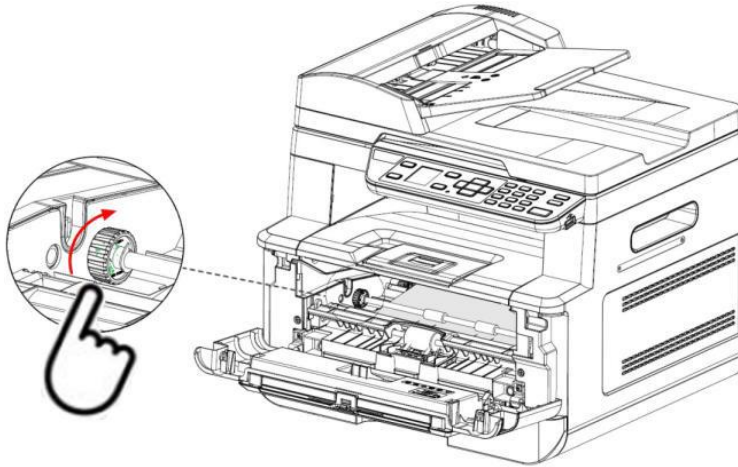


3-3-2. Jammed paper at the Fuser

The area around the fuser is hot. To avoid a burn injury, be careful not to touch the fuser until it cools down and then remove the paper according to the following steps:


- 1) Open Front Cover and Rear Cover and then remove the drum unit.
- 2) At the back of the printer, pull down Fuser Path as indicated.

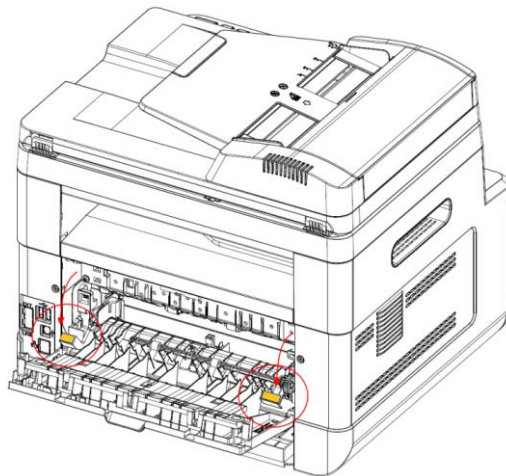

- 3) Pull down the green arms on both sides.

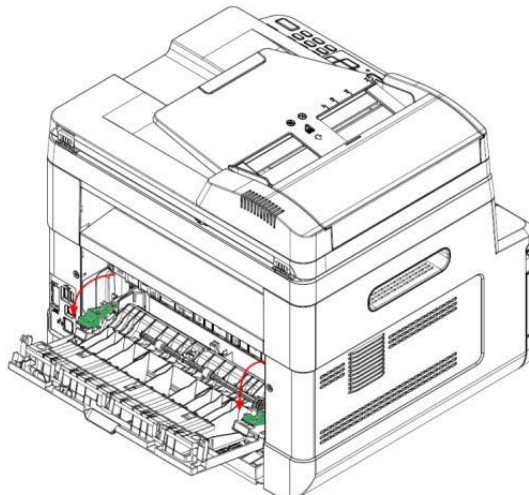

4) Gently pull out the paper.

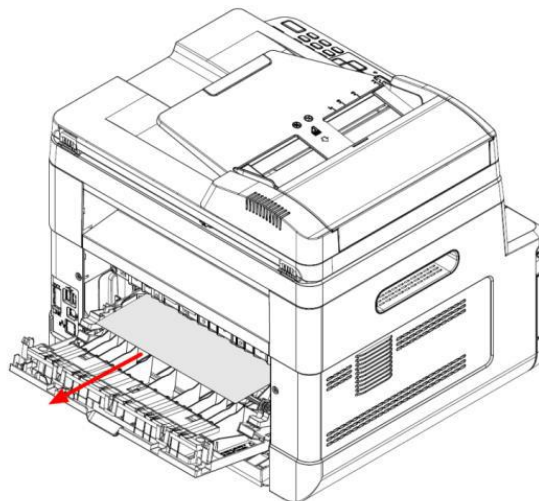


Notice:

- The area around the fuser is hot. To avoid a burn injury, be careful not to touch the fuser until it cools down and then remove the paper.
- After removing the jammed paper, return the green arms on both sides to their original positions as soon as possible. Do not stay in the pulled down status for too long to avoid affecting the spring force value.

3-3-3. Jammed Paper at the Duplex Unit

- 1) Pull the paper tray.
- 2) Remove the Duplex Unit at the back of the device as illustrated. Remove the paper.

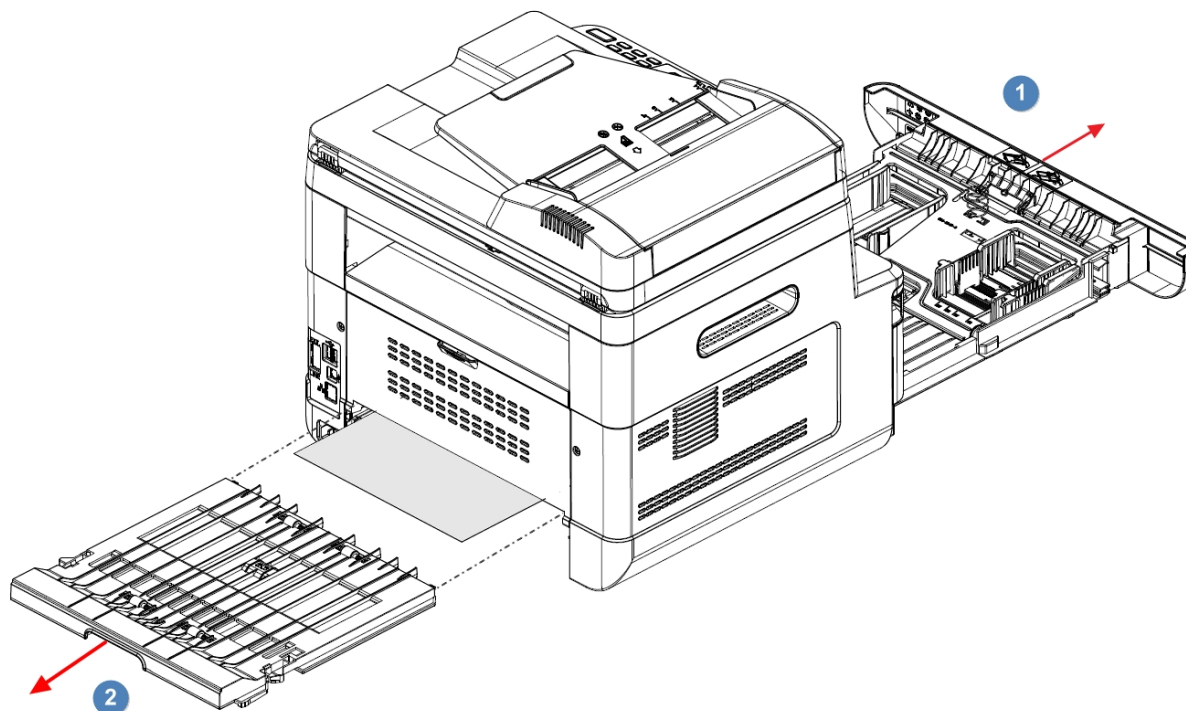

Chapter 4. Disassembling and Reassembling

1. Security measures

In order to avoid secondary malfunction due to incorrect operation, the following warnings and precautions must be observed during the disassembly and reassembling of the equipment.

Warning

After using the printer for a while, the temperature inside the printer is very high!
When opening the Side Door or the Rear Cover to repair components, do not touch the areas shown in the high temperature mark.

- Be careful not to lose the removed screws, washers and other parts.
- Be sure to apply grease to the parts specified in this chapter.
- When using an electric soldering iron or other heating tools, please be careful not to damage the wires, circuit boards, casings and other components made of synthetic resin.
- The static electricity charged by the human body may damage electronic components.
Therefore, when transporting the circuit board, be sure to wrap the circuit board with conductive foil.
- When replacing circuit boards and all other parts with circuit boards, please wear a wrist strap for discharging static electricity and operate on an anti-static mat. In addition, please be careful not to touch the flat cable and the electrode conductor part of the wire.
- After unplugging the flat cable, be sure to check that the flat cable plug is in good condition and that the flat cable is not short-circuited.
- When inserting the flat cable, be sure to insert it straight, and check that the cable is not crooked after inserting it.
- When connecting or disconnecting the patch cord, do not hold the cable part but the connector part. If there is a lock on the connector, be sure to unlock the lock first.
- After repairing, please pay attention not only to check the repaired part, but also to check the connection of the patch cord. In addition, you need to check if other related parts are working properly.
- Do not close the front cover forcibly before installing the toner cartridge and drum unit, otherwise the machine may be damaged.
- After installation, it is recommended to conduct an insulation withstand voltage test and a conductivity test.
- Be careful not to damage the insulating sheet.
- When replacing the circuit board, be sure to check if there is any foreign matter on the component surface and soldering surface of the circuit board.


2. Preparation Before Disassembling

Disconnect the following cables:

- USB cable
- LAN cable
- POWER cable

Remove the following parts:

- Paper Tray
- Toner Cartridge and Drum Unit

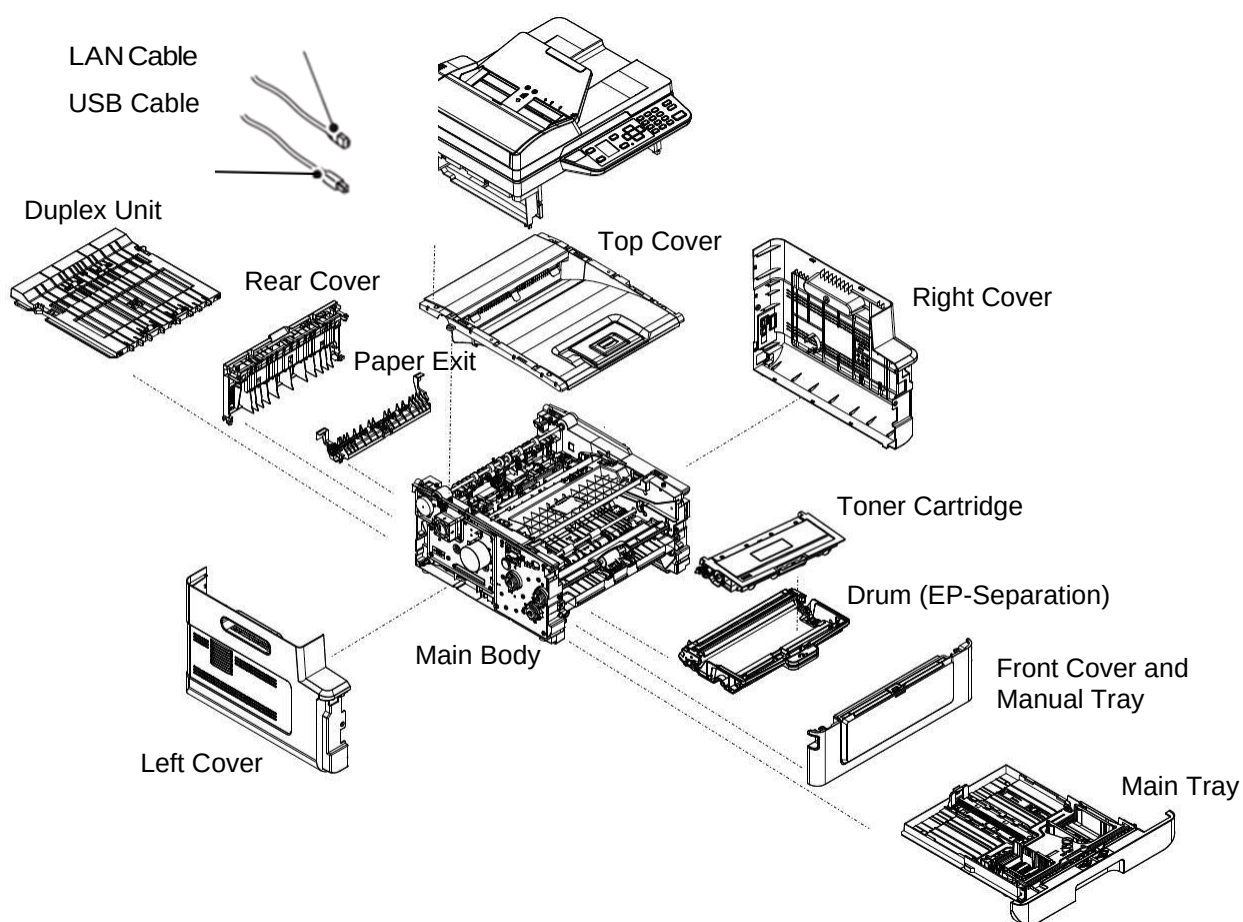

3. Disassembling and Reassembling


Disassembling Notices:

- 1) Clean the removal and assembly location.
- 2) Please unplug the power cord and remove the AC power plug before disassembly and assembly.
- 3) Please follow the disassembly and assembly procedures. Do not loosen the non-removable screws.
- 4) Please store the disassembled parts in a clean place to avoid loss.
- 5) After replacing the parts, please check the contact position and the base of the parts.
- 6) Please assemble the parts in the reverse order of the disassembly procedure.

3-1. Basic Disassembling


3-1-1. Paper Tray

- 1) Pull out the Main Paper Tray to remove it.

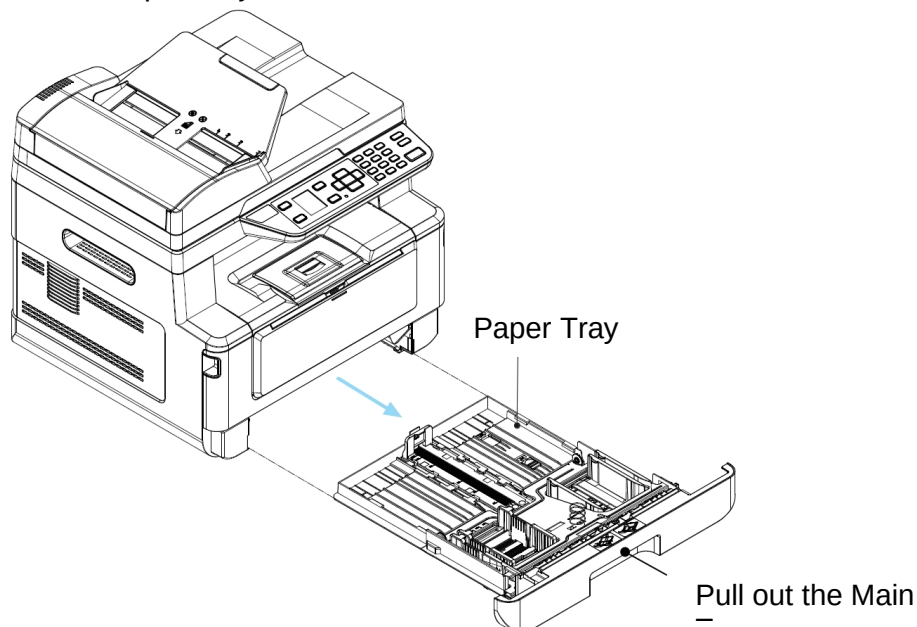

3-1-2. Duplex Unit



- 1) Remove ASSY_DUPLEX_MODULE.

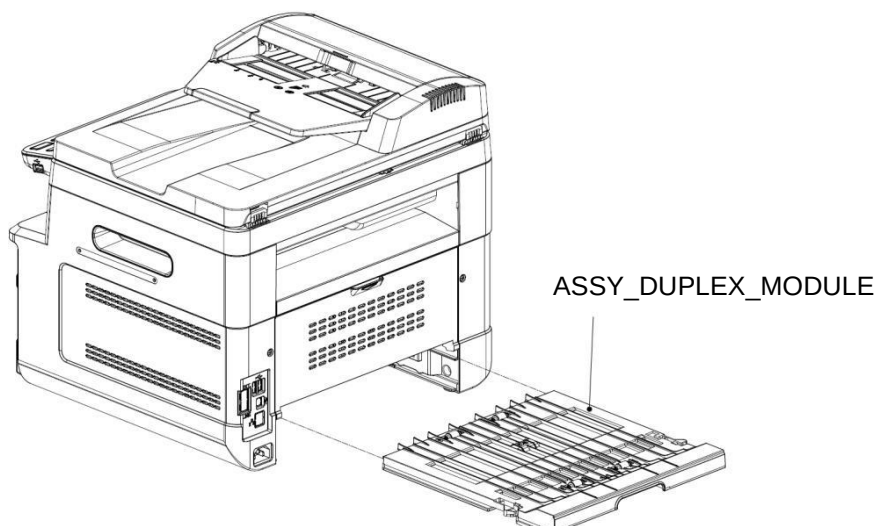

3-1-3. EP_SEPARATION-LSU


1) Open the Front Cover.

2) Lift the handle of the Drum Unit and gently pull it out to remove EP_SEPARATION_LSU.

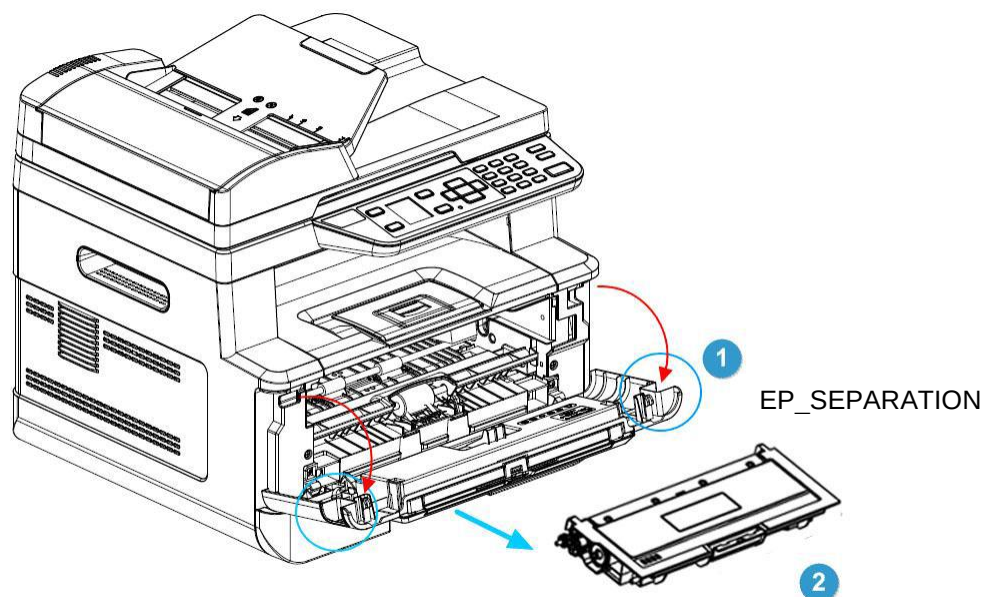
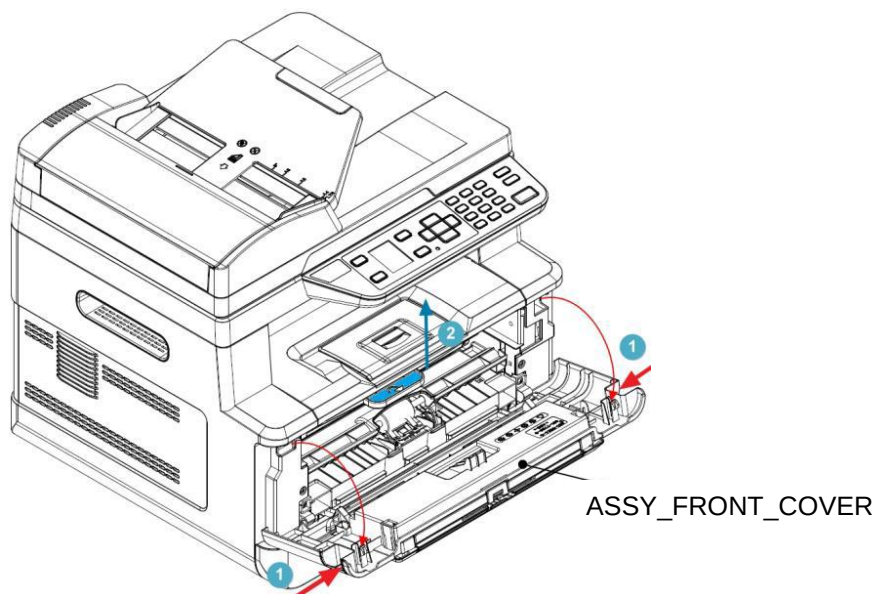


3-1-4. Front Cover

- 1) Remove the drum unit.
- 2) Remove Main Paper Tray.
- 3) Remove Front Cover.

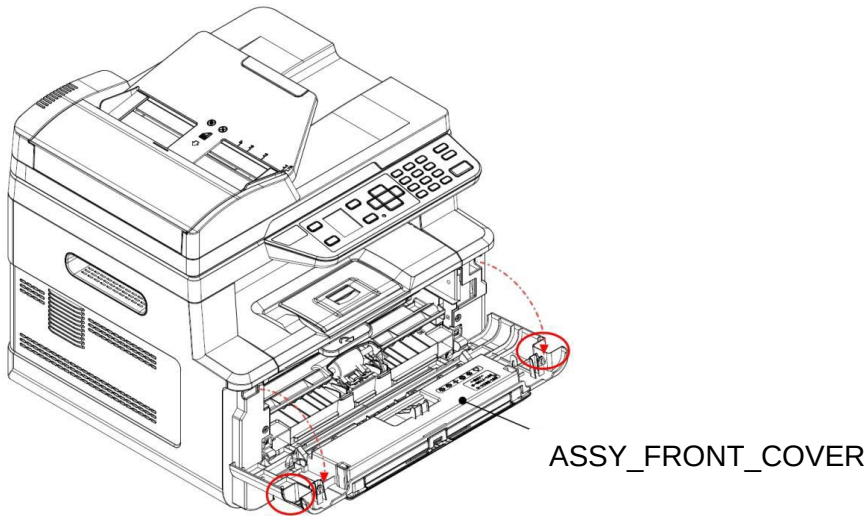


Tip: Open the Front Cover. Hold the Front Cover with your left hand and use your right hand to remove the hook from the slot as illustrated.

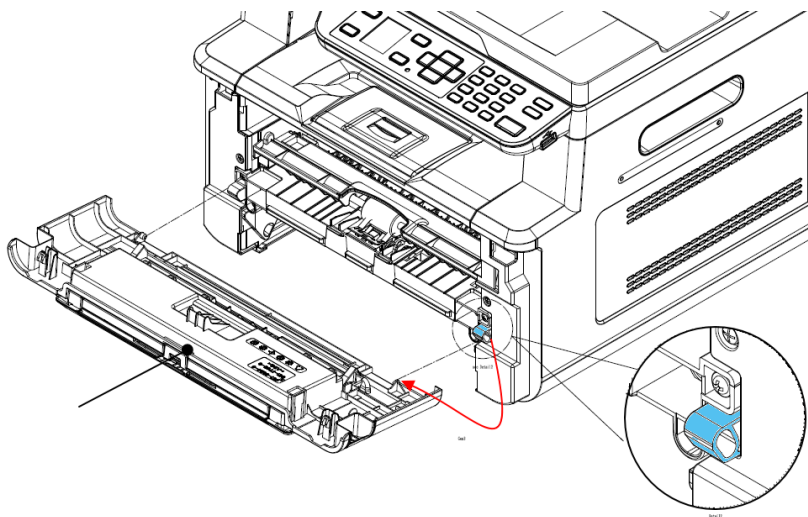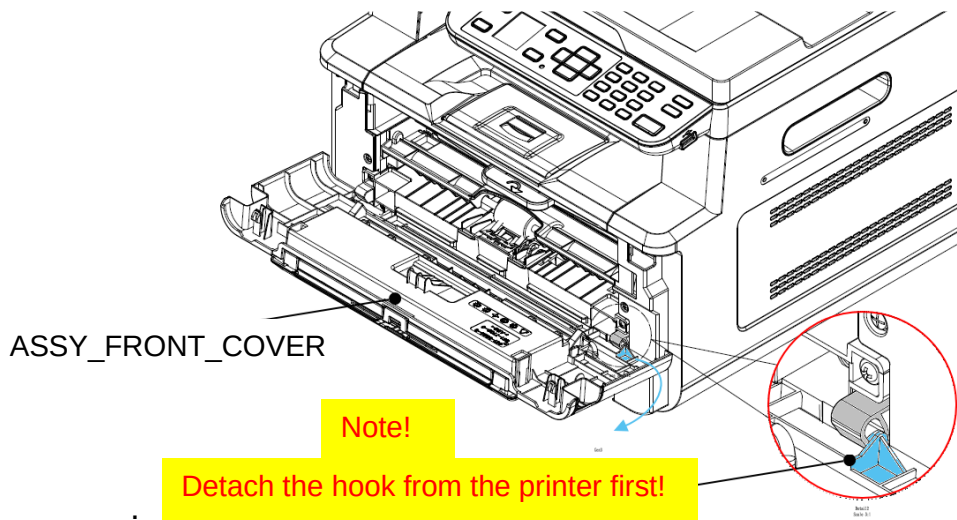


3-1-5. COVER_LEFT

- 1) Remove Front Cover, Main Paper Tray and Drum Unit.
- 2) Remove 2 fixing screws (T3X8) to remove the COVER_LEFT.

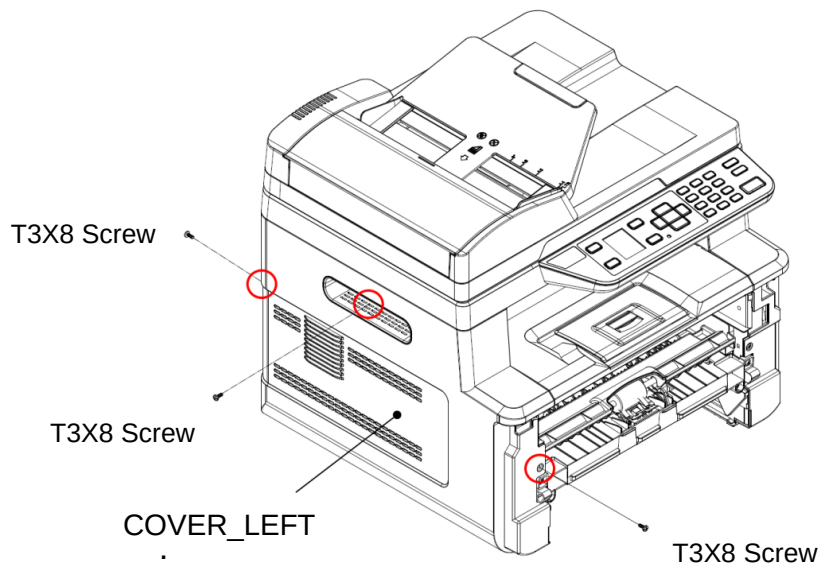


Tip: Let the machine stand on its right side as shown, use your left hand to hold the bottom of the machine. And then use your right hand to pry two sides of the Left Cover with a flat screwdriver.

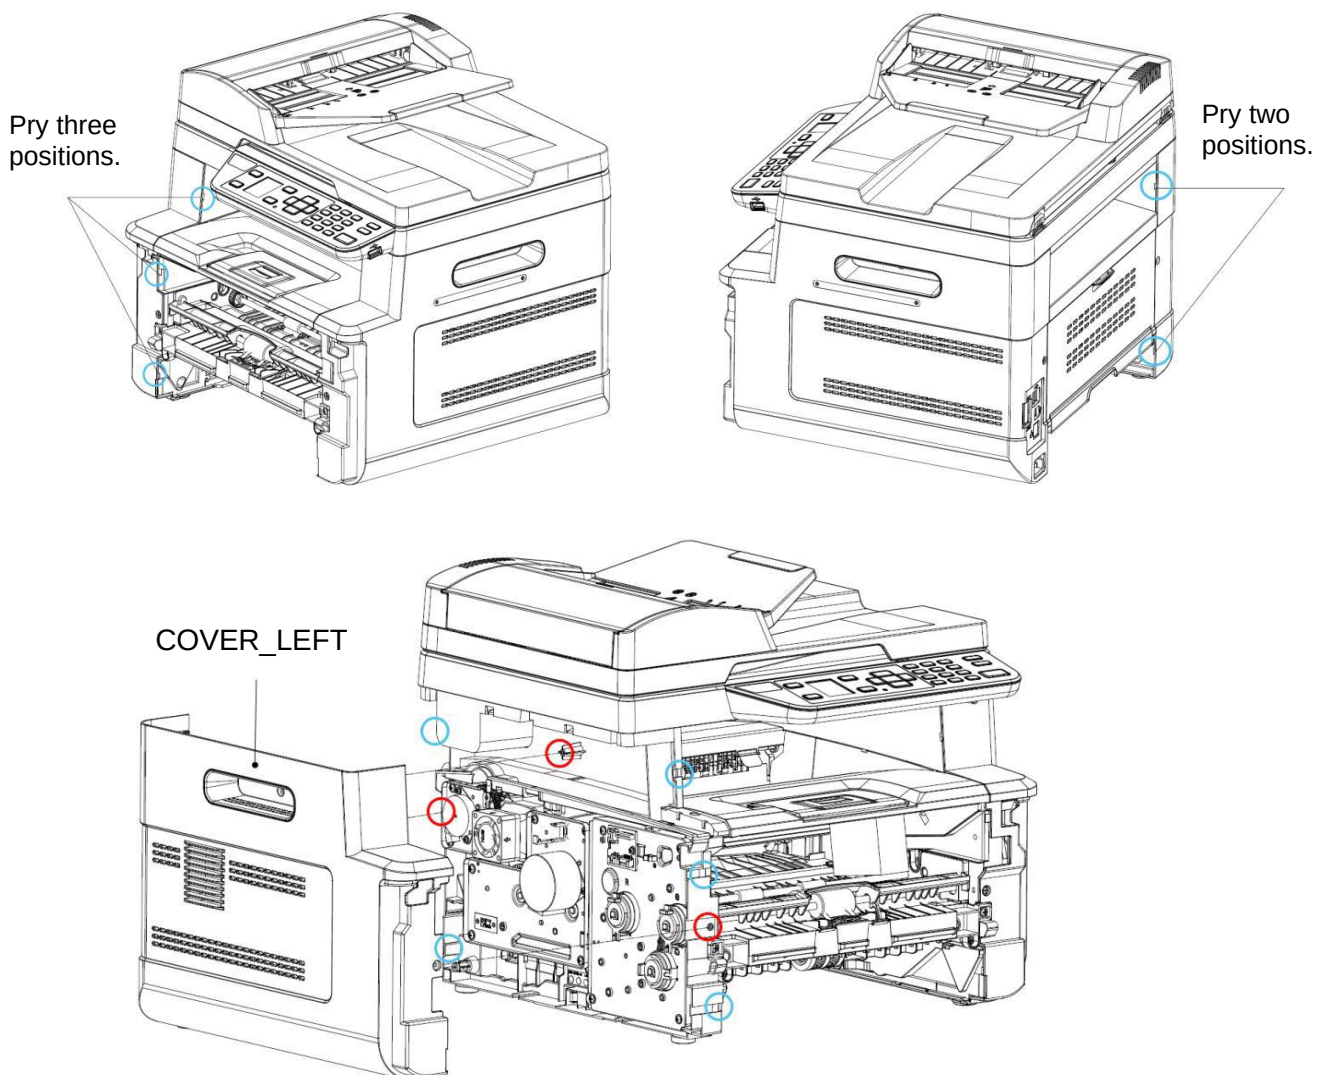


3-1-6. ASSY_HOUSING_RIGHT

- 1) Remove Front Cover, Main Paper Tray and Drum Unit.
- 2) Remove 2 fixing screws (T3X8) to remove the ASSY_HOUSING_RIGHT.

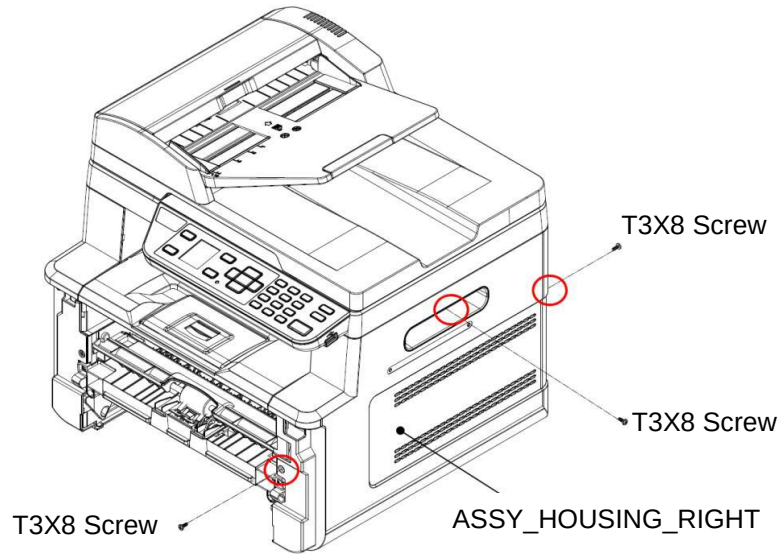


Tip: Make the machine stand on the left side, and hold the bottom with your left hand. Use your right hand to pry three positions of the Right Cover with a flat screwdriver.

Attention: Since there are main board and high voltage boards on the inside of the Right Cover, be careful not to damage the electronic boards when reassembling the machine. When reassembling the Right Cover, you need to first observe if the FFC cable has a raised pin on the UI board, and do not install the FFC cable reversely.

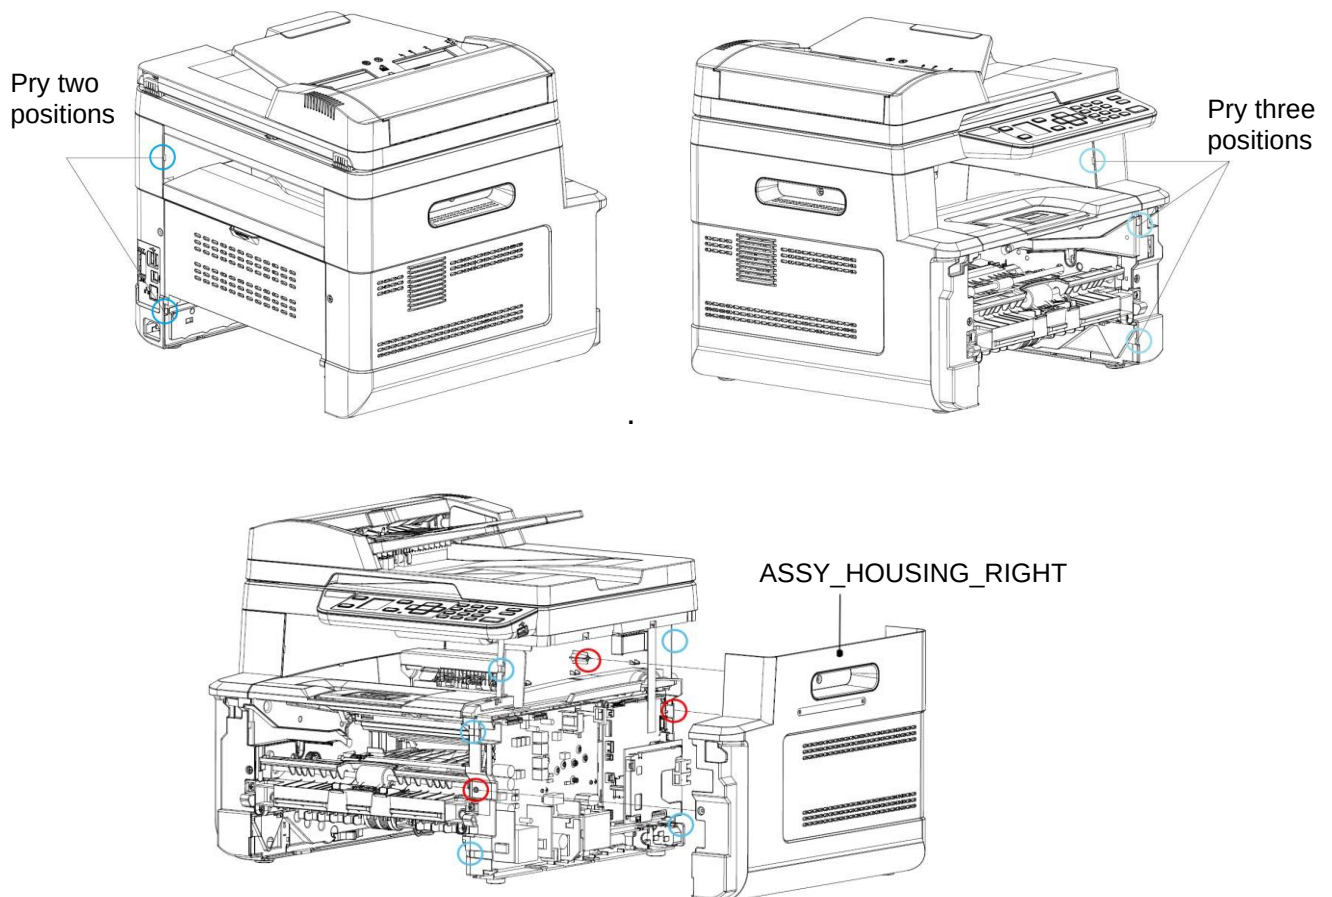


3-1-7. ASSY_REAR_PATH

- 1) Remove Front Cover, Main Paper Tray, Drum Unit, Left Cover, Assembling Housing Right.
- 2) (Fig. 1) Pull down the ASSY_REAR_PATH to remove it.

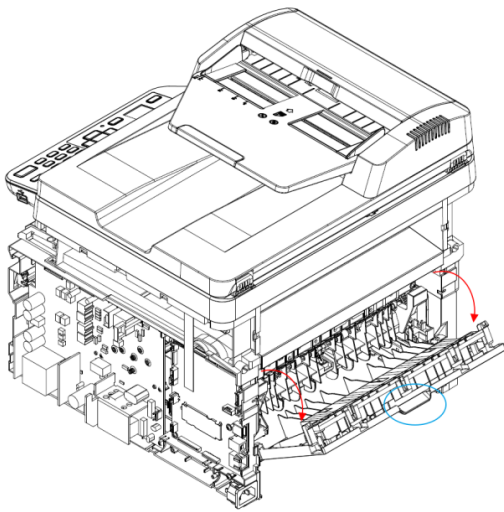

(Fig. 1)

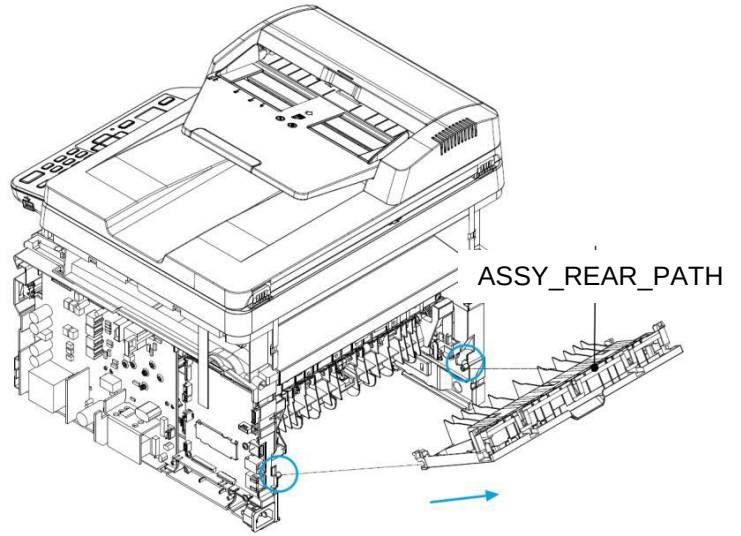

3-1-8. ASSY_FUSER_PATH

- 1) Remove Front Cover, Main Paper Tray, Drum Unit, Left Cover, Assembling Housing Right, ASSY_REAR_PATH.
- 2) (Fig.1) Press down the FUSER_PATH to remove it.


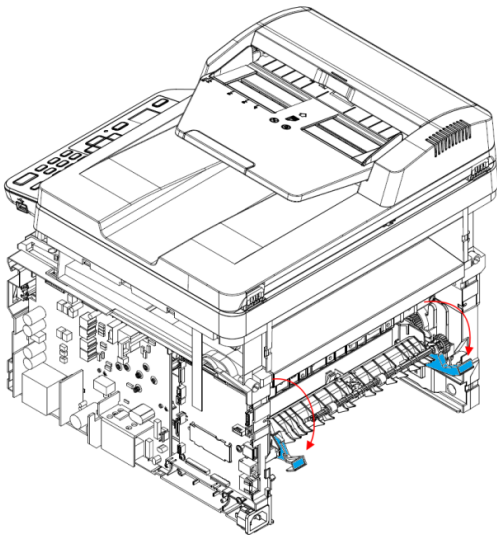


Fig. 1

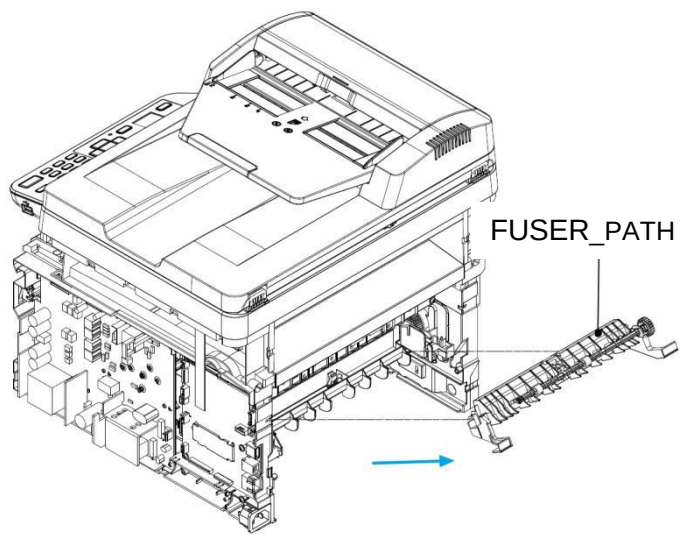

3-1-9. ADF_FB Scanner

1) Remove Front Cover, Main Paper Tray, Drum Unit, Left Cover, Assembling Housing Right, ASSY_REAR_PATH.

2) Fig. 1: Remove two T3X8 screws, Fig. 2 Disconnect two FFC cables and two cables, Fig. 3: Push 4 slots to detach the ADF_FB Scanner.

3) Remove the ADF_FB Scanner.

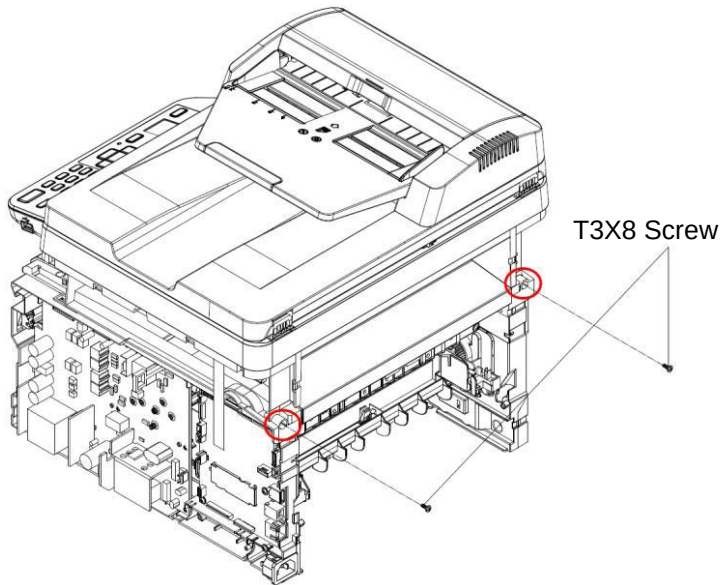


Fig. 1

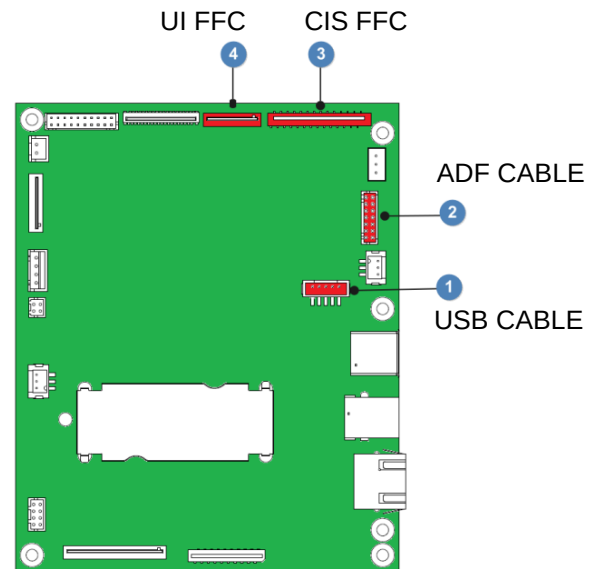


Fig. 2



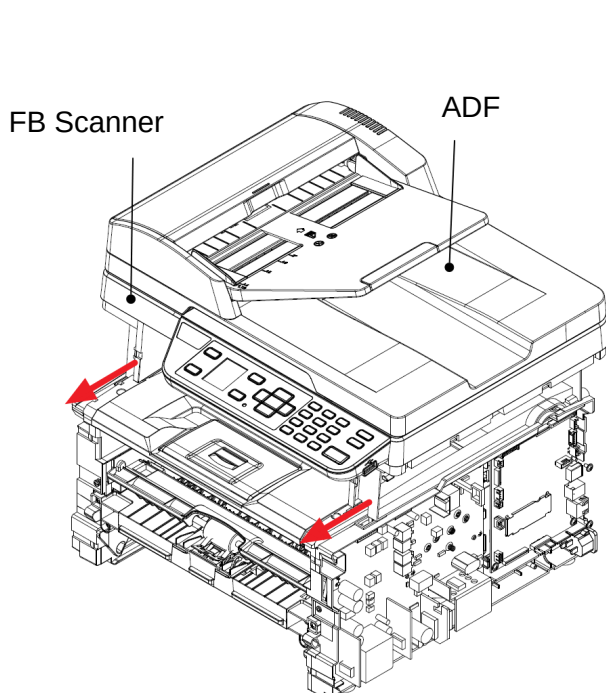


Fig. 3

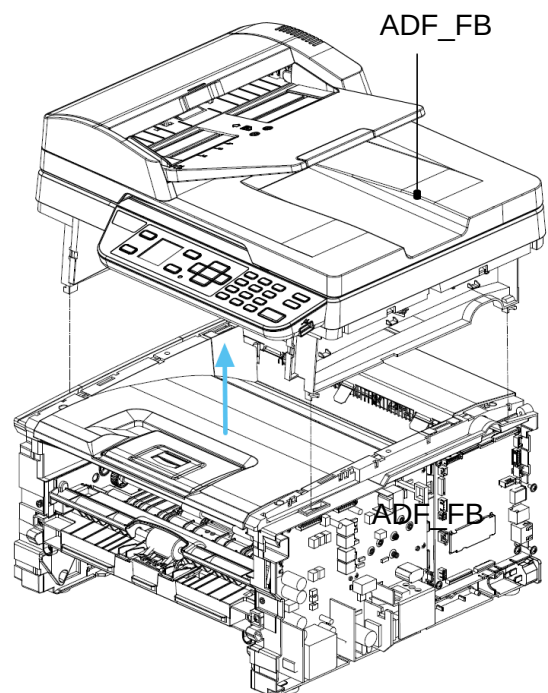


3-1-10. ASSY_ID_UPPEER

- 1) Remove Front Cover, Main Paper Tray, and Drum Unit, ADF_FB Scanner.
- 2) Remove 2 fixing screws (T3X8) to remove the ASSY_ID_UPPEER.

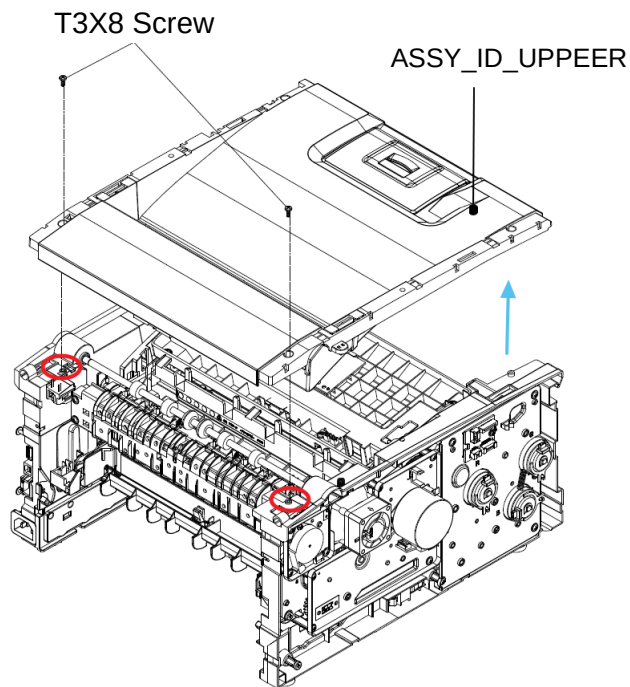



Reassembling Note: Before reassembling the Top Cover, please first insert the positioning post into the static conducting spring and then install the Top Cover.

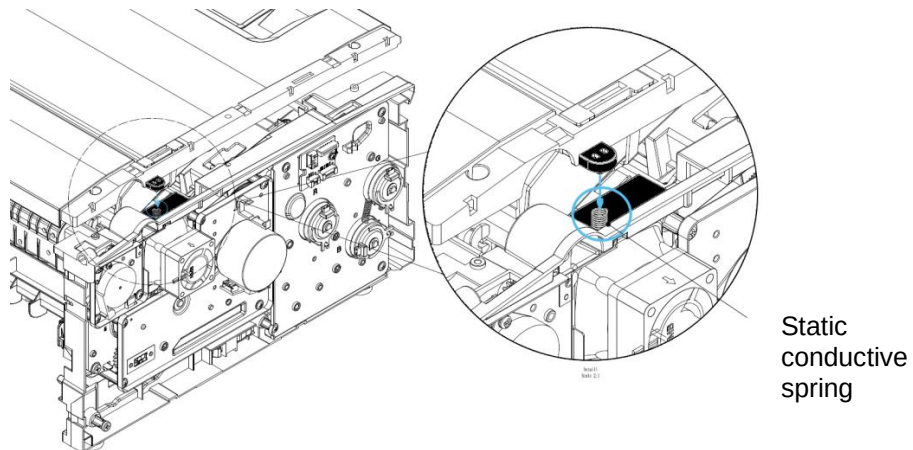

3-2. Advanced Disassembling



3-2-1. FUSER_UNIT

- 1) Remove Front Cover, Paper Tray, Drum Unit, Assembling Housing Right/Left Cover, Duplex Unit, Exit Path.
- 2) Remove the Rear Cover.
- 3) Use the spring hook (see below) to loosen the pressure spring. Remove T3X8 screws x 4 pcs to remove the fuser.

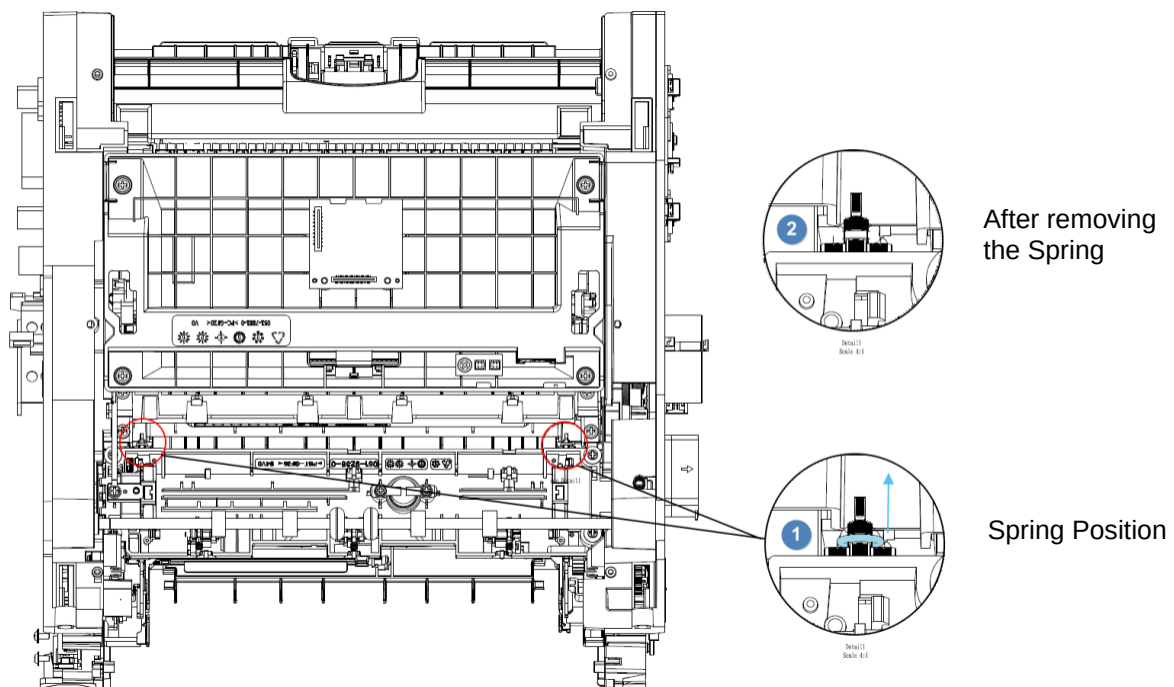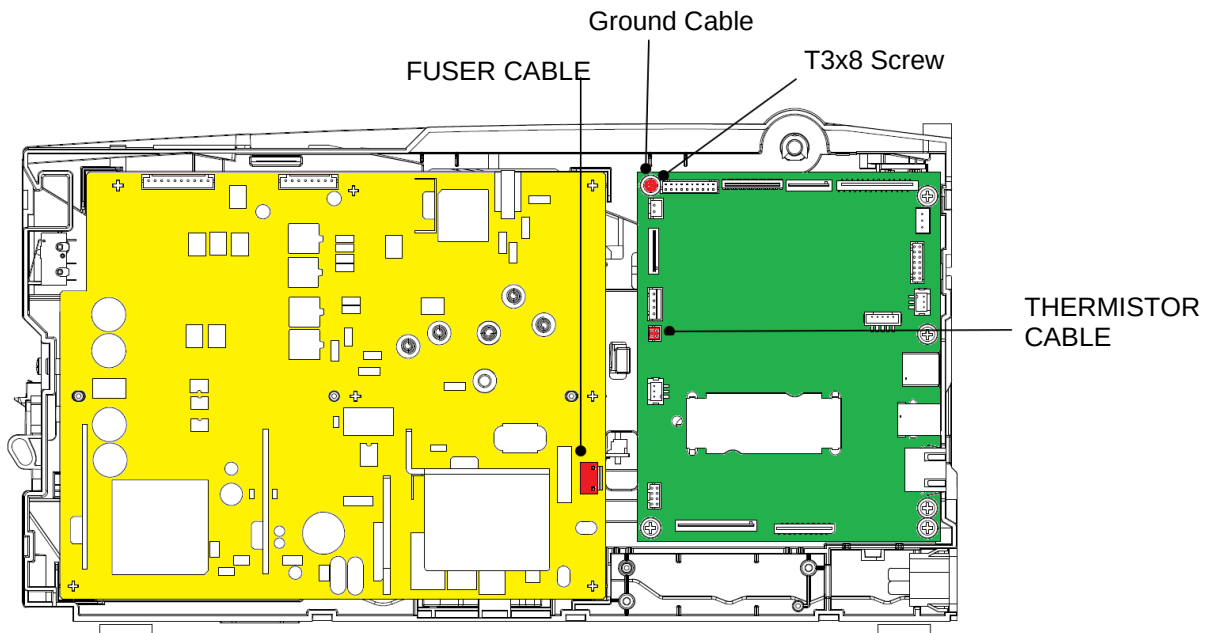


The spring hook used to release the pressure spring, see below:



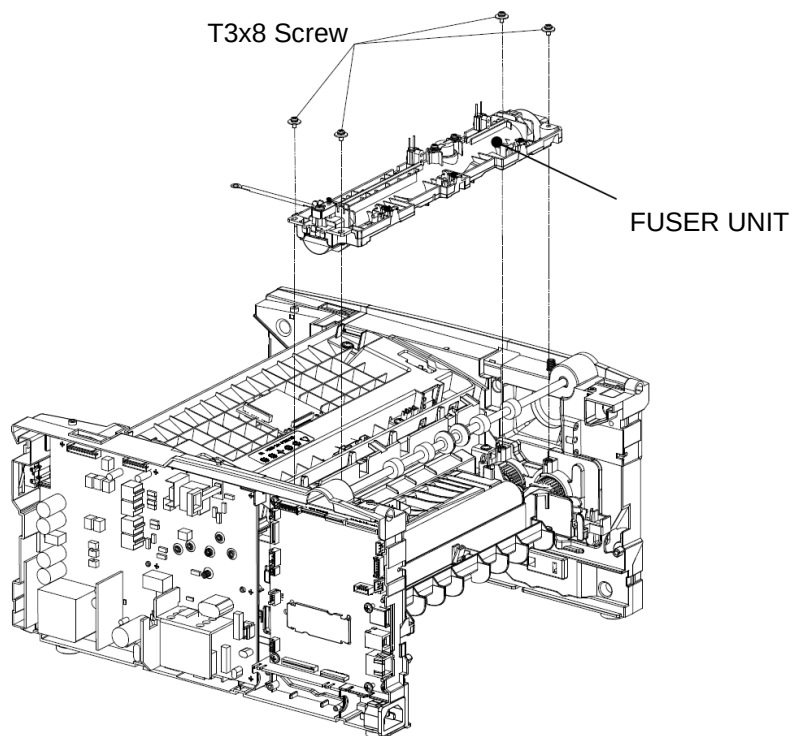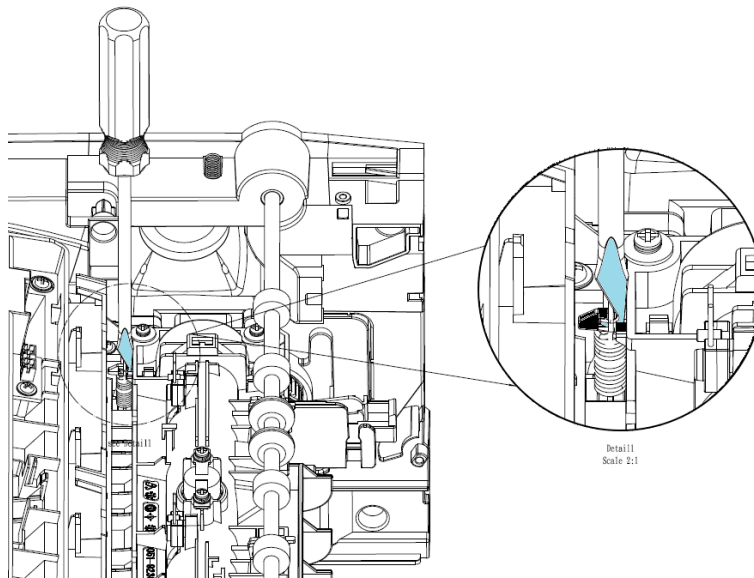

✧ **Tip:**

- Please first loosen the pressure spring before removing the fixing screws.
- The green arms as shown need to be pulled up while disassembling the pressure spring. Or the pressure spring will be deformed.



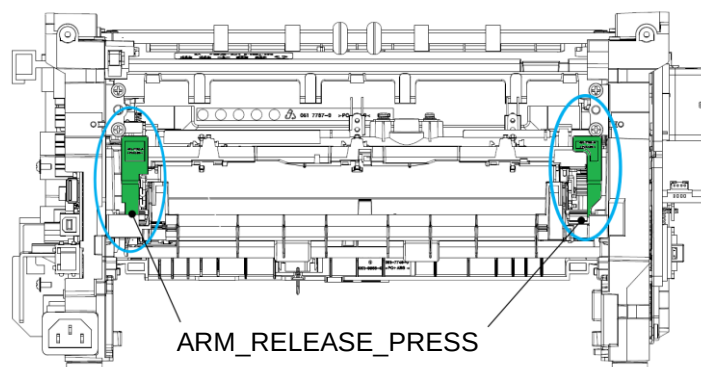


3-2-2. CONTROL_PANEL

- 1) Remove Front Cover, Paper Tray, Drum Unit, Assembling Housing Right.
- 2) Remove T3X6 fixing screws x 3, and also remove the FFC cable x 2 pcs.

Note:

- After unplugging the flat cable, be sure to check that the connectors of the flat cable are intact and that the flat cable is not short-circuited.
- When inserting the flat cable, be sure to insert it straight and make sure that it is not crooked.

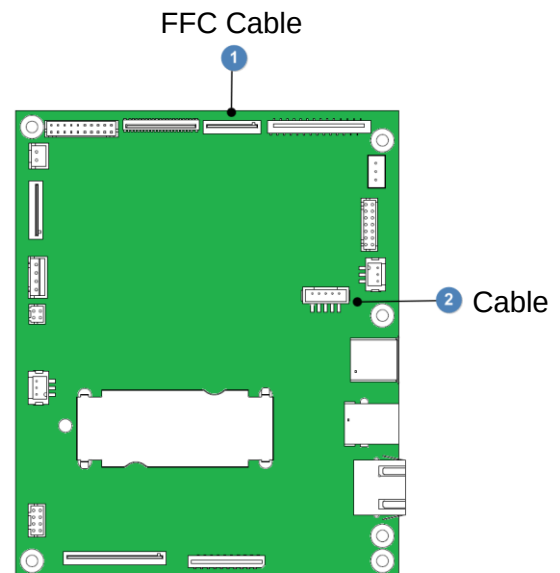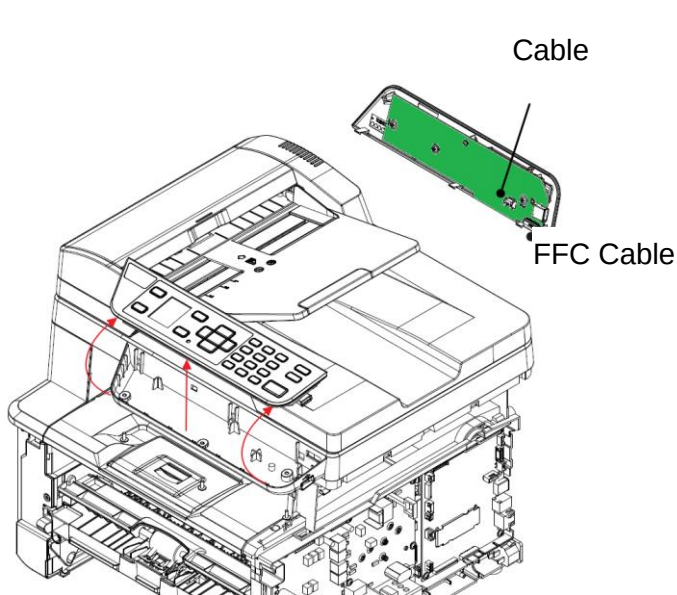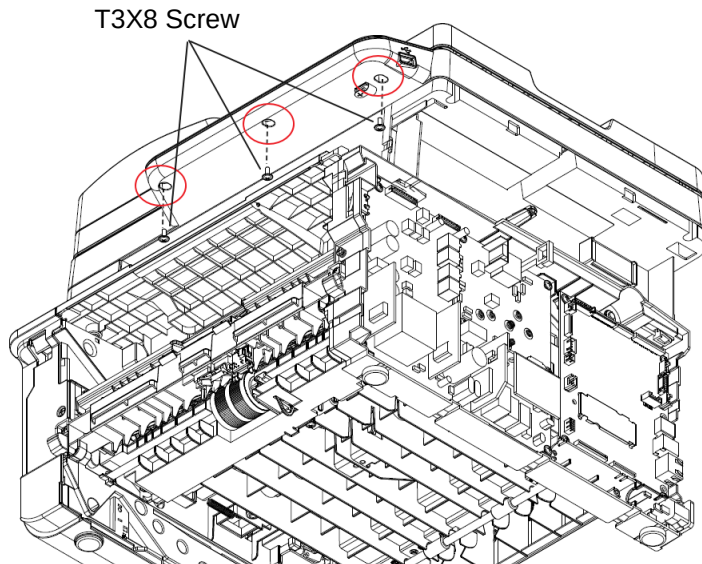


3-2-3. IFA98 Board

- 1) Remove the Front Cover, and Drum Unit.
- 2) Remove the Duplex Unit, and Paper Tray.
- 3) Turn the machine over to reveal the bottom.
- 4) Remove T3X8 fixing screws x 2 and remove all cables including the FFC cable.


Note:

- After unplugging the flat cable, be sure to check that the connectors of the flat cable are intact and that the flat cable is not short-circuited.
- When inserting the flat cable, be sure to insert it straight and make sure that it is not crooked.

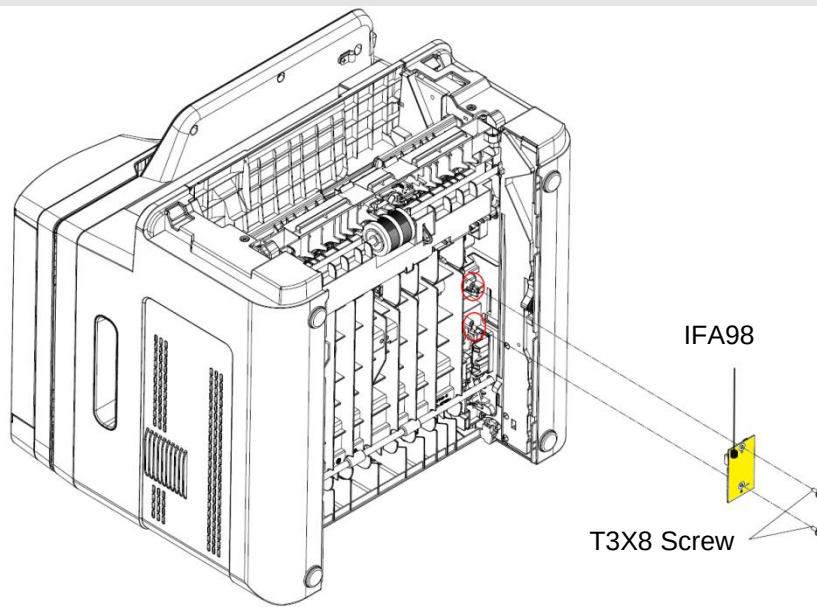

Note:

- After unplugging the flat cable, be sure to check that the connectors of the flat cable are intact and that the flat cable is not short-circuited.
- When inserting the flat cable, be sure to insert it straight and make sure that it is not crooked.

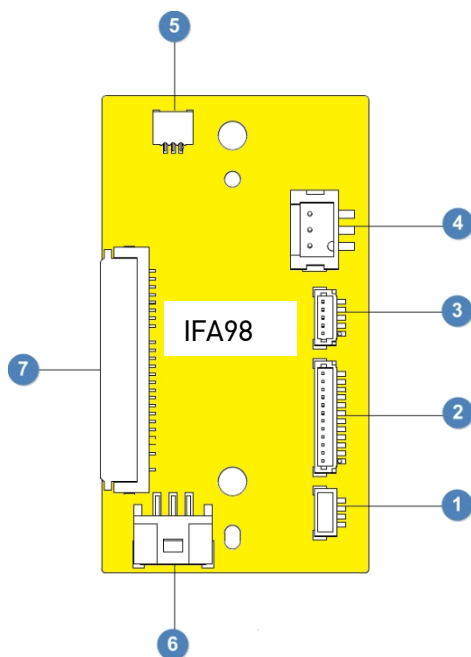


1	Main in Sensor
2	REG & Deskew (SENEP I ² C)
3	Duplex Sensor
4	Manual in Sensor
5	Empty Sensor
6	Fuser out Sensor
7	CONN to the Main Board

3-2-4. IFA99 Board

- 1) Remove the Front Cover, and Drum Unit, Paper Tray, Left Cover, and Duplex Unit.
- 2) Remove M3x5 screw x 1, and disconnect all cables including FFC cable to remove IFA99 board.

Note:



- After unplugging the flat cable, be sure to check that the connectors of the flat cable are intact and that the flat cable is not short-circuited.
- When inserting the flat cable, be sure to insert it straight and make sure that it is not crooked.

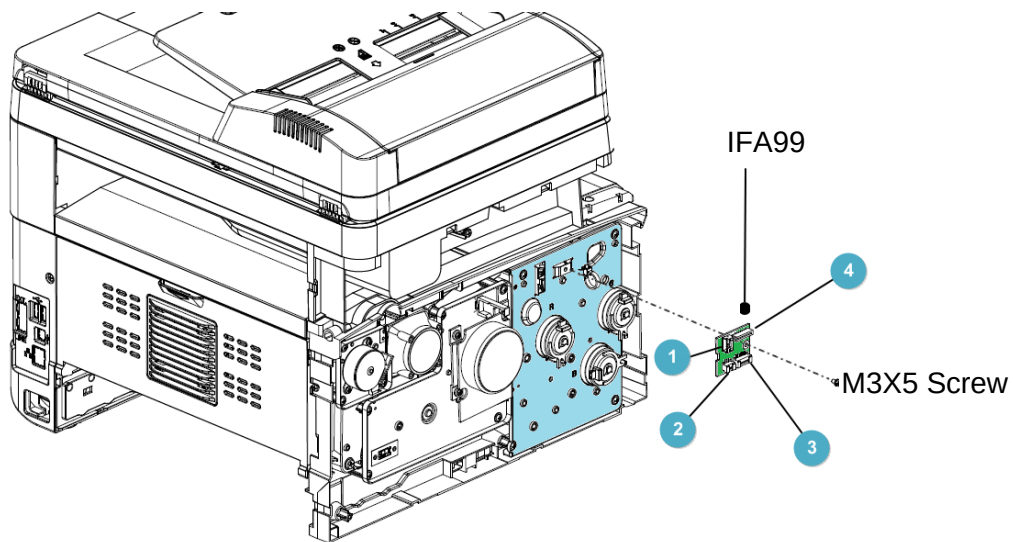

1	Exit motor
2	FAN
3	Clutch
4	FAN & Exit motor

3-2-5. MBA (Main Board)

- 1) Remove the Front Cover, and Drum Unit, Paper Tray, Assembling Housing Right.
- 2) Remove all cables including the FFC cables.
- 4) Remove T3X8 screws x 2 and T3X10 x 2 to remove the main board.

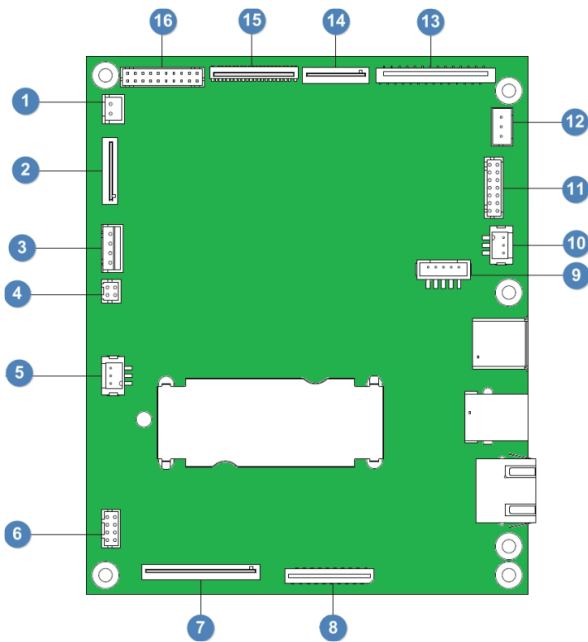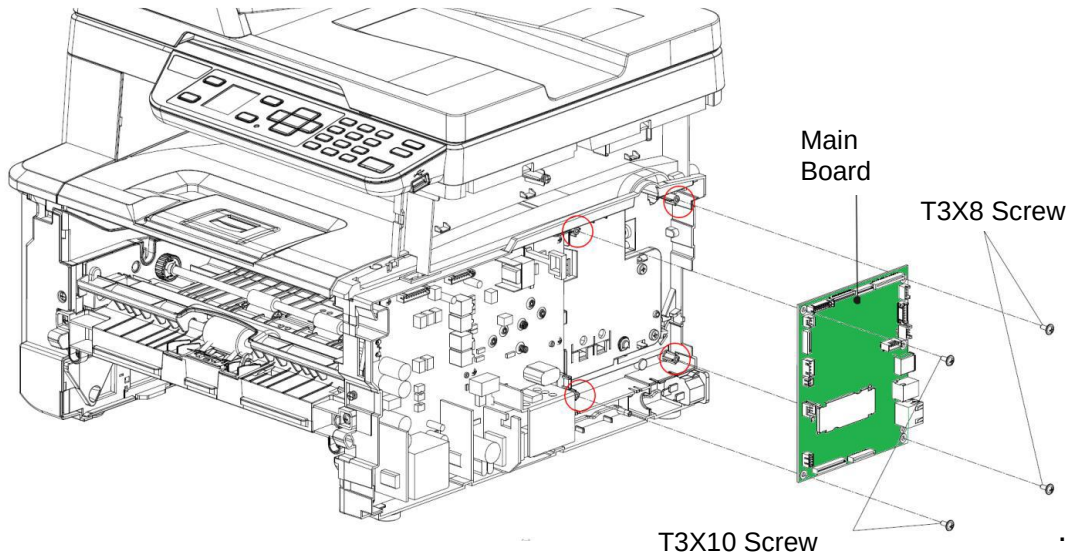


1	Micro Switch (2P)
2	IFA9
3	Main Motor(4P)
4	Thermistor(4P)
5	Fan(3P)
6.	Page Separation
7	IFA98
8	FAX
9	UI Host
10	Rear door open Sensor(3P)
11	ADF CONN
12	Exit Sensor(3P)
13	Scanner
14	UI
15	LSU
16	HV&LV Power supply (20P)

3-2-6. High Voltage Board (HV)


- 1) Remove Front Cover, Paper Tray, Drum Unit, and the Assembling Housing Right.
- 2) Remove all cables (3pcs) connecting to the high voltage board.
- 3) Remove T3X8 screws x 6 pcs, and T3X10 ground screw x 1 to remove the high voltage board.

Note:

- After the high-voltage board is removed, some components will still be conductive. Please wear latex gloves to work. Do not touch the welding surface of the high-voltage board without gloves.
- After the high-voltage board is disassembled, it should be placed on an insulating surface to avoid damage to the high-voltage board due to power jump.

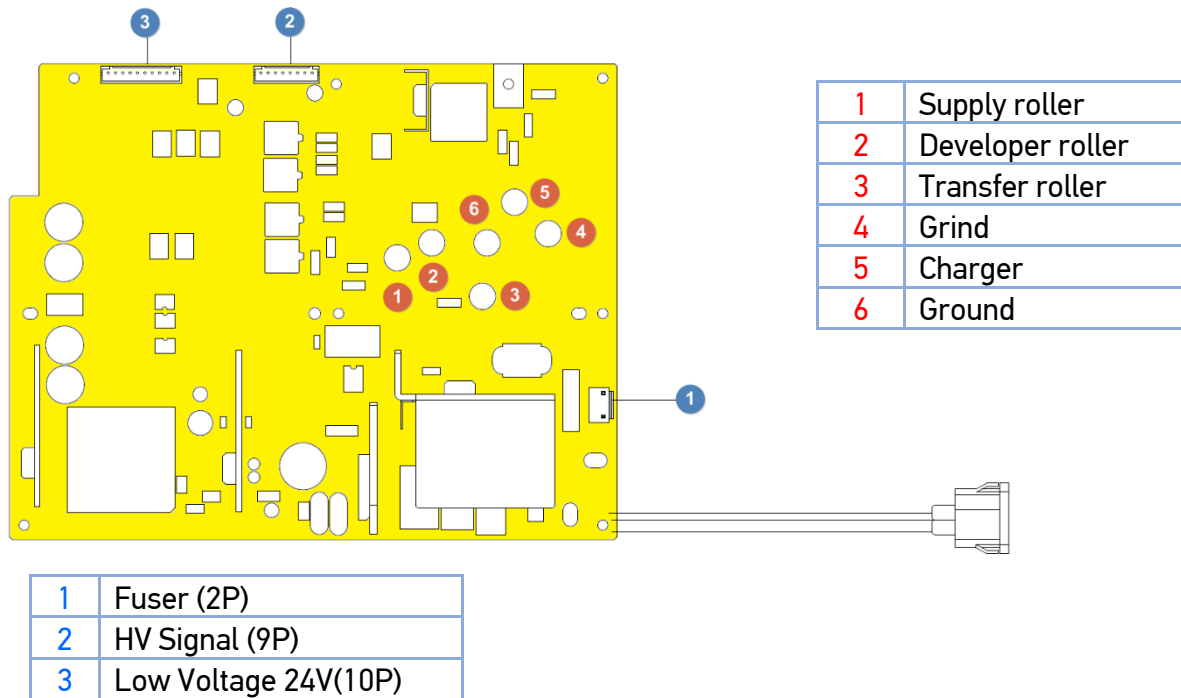


Assembly Note: 1~6 high-voltage contact points must be connected during assembly inspection, and use a three-meter to switch to the ohm gear to confirm that they are connected.

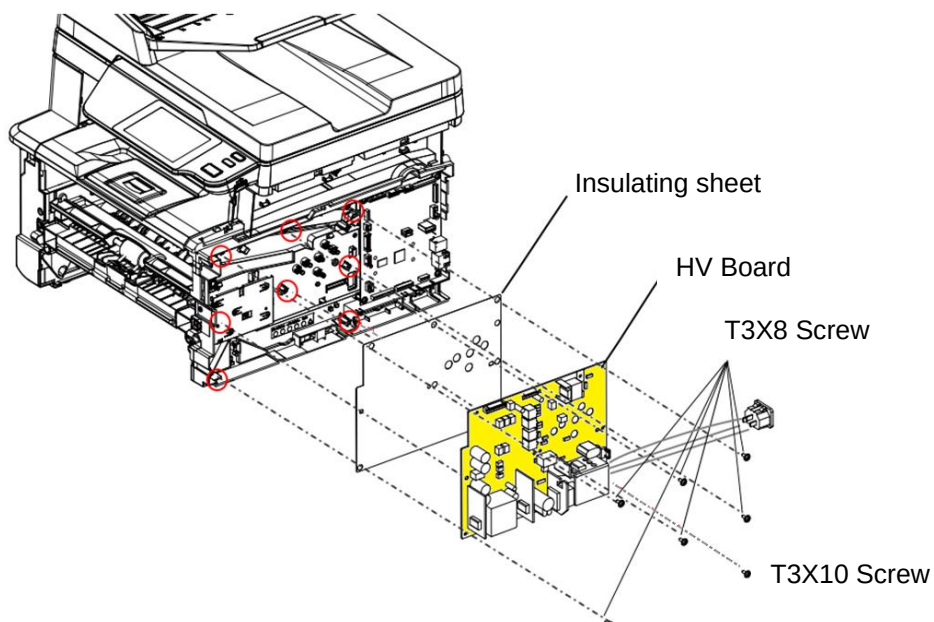


3-2-7. Exit Path

- 1) Remove Front Cover, Paper Tray, Drum Unit, Assembling Housing Right /Left Cover, Top Cover, Duplex Unit, and Fuser.
- 2) Remove the cable connecting to the main board.
- 3) Remove T3x8 screws for 4 pcs to remove the Exit Path.

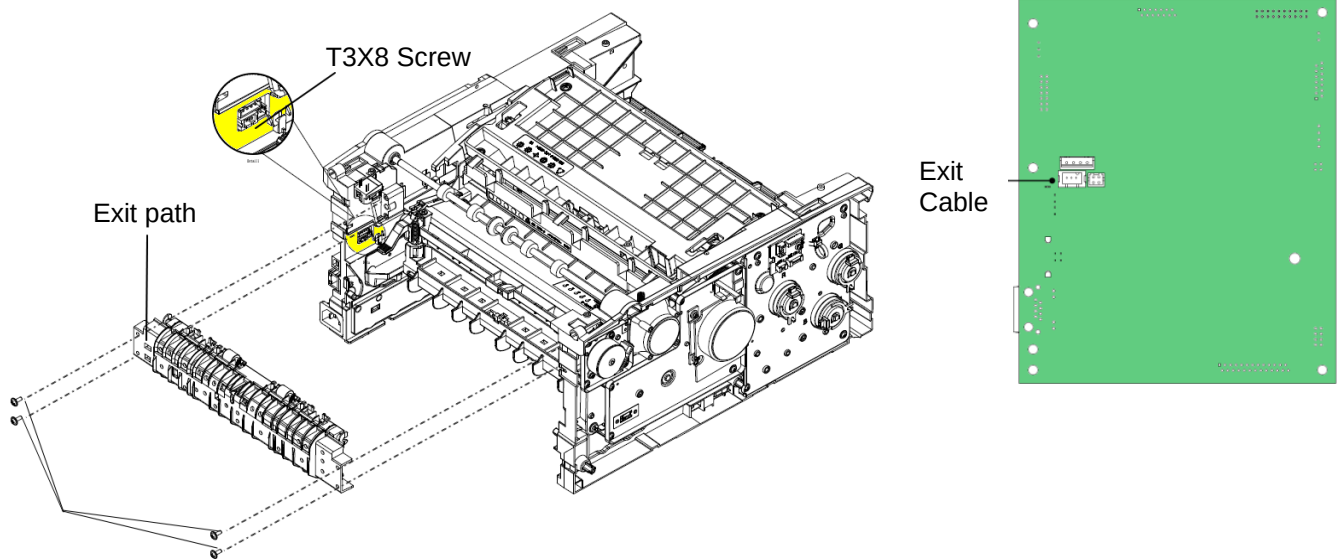


3-2-8. Registration Sensor

- 1) Remove the Front Cover and the Drum Unit.
- 2) Remove the Duplex Unit and the Paper Tray.
- 3) Turn the printer over to reveal the bottom.
- 4) Remove T3x8 screw x 1 pcs and disconnect all cables to remove the sensor.

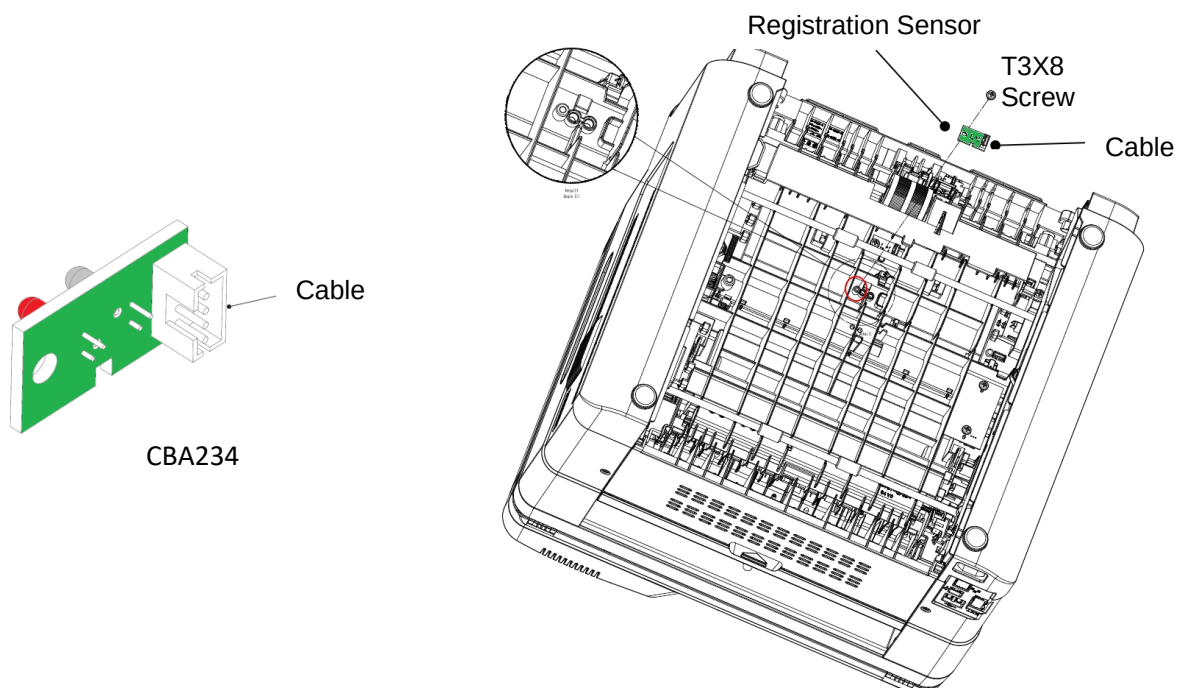


3-2-9. Deskew Sensor

- 1) Remove Front Cover and Drum Unit.
- 2) Remove Duplex Unit, and Paper Tray.
- 3) Turn the printer over to reveal the bottom.
- 4) Remove T3X8 x 1 pc and disconnect all cables to remove the sensor.

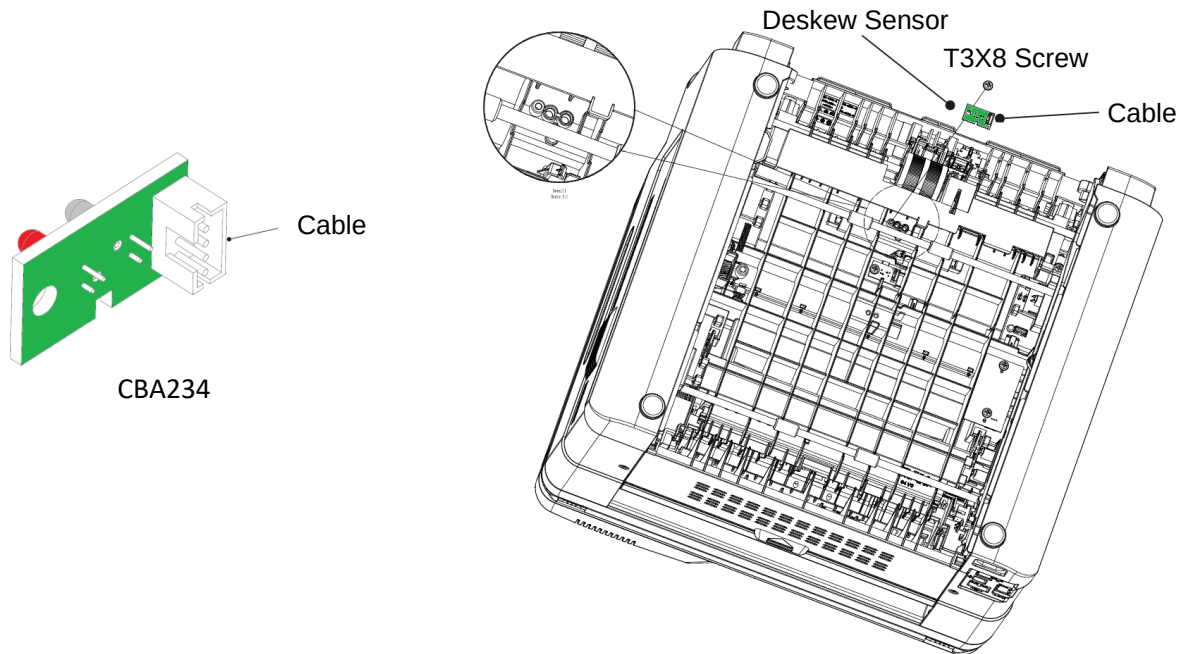


3-2-10. Paper-in Sensor

- 1) Remove Front Cover and Drum Unit.
- 2) Remove Duplex Unit, and Paper Tray.
- 3) Turn the printer over to reveal the bottom.
- 4) Remove T3X8 x 1 pc and disconnect all cables to remove the sensor.

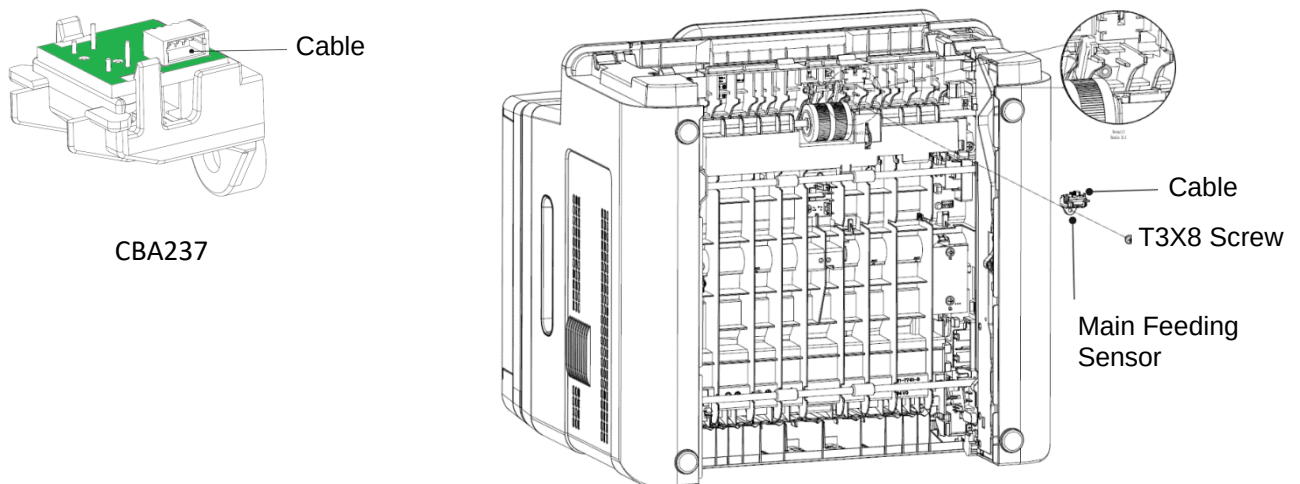

3-2-11. Manual Paper-In Sensor

- 1) Remove Front Cover and Drum Unit.
- 2) Remove Duplex Unit, Paper Tray, Main Feeding Sensor, IFA98 Board.
- 3) Turn the printer over to reveal the bottom.
- 4) Remove T3X8 x 2 pc of the IFA98 board, disconnect the cable. Remove the main feeding sensor, and then remove the manual tray feeding sensor.

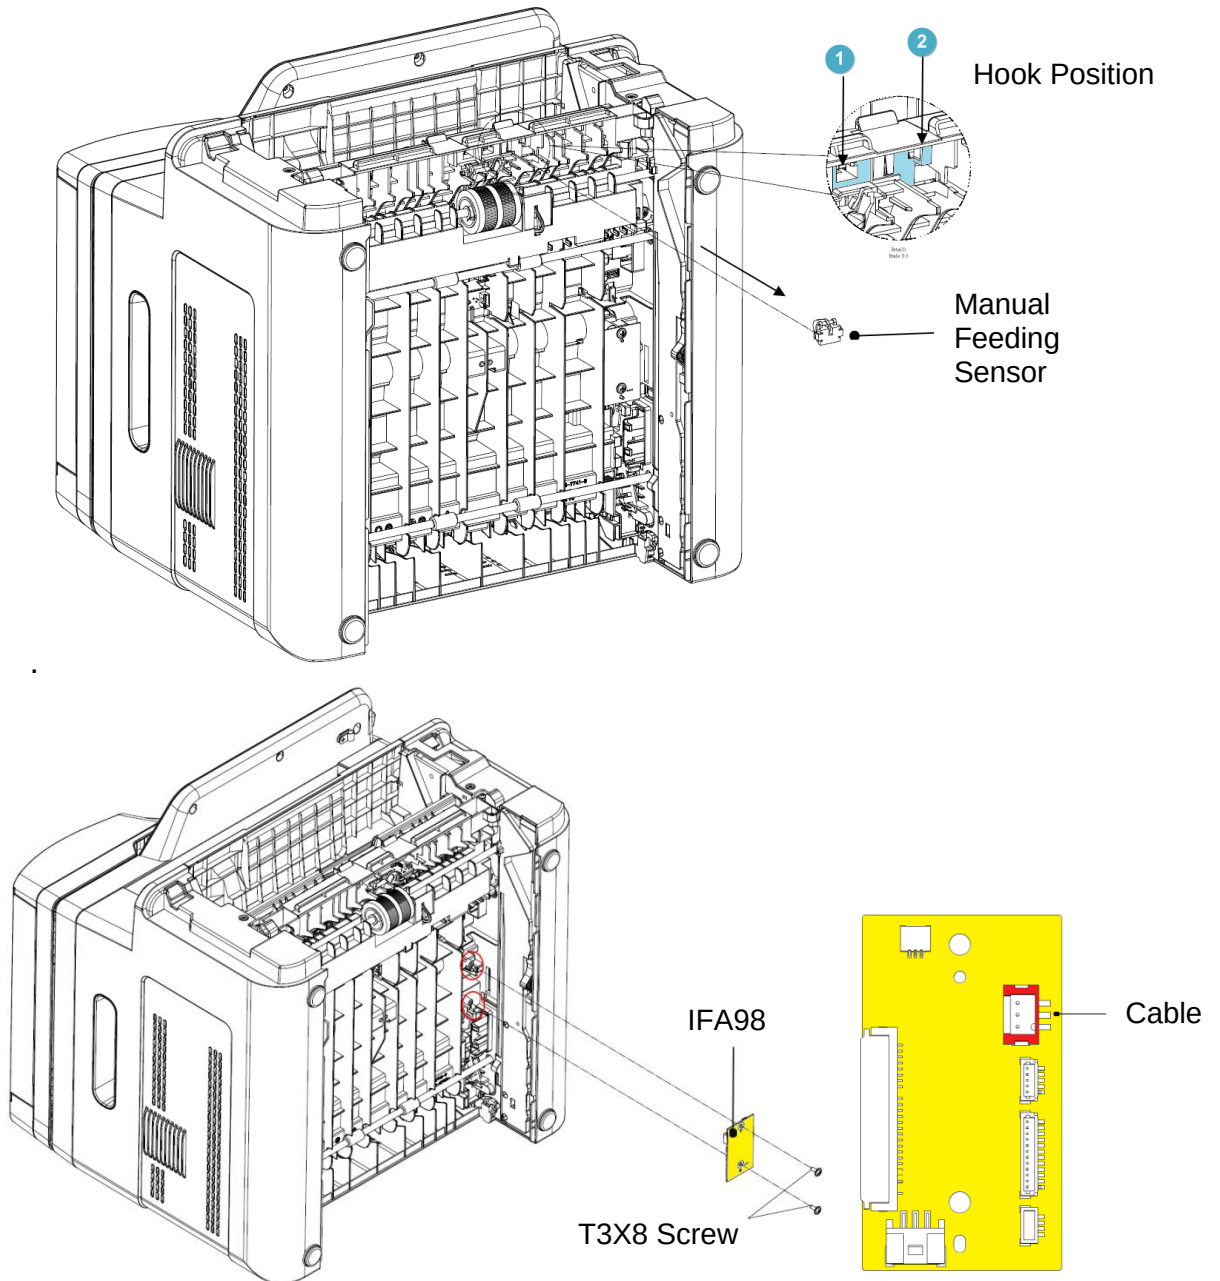


3-2-12. Duplex Sensor


- 1) Remove Front Cover, Paper Tray, Drum Unit, Right/Left Cover, Top Cover, and Duplex Unit.
- 2) Disconnect the FFC cable and then remove M3X8 screws for 4 pcs to remove the LSU Support.
- 3) Remove the Transferred Roller.
- 4) Remove T3X8 fixing screw x 1 to remove the sensor.

Note:


- After unplugging the flat cable, be sure to check that the connectors of the flat cable are intact and that the flat cable is not short-circuited.
- When inserting the flat cable, be sure to insert it straight and make sure that it is not crooked.

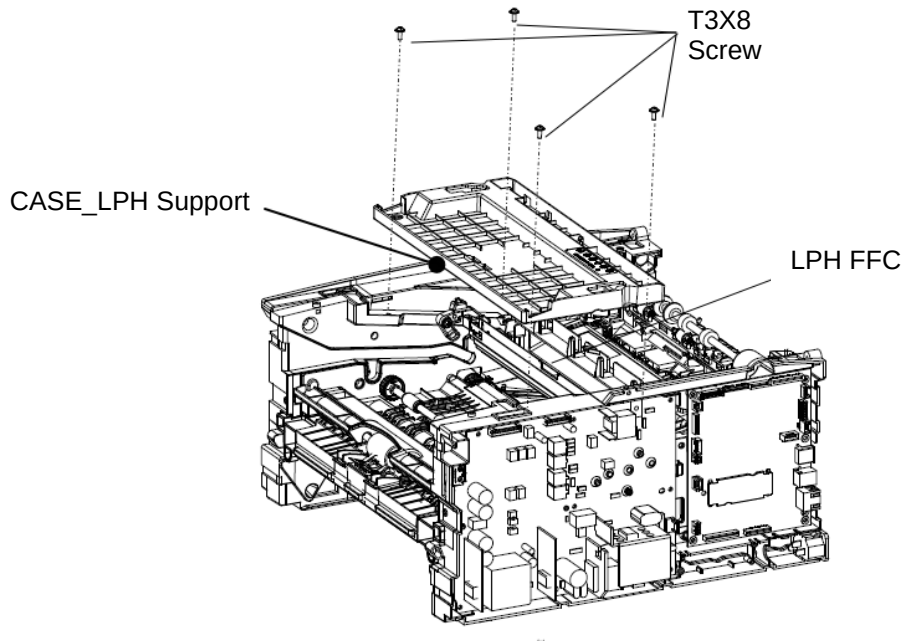

Model with LPH

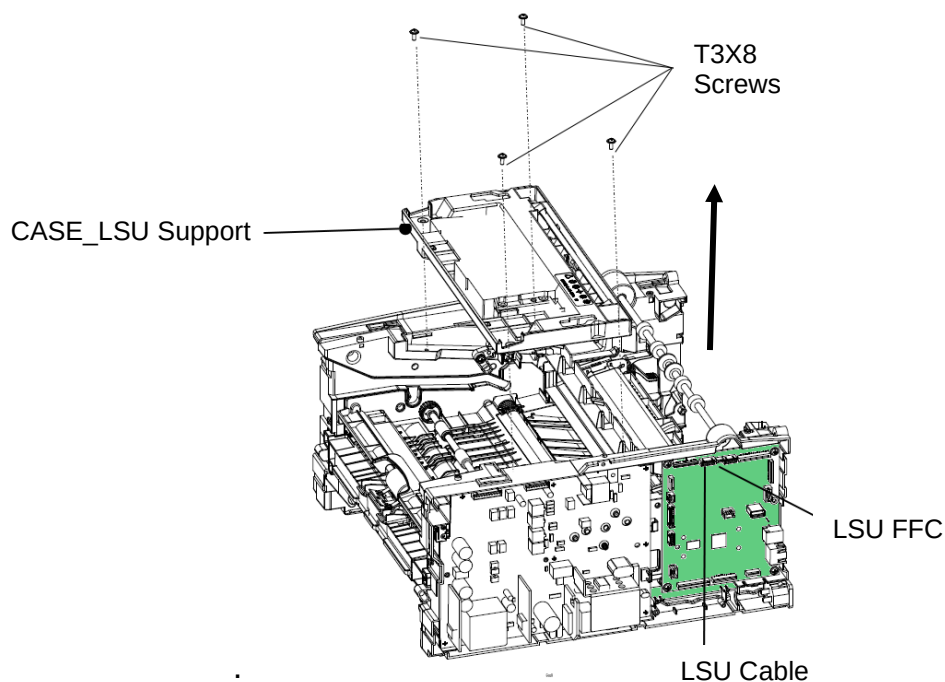

Model with LSU

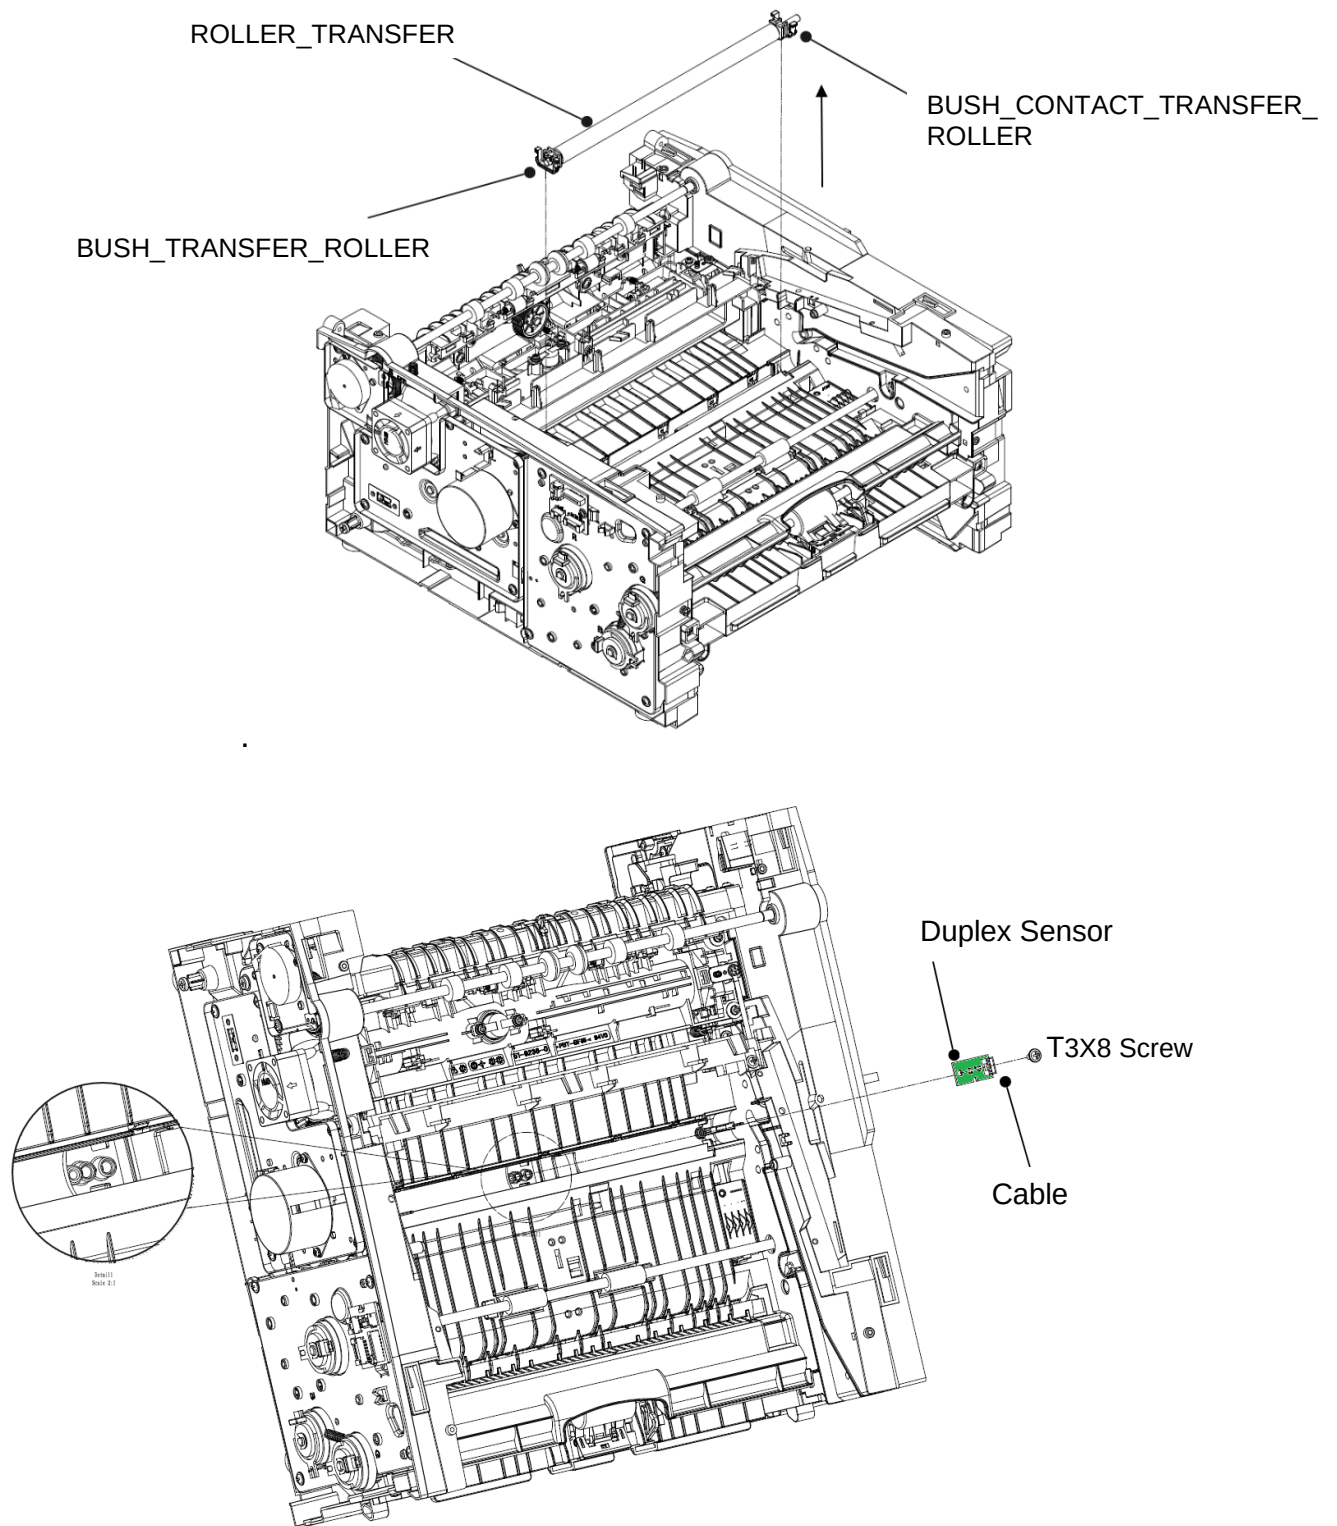


3-2-13. Paper Empty Sensor

- 1) Remove Front Cover, Paper Tray, Drum Unit, and Duplex Unit.
- 2) Turn the printer over and hold the Paper-Empty sensor to loosen the hook and remove the sensor with a flat screw driver.


Note:

- When reassemble the Paper-Empty Sensor, make sure the cables are properly inserted to the cable slot.

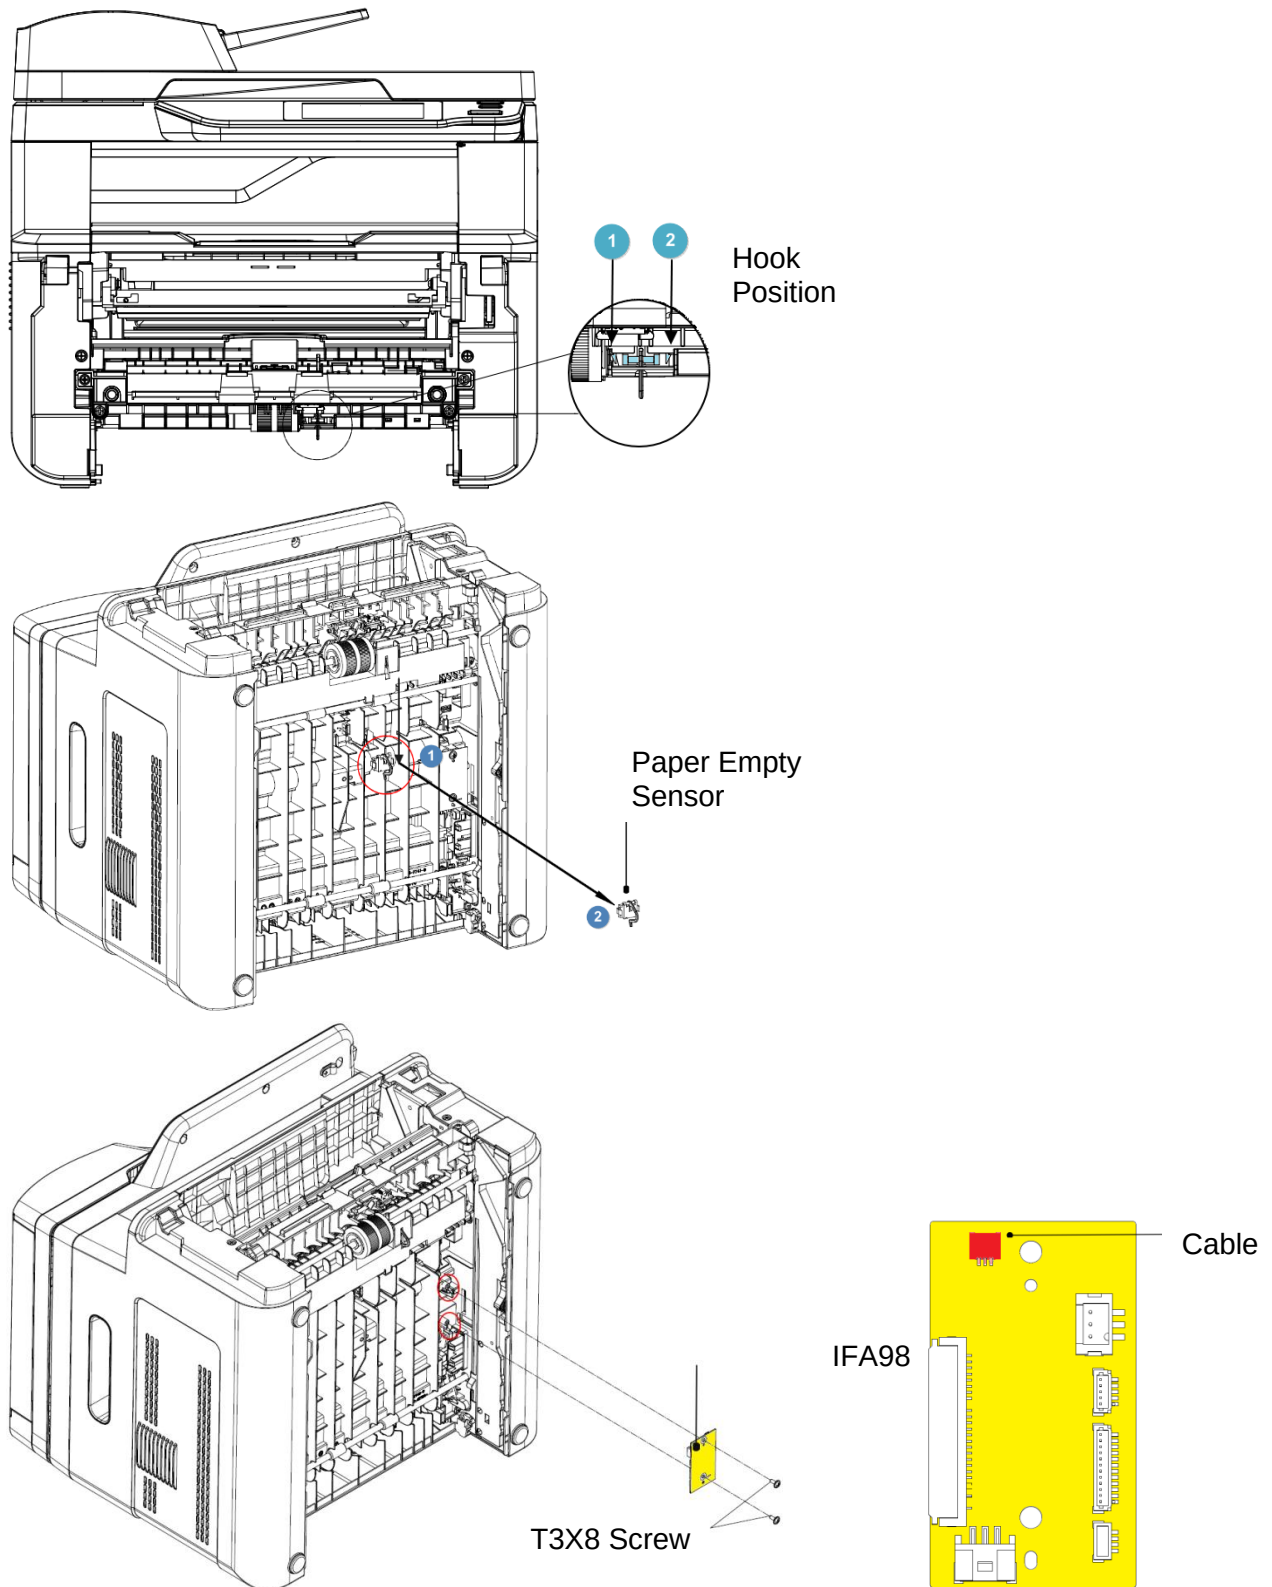


3-2-14. Main Motor

- 1) Remove Front Cover, Paper Tray, Drum Unit, and Left Cover.
- 2) Remove M3X8 screw for 4 pcs and remove the clamp motor. Disconnect the motor cable and ground cable to remove the motor.

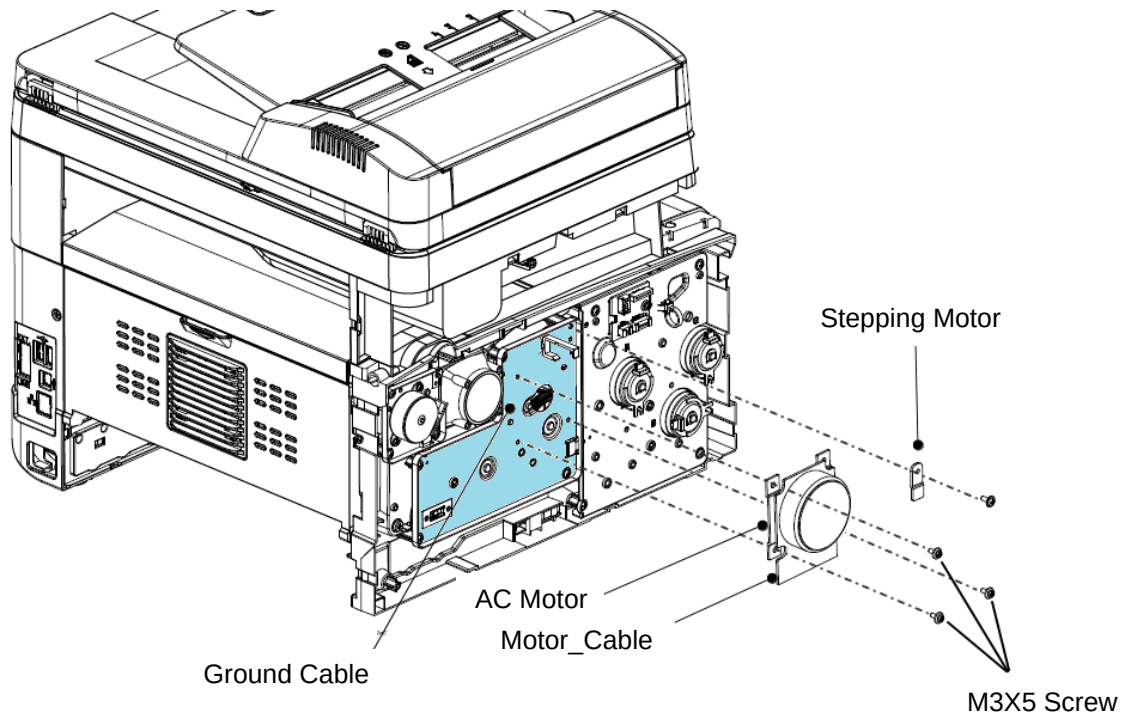


3-2-15. Exit Motor

- 1) Remove Front Cover, Paper Tray, Drum Unit, and Left Cover.
- 2) Remove M3X5 screw for 2 pcs and disconnect the motor cable to remove the motor.

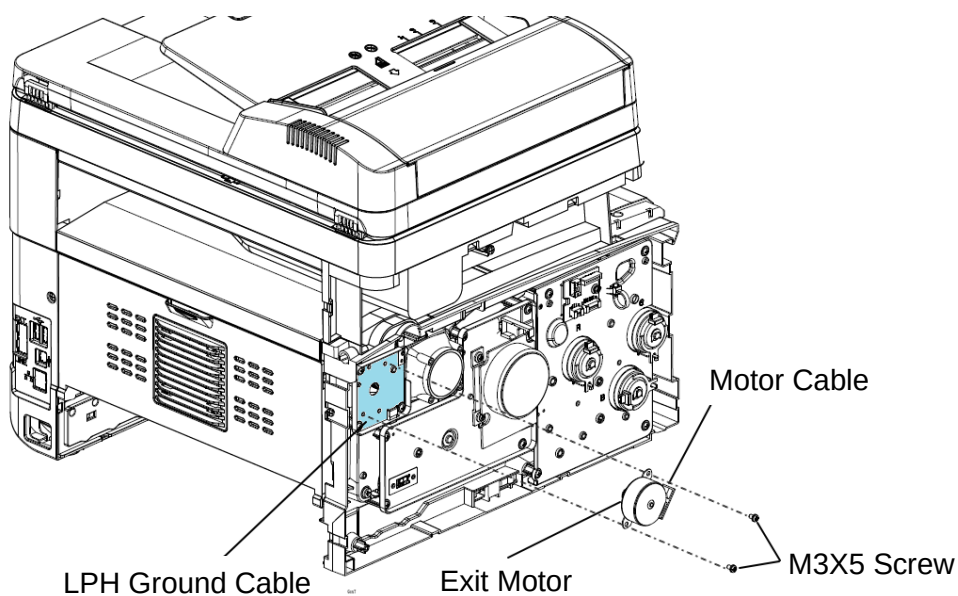


3-2-16. Main Fan

- 1) Remove Front Cover, Paper Tray, Drum Unit, and Left Cover.
- 2) Remove TS3X15 screw for 4 pcs and disconnect the fan cable to remove the fan.

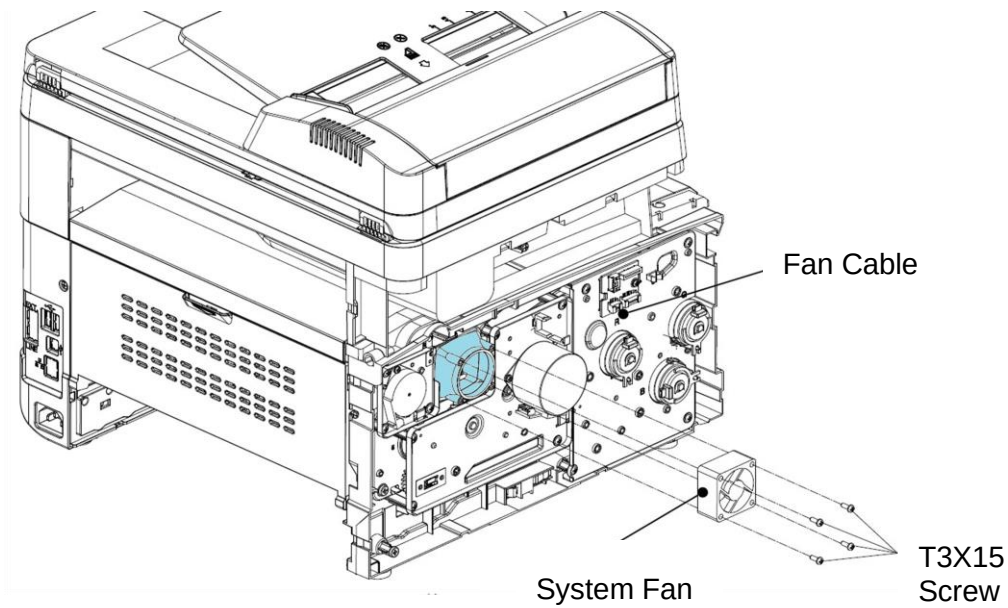


3-2-17. Pick up Clutch

- 1) Remove Front Cover, Paper Tray, Drum Unit, and Left Cover.
- 2) Disconnect Pickup Clutch and remove the C-Type Ring to remove the Pickup Clutch.

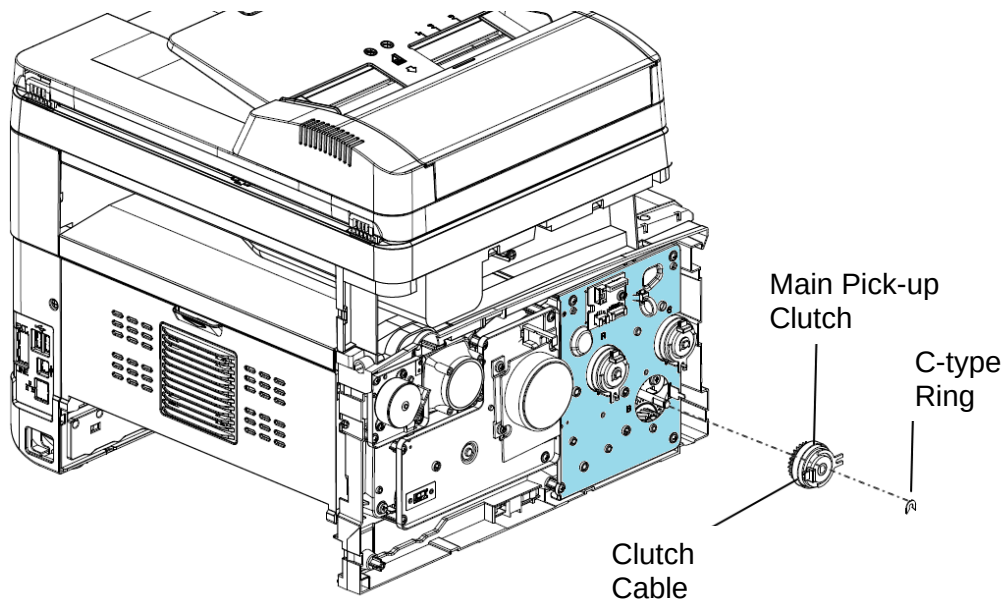


3-2-18. Manual Pick-up Clutch

- 1) Remove Front Cover, Paper Tray, Drum Unit, and Left Cover.
- 2) Disconnect Pickup Clutch and remove the C-Type Ring to remove the Pickup Clutch.

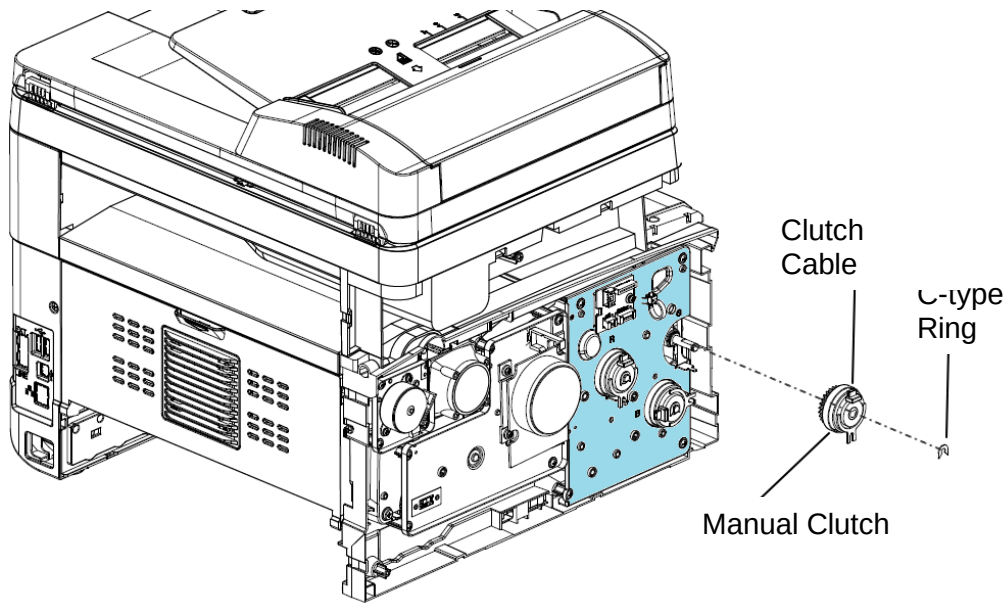


3-2-19. Deskew Pick-up Clutch

- 1) Remove Front Cover, Paper Tray, Drum Unit, and Left Cover.
- 2) Disconnect Pickup Clutch and remove the C-Type Ring to remove the Pickup Clutch.


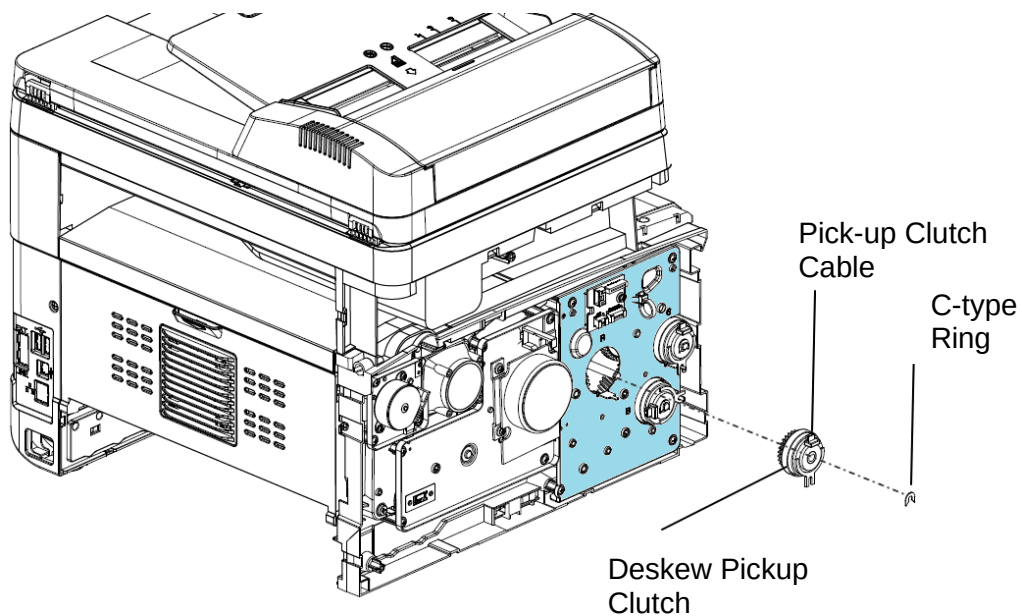


3-2-20. ASSY_PAD

- 1) Pull the Paper Tray out of the printer.
- 2) Replace the pad.

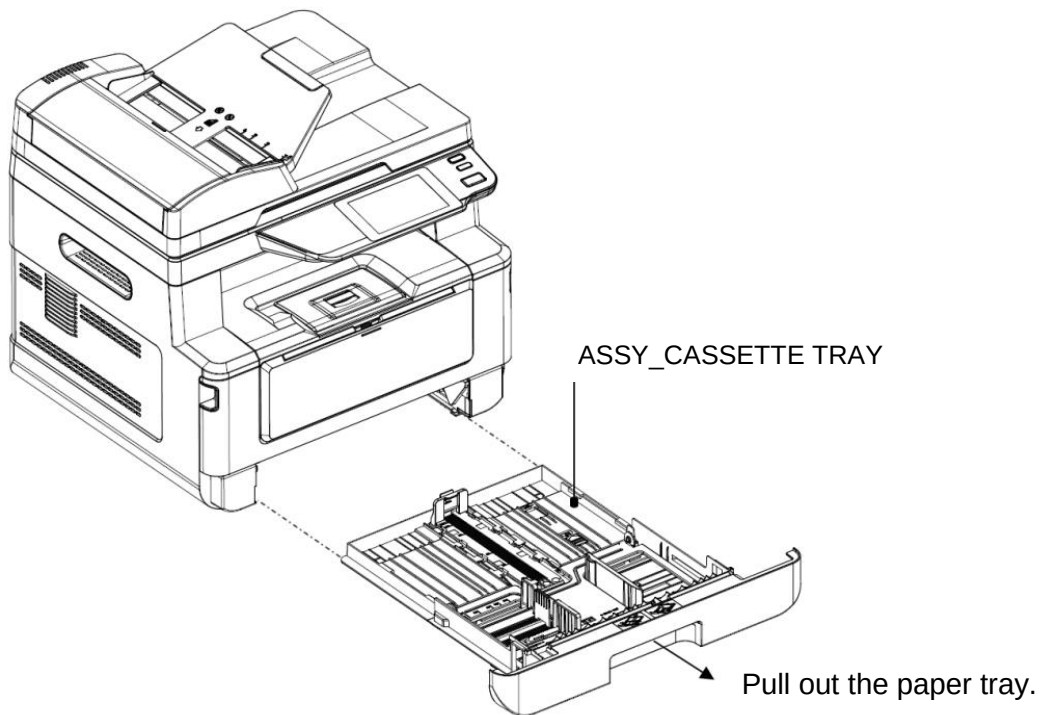

- 3) Before removing ASSY_PAD, please first press the PLATE_LIFTUP_CASSETT and then remove the pad.

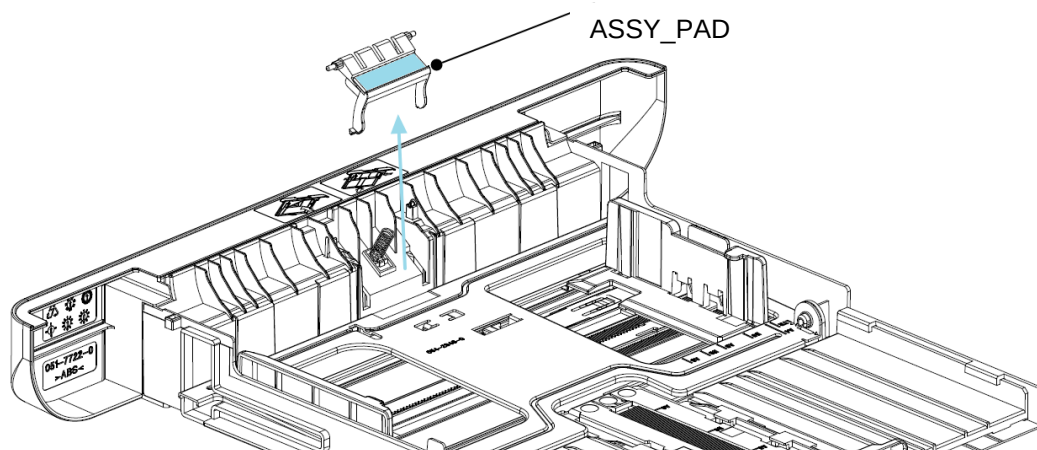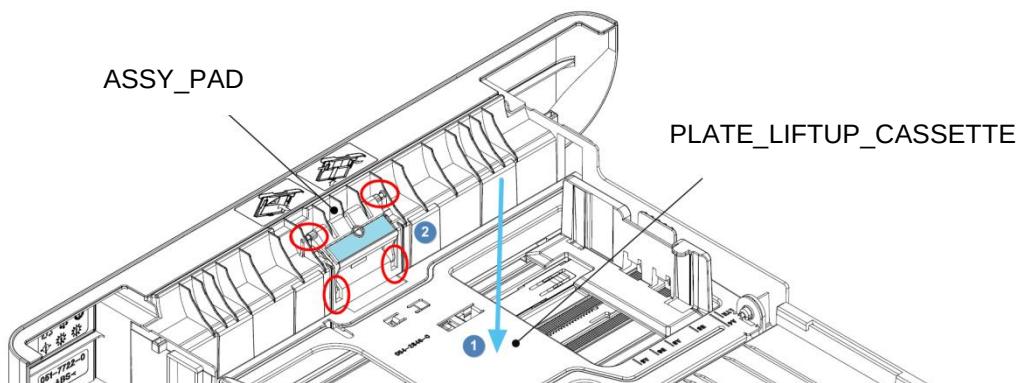


3-2-21. LSU (Laser Scanning Unit)


- 1) Remove Front Cover, Paper Tray, Drum Unit, Assembling Housing Right/Left Cover, and Top Cover.
- 2) Disconnect all cables and the FFC cable x 2 pcs and remove M3X8 screws for 4 pcs to remove the LSU Support.
- 3) Remove T3X8 screws x 3 pcs and then remove the LSU.

Note:

- After unplugging the flat cable, be sure to check that the connectors of the flat cable are intact and that the flat cable is not short-circuited.
- When inserting the flat cable, be sure to insert it straight and make sure that it is not crooked.
- When disassembling the LSU, be sure to wear latex gloves and do not touch the metal surface of the LSU flat cable and the PCBA circuit board.

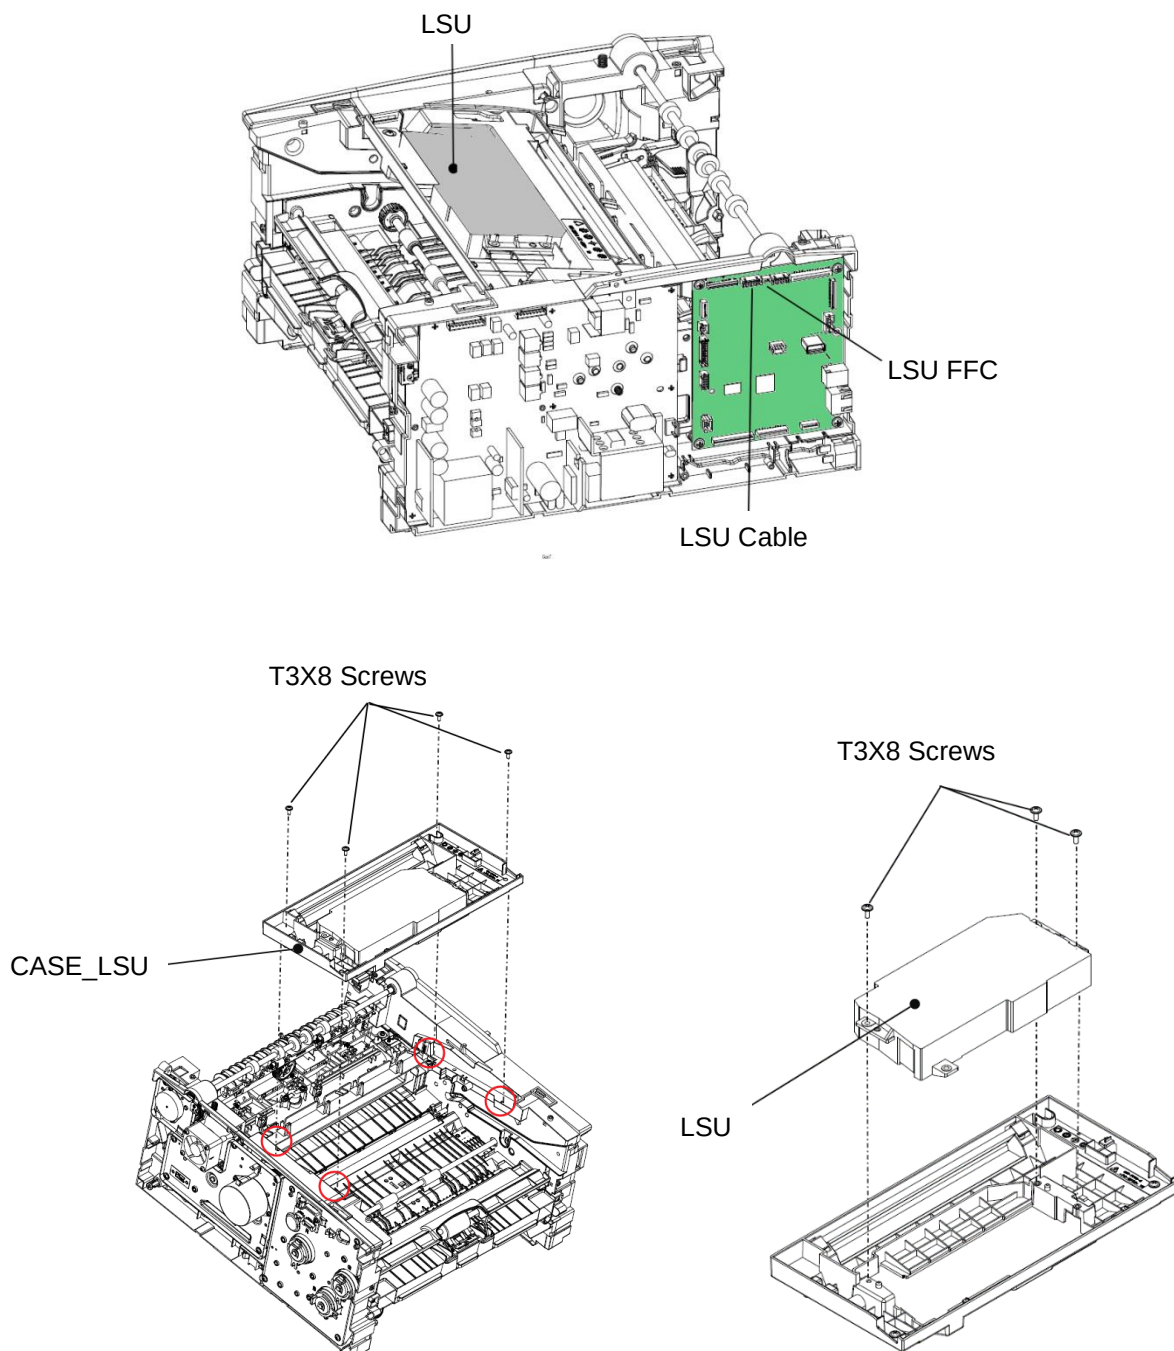

3-2-22. Check LAN Connection

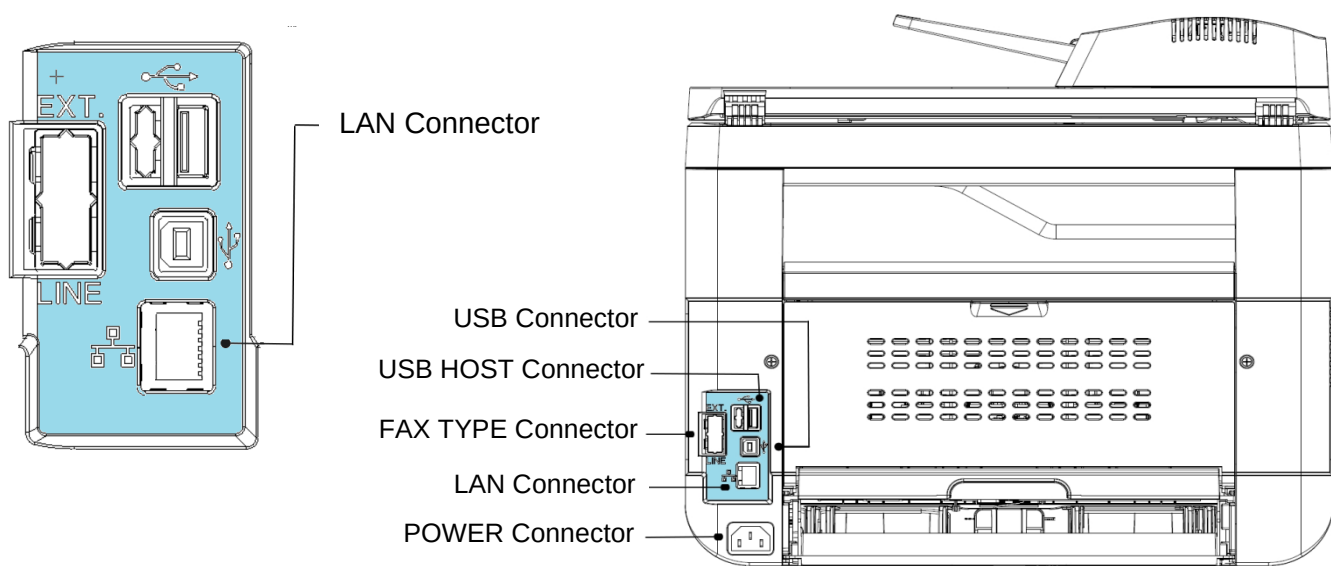

Chapter 5 Adjustment and Reset Settings after Replacement

1. Replacement of Main Board

1-1. Adjustment after Replacement

- Reset of Firmware version
- Reset of leaning value of main board
- Reset of country/region
- Reentering of serial number and reset fuser count
- Reset of factory default settings

1-2. Preparation

- (1) USB Cable
- (2) Computer (Windows®7 or higher)
- (3) Adjustment programs (Flowtest.zip, AM3XX.zip)
- (4) Printer driver (Driver.zip)

2. Replacement of High Voltage Board

2-1. Adjustment after Replacement:

- TR adjustment
- CHG and GRD adjustment
- DEV,SUP,BLD adjustment
- DEVR adjustment
- TRR adjustment

2-2.Preparation

- (1) TBA314:004-2406-9 (HVPS TEST FIXTURE).
- (2) Multi-meter: FLUKE 15B (Voltage/Current: 1.DCV/ACV, 1000V 2.DCA/ACA,10A/400uA.
- (3) High Voltage Probe: FLUKE 80K-15 (Current:0~15 kV DC or AC peak.10kV rms AC Resistance:1000Megohm.
- (4) ADAPTER: 005-3043-19 (DESK-TOP,IEC 320-C6,3P,100~240Vac,24Vdc,2A.